

**ORGANIZATIONAL MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LISTS
CENTRAL OFFICE, TELEPHONE MANUAL
AN/TTC-7 (FSN 5805-503-1210) AND
AN/TTC-7A (FSN 5805-820-9549)**

Headquarters, Department of the Army, Washington, D.C.
5 October 1973

Current as of March 1973

		Paragraph	Page
SECTION I.	INTRODUCTION		
Scope.....		1-1	2
General		1-2	2
Explanation of columns		1-3	2
Special information.....		1-4	4
Location of repair parts.....		1-5	4
Abbreviations (Not applicable)		1-6	4
Reporting of equipment publication improvements		1-7	5
II.	PRESCRIBED LOAD ALLOWANCE (Not applicable)		
III.	REPAIR PARTS LIST		
Main Distributing Frame, Telephone TA-257/TTC.....		6	
Switchboard, Telephone Manual SB-249/TTC; SB-249A/TTC.....		6	
Telephone Circuit, Line Relay TA-223/TTC; TA-223A/TTC.....		7	
Telephone Circuit, Trunk Relay TA-226/TTC; TA-226A/TTC.....		7	
Switchboard, Telephone Manual SB-1398/GTA-14(V)		7	
Panels, Power Distribution SB-1399/GTA-14(V) and SB-1032/TTC		8	
Telephone Circuit Line Relay TA-452/GTA-14(V)		9	
Telephone Circuit Trunk Relay TA-453/GTA-14(V)		9	
Main Distributing Frame Telephone TA-454/GTA-14(V).....		9	
IV.	SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT (Not applicable)		
V.	INDEX-FEDERAL STOCK NUMBER AND REFERENCE NUMBER CROSS- REFERENCE TO FIGURE AND ITEM NUMBER.....		10

*This manual supersedes TM 11-5805-234-20P, 30 July 1963

SECTION I

INTRODUCTION

1-1. Scope

This manual lists repair parts and special tools required for the performance of organizational maintenance of the AN/TTC-7 and AN/TTC-7A. The PCCN for the equipment is GCWAAP for all models.

1-2. General

This repair parts and special tools list is divided into the following sections:

- a. *Prescribed Allowance (PLA) - Section II.* Not applicable.
- b. *Repair Parts List - Section III.* A list of repair parts authorized for the performance of maintenance at the organizational level. This repair parts list is arranged in alphabetical order.
- c. *Special Tools, Test and Support Equipment - Section IV.* Not applicable.
- d. *INDEX - Federal Stock Number and Reference Number Cross-Reference to Figure and Item Number - Section V.* A list, in ascending numerical sequence, of all Federal stock numbers appearing in the listings, followed by a list, in alphanumeric sequence, of all reference numbers appearing in the listings. Federal stock number and reference numbers are cross-referenced to each illustration figure and item number or, reference designation appearance.

1-3. Explanation of Columns

The following provides an explanation of columns in the tabular lists-

- a. *Source, Maintenance, and Recoverability Codes (SMR).*

(1) *Source code.* Indicates the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are

<i>Code</i>	<i>Explanation</i>
PA	- Item procured and stocked for anticipated or known usage.
PB	- Item procured and stocked for insurance purposes because essentiality dictates that a minimum quantity be available in the supply systems.
PC	- Item procured and stocked and which otherwise would be coded PA except that it is deteriorative in nature.
PD	- Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.
PE	- Support equipment procured and stocked for initial issue or outfitting to specified maintenance repair activities.
PF	- Support equipment which will not be stocked but which will be centrally procured on demand.
PG	- Item procured and stocked to provide for sustained support for the life of the equipment. It is applied to an item peculiar to the equipment which because of probable discontinuance or shutdown of production facilities would prove uneconomical to reproduce at a later time.
KD	- An item of depot overhaul/repair kit and not purchased separately. Depot kit defined as a kit that provides items required at the time of overhaul or repair.
KF	- An item of a maintenance kit and not purchased separately. Maintenance kit defined as a kit that provides an item that can be replaced at organizational or direct support or general support levels of maintenance.
KB	- Item included in both a depot overhaul/ repair kit and a maintenance kit.
MO	- Item to be manufactured or fabricated at organizational level.
MF	- Item to be manufactured or fabricated at direct support maintenance level.
MH	- Item to be manufactured or fabricated at general support maintenance level.
MD	- Item to be manufactured or fabricated at depot maintenance level.
AO	- Item to be assembled at organizational level.
AF	- Item to be assembled at direct support maintenance level.
AH	- Item to be assembled at general support maintenance level.
AD	- Item to be assembled at depot maintenance level.
XA	- Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly.
XB	- Item is not procured or stocked. If not available through salvage, requisition.

Code	Explanation
XC	- Installation drawing, diagram instruction sheet, field service drawing, that is identified by manufacturers' part number.
XD	- Support items can be requisitioned with justification.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code Format as follows-

(a) *Use (third position).* The maintenance code entered in the third position indicates the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position indicates one of the following levels of maintenance.

Code	Application/Explanation
O	- Support item is removed, replaced, used at the organizational level of maintenance.

NOTE

A code "C" may be used in this position to denote crew or operator maintenance performed within organizational maintenance.

F	- Support item is removed, replaced, used at the direct support maintenance level.
H	- Support item is removed, replaced, used at the general support maintenance.
D	- Support items that are removed, replaced, used at depot only.

(b) *Repair (fourth position).* The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). When a maintenance code is not used a dash (-) sign is entered. For multi-service equipment/systems or when a code is entered, this position will contain one of the following maintenance codes as assigned by the service(s) that require the code-

Code	Application/Explanation
O	- The lowest maintenance level capable of complete repair of the support item is the organizational level.
F	- The lowest maintenance level capable of complete repair of the support item is direct support.
H	- The lowest maintenance level capable of complete repair of the support item is general support.
D	- The lowest maintenance level capable of complete repair of the support item is the depot level.
L	- Repair restricted to designated Specialized Repair Activity.
Z	- Non-repairable No repair is authorized.
B	- No repair is authorized. The item may be reconditioned by adjusting, lubricating, etc., at the user level. No parts or special tools are procured for the maintenance of this item.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the uniform SMR Code Format as follows-

Code	Application/Explanation
Z	- Nonrepairable item. When unserviceable, condemn and dispose at the level indicated in the first digit of the maintenance code.'
O	- Repairable item. When uneconomically repairable, condemn and dispose at organizational level.
F	- Repairable item. When uneconomically repairable, condemn and dispose at the direct support level.
H	- Repairable item. When uneconomically repairable, condemn and dispose at the general support level.
D	- Repairable item. When beyond lower level repair capability, return to depot. Condemnation and disposal not authorized below depot level.
L	- Repairable item. Repair, condemnation, and disposal not authorized below depot/Specialized Repair Activity level.
A	- Item requires special handling or condemnation procedures because of specific reasons (i.e., precious metal content, high dollar value, critical material or hazardous material).

b. *Federal Stock Number.* Indicates the Federal stock number assigned to the item and will be used for requisitioning purposes.

c. *Description*. Indicates the Federal item name and a minimum description required to identify the item. The last line indicates the reference number followed by the applicable Federal Supply Code for Manufacturer (FSCM) in parentheses. The FSCM is used as an element in item identification to designate manufacturer or distributor or Government agency, etc., and is identified in SB 708-42

d. *Unit of Measure (U/M)*. Indicates the standard or basic quantity by which the listed item is used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation; e.g., ea, in, pr, etc., and is the basis used to indicate quantities and allowances in subsequent columns. When the unit of measure differs from the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.

e. *Quantity Incorporated in Unit*. This column indicates the quantity of the item used in the equipment. Subsequent appearances of the same item in the same assembly are indicated by the letters "REF".

f. *15-Day Organizational Maintenance Allowance*

(1) The repair parts indicated by an asterisk in the allowance column represent those authorized for use at the organizational category, and will be requisitioned on an "as required" basis, until stockage is based on demand in accordance with AR 710-2.

(2) Major Army commanders are authorized to approve reduction in the range of support items authorized for use in units within their commands. Recommendations for increase in range of items authorized for use will be forwarded to Commander, US Army Electronics Command, ATTN: AMSEL-MA-CW Fort Monmouth, N.J., 07703. Any changes approved will be reflected in a revision to the RPSTL.

(3) Allowance quantities are indicated in the special tools list section for special tools, TMDE, and other equipment.

g. *Illustration*. This column is divided as follows:

(1) *Figure number*. Indicates the figure number of the illustration on which the item is shown in TM 11-2146.

(2) *Item number*. Indicates the item number or reference designation used to reference the item in the illustration.

1-4. Special Information

a. Usable on codes are included in column 3. Uncoded items are applicable to all models. Identification of the usable on codes used in this publication are-

Code	Used on
ABC	AN/TTC-7
ABD	AN/TTC-7A

b. The following publication pertains to the equipment and its components:

TM 11-2146 Central Office, Telephone, Manual AN/TTC-7 and AN/ TTC-7A and Telephone Central Office Group, Manual AN/GTA-14 (V) .

1-5. Location of Repair Parts

a. This manual contains one cross-reference index (see V) to be used to locate a repair part when either the Federal stock number or reference number (manufacturer's part number) is known. The first column in the index is prepared in numerical or alphanumeric sequence in ascending order. The reference numbers (manufacturer's part numbers) are listed immediately following the last listed Federal stock number in the index of Federal stock numbers.

b. When the Federal stock number or reference number is known, follow the procedures given in (1) and (2) below.

(1) Refer to the index of Federal stock numbers (see V) and locate the Federal stock number or reference number. The FSN and reference number are cross-referenced to the applicable figure and item number or reference designation.

(2) Refer to the repair parts list (see III) and locate the figure number (col 7a) and item number or reference designation (col 7b) as noted in the FSN index.

c. When the figure and item number or reference designation are known, scrutinize columns 7a and 7b of the repair parts list (see III) until the item is located.

d. When the FSN, reference number, figure number, item number and reference designation are not known, scrutinize column 3 of the repair parts list (sec III), which is arranged in alphabetical order.

1-6. Abbreviations

Not applicable.

1-7. Reporting of Equipment Publication Improvements

The reporting of errors, omissions, and recommendations for improving this publication by the individual user is encouraged. Reports should be submitted on DA Form 2028 (Recommended Changes to Publications) and forwarded direct to Commander, US Army Electronics Command, ATTN: AMSEL-MA-CW, Fort Monmouth, N.J., 07703.

(Next printed page is 6.)

SECTION III

TM 11-5805-234-20P

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NUMBER & MFR CODE USABLE ON CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6)				(7)	
					15-DAY ORGANIZATIONAL				ILLUSTRATION	
					(a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100	(a) FIGURE NO.	(b) ITEM NO.
PAOZZ	5120-308-3779	BLADE NO-REF-DESIG CONT BURNISHER FOR..... CLEANING CONT POINTS 5 IN LG X 17-64 IN WD X 0-..... 018 IN THK 3740 (64959) ABC,ABD	EA	2	*	*	*	*		
PAOZZ	5110-243-3011	BURNISHER, CONTACT, HAND NO-REF-DESIG BLADE	EA	2	*	*	*	*		
PAOZZ	8040-200-6302	FOR BURNISHER 374A (64959) ABC,ABD CEMENT, SEALING NO-REF-DESIG LIQUID GLYPTOL..... PURPLE 1-2 OZ BOTTLE	EA	2	*	*	*	*		
PAOZZ	5995-170-7992	207350 (58189) ABC, ABD CORD CD38 NO-REF-DESIG	EA	3	*	*	*	*		
PAOZZ	5805-701-9183	CD3B (80058) ABC;ABC SLEEVE, KEY NO-REF-DESIG USED TO INDICATE CORD	EA	18	*	*	*	*		
PAOZZ	5805-681-9710	CKT KEYS IN TROUBLE 35-64 IN DIA X 19-32 IN LG 589782 (44038) ABC,ABD	EA	60	*	*	*	*		
PAOZZ	5920-295-9826	SLEEVE, TELEPHONE CORD NO-REF-DESIG USED TO..... INDICATE CORD CKT PLUGS IN TROUBLE 1-1/8 IN LG X 0-305 IN DIA 589825 (44038) ABC,ABD	EA	200	*	*	*	*	3	
PAOZZ	5920-285-0347	ARRESTOR, LIGHTNING RESISTOR TYPE 1-11..... 32 IN LG X 1-2 IN OD 300 VDCW 41-260 (26063)	EA	200	*	*	*	*		
PAOZZ	5805-701-9143	MAIN DISTRIBUTING FRAME TELEPHONE TA-257/TTC DISK. TELEPHONE PROTECTOR NO-REF-DESIG CARBON..... CYLINDRICAL SHAPE 1-2 X 5-16 TN 41-273 (26063)	EA	1	*	*	*	*		
PAOZZ	5805-701-9142	SWITCHBOARD TELEPHONE MANUAL SB-249/TTC, SB-249A/TTC CIRCUIT PLATE ASSEMBLY NO-REF-DESIG 48 VDC	EA	35	*	*	*	*		
PAOZZ	5995-173-8830	PROVIDES OPERATOR WITH FACILITIES FOR TALKING AND DIALING USED ON SB-249A/TTC CIRCUIT PLATE ASSEMBLY NO-REF-DESIG 48 VDC	EA	10	*	*	*	*		
PAOZZ	5995-681-8551	589854 (40038) USED ON SB-249A/TTC CORD ASSEMBLY ELECTRICAL NO-REF-DESIG GREEN	EA	10	*	*	*	*		
PAOZZ	5995-173-8829	CABLE 3 T TINSEL COND 8 FT LG O-A SMB142B17A3 (80063) USED ON SB-249/TTC	EA	10	*	*	*	*		
PAOZZ	5995-681-8552	CORD ASSEMBLY, ELECTRICAL NO-REF-DESIG GREEN	EA	10	*	*	*	*		
PAOZZ	5995-681-8553	CABLE 3 TINSEL COND 8 FT 3-13-64 IN LG O-A S3B (64959) USED ON SB-249A/TTC	EA	10	*	*	*	*		
PAOZZ	5995-173-8828	CORD ASSEMBLY ELECTRICAL NO-REF-DESIG RED	EA	10	*	*	*	*		
PAOZZ	5805-688-2685	CABLE 3 TINSEL COND 8 FT LG O-A SMB142817-1 (80063) USED ON SB-249/TTC	EA	1	*	*	*	*	2	
PAOZZ	5920-156-0840	CORD ASSEMBLY, ELECTRICAL NO-REF-DESIG RED	EA	10	*	*	*	*		
PAOZZ	5930-258-4767	CABLE 3 TINSEL COND 8 FT 3-13-64 IN LG O-A S3B (64959) USED ON SB-249A/TTC	EA	2	*	*	*	*		
PAOZZ	5930-548-6747	HANDLE NO-REF-DESIG FOR CAM TYPE KEYS 7-8 IN.	EA	30	*	*	*	*		
PAOZZ	5930-814-4362	LG X 3-8 IN OD O-A 4926 (58189) USED ON SB-249A/TTC	EA	1	*	*	*	*		
PAOZZ	6240-715-3037	HANDLE NO-REF-DESIG LEVER SW WHITE PLASTIC	EA	675	*	*	*	*	31	
PAOZZ	6243-237-7877	SMB142908 (80063) LAMP, INCANDESCENT NO-REF-DESIG CALL LAMPS FOR	EA	30	*	*	*	*	31	
PAOZZ	6210-726-4534	LINES AND TRK TP SB TYPE 48 V 0-032 TO 0-038 AMP CUR RANGE 4BC (08808)	EA	15	*	*	*	*		
PAOZZ	6213-726-4536	LAMP, INCANDESCENT NO-REF-DESIG TP SB TYPE 6. V, 0-035 TO 0-045 AMP SLIDE BASE, 1-11-16 IN MAX LG O-A INTENDED FOR REPLACEMENT BY THE REPAIRMAN, 6C (088081) LENS, INDICATOR LIGHT NO-REF-DESIG GREEN	EA	15	*	*	*	*		
		SMB142804-3 (80063) LENS, INDICATOR LIGHT NO-REF-DESIG RED	EA	15	*	*	*	*		
		SMB142804-2 (80063)								

SECTION III

TM 11-5805-234-20P

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NUMBER & MFR CODE USABLE ON CODE	(4)	(5) UNIT OF MEAS	15-DAY ORGANIZATIONAL				(7) ILLUSTRATION	
									(a) FIGURE NO.	(b) ITEM NO.
PAOZZ	6210-726-4537	LENS INDICATOR LIGHT NO-REF-DESIG WHITE SMB142911 (80063)	EA	580	*	*	*	*	*	
PAOZZ	6210-726-4535	LENS INDICATOR LIGHT NO-REF-DESIG WHITE SMB142B04-1 (80063)	EA	15	*	*	*	*	*	
PAOZZ	5905-299-1749	RESISTOR CURRENT REGULATING NO-REF-DESIG GEN RESISTANCE 1 AMP 10 V 0-049 AMP TO 0-169 AMP T9 T9 (81349)	EA	1	*	*	*	*	*	
PAOZZ	5935-392-6340	SLEEVE NO-REF-DESIG FOR TP JACK USED ON 20 PER STRIP JACK ASSY 0-562 IN LG X 0-365 IN DIA O-A 48356 (58189) USED ON SB-249/TTC	EA	600	*	*	*	*	*	
PAOZZ	5920-156-0840	TELEPHONE CIRCUIT, LINE RELAY TA-223/TTC; TA-223A/TTC FUSE INDICATOR, ALARM NO-REF-DESIG 1-1-3 AMP 48 V 1-43-64 IN LG X 13-32 IN W X 3-8 IN H 35A (64959)	EA	11	*	*	*	*	*	
PAOZZ	5920-156-0840	TELEPHONE CIRCUIT TRUNK RELAY TA-226/TTC, TA-226A/TTC FUSE INDICATOR ALARM NO-REF-DESIG 1-1-3 AMP; 48 V 1-43-64 IN LG X 13-32 IN W X 3-8 IN H 35A (64959)	EA	11	*	*	*	*	*	
PAOZZ	6350-688-5101	SWITCHBOARD TELEPHONE MANUAL SB-1398/GTA-14(V) BUZZER DS800 VIBRATION TYPE 48 VDC..... SMB142336 (80063)	EA	1	*	*	*	*	*	DS800
PAOHD	5805-701-9142	CIRCUIT PLATE ASSEMBLY NO-REF-DESIG 48 VDC PROVIDES TALKING RINGING AND SUPERVISORY CIRCUITS BETWEEN OPERATOR AND CALLED AND CALLING 589854 (44038)	EA	5	*	*	*	*	*	
PAOHD	5805-701-9143	CIRCUIT PLATE ASSEMBLY NO-REF-DESIG 48 VDC PROVIDES OPERATOR WITH FACILITIES FOR TALKING AND DIALING 589855 (44038)	EA	1	*	*	*	*	*	
PAOZZ	5995-173-8830	CORD ASSEMBLY ELECTRICAL NO-REF-DESIG GREEN CABLE SMC142817GRIII (80063)	EA	10	*	*	*	*	*	
PAOZZ	5995-173-8829	CORD ASSEMBLY ELECTRICAL NO-REF-DESIG RED CABLE SMC142817DGP1 (80063)	EA	10	*	*	*	*	*	
PAOZZ	5995-173-8828	CORD ASSEMBLY ELECTRICAL NO-REF-DESIG WHITE CABLE SMC142B17GPII (80063)	EA	10	*	*	*	*	*	
PAOZZ	5805-688-2685	DIAL, TELEPHONE NO-REF-DESIG ADJ SPEED TYPE SHUNT SPRING CONT ARRANGEMENT 3-3-32 IN DIA X 1-1-4 IN H 591449 (44038)	EA	1	*	*	*	*	*	2
PAOZZ	5920-156-0840	FUSE, INDICATOR ALARM F10 1-1-3 AMP 48 V 1- 43-64 IN LG X 13-22 IN W X 3-B IN H SMB142343 (80063)	EA	10	*	*	*	*	*	F10
PAOZZ	5920-156-0840	FUSE, INDICATOR ALARM F11 1-1-3 AMP, 48 V 1- 43-64 IN LG X 13-32 IN W X 3-8 IN H SMB142343 (80063)	EA	REF	*	*	*	*	*	F11
PAOZZ	5920-156-0840	FUSE, INDICATOR ALARM F12 1-1-3 AMP, 4B V 1- 43-64 IN LG X 13-32 IN W X 3-B IN H SMB142343 (80063)	EA	REF	*	*	*	*	*	F12
PAOZZ	5920-156-0840	FUSE, INDICATOR ALARM F13 1-1-3 AMP, 48 V 1- 43-64 IN LG X 13-32 IN W X 3-8 IN H SMB142343 (80063)	EA	REF	*	*	*	*	*	F13
PAOZZ	5920-156-0840	FUSE, INDICATOR ALARM F14 1-1-3 AMP, 4B V 1- 43-64 IN LG X 13-32 IN W X 3-8 IN H SMB142343 (80063)	EA	REF	*	*	*	*	*	F14
PAOZZ	5920-156-0840	FUSE, INDICATOR ALARM F15 1-1-3 AMP, 48 V 1- 43-64 IN LG X 13-32 IN W X 3-8 IN H SMB142343 (80063)	EA	REF	*	*	*	*	*	F15
PAOZZ	5920-156-0840	FUSE, INDICATOR ALARM F16 1-1-3 AMP, 48 V 1- 43-64 IN LG X 13-32 IN W X 3-8 IN H SMB142343 (80063)	EA	REF	*	*	*	*	*	F16
PAOZZ	5920-156-0840	FUSE, INDICATOR ALARM F17 1-1-3 AMP, 48 V 1- 43-64 IN LG X 13-32 IN W X 3-8 IN H SMB142343 (80063)	EA	REF	*	*	*	*	*	F17
PAOZZ	5920-156-0840	FUSE, INDICATOR ALARM F18 1-1-3 AMP, 48 V 1- 43-64 IN LG X 13-32 IN W X 3-8 IN H' SMB142343 (80063)	EA	REF	*	*	*	*	*	F18
PAOZZ	5920-156-0840	FUSE, INDICATOR ALARM F19 1-1-3 AMP 48 V 1- 43-64 IN LG X 13-32 IN W X 3-8 IN H SMB142343 (80063)	EA	REF	*	*	*	*	*	F19
PAOZZ	5930-814-4362	HANDLE NO-REF-DESIG LEVER SW WHITE PLASTIC..... SMB142908 (80063)	EA	1	*	*	*	*	*	
PAOZZ	5930-258-4767	HANDLE NO-REF-DESIG FOR CAM TYPE KEYS 7-8 IN. LG X 3-8 IN OD O-A SMB142907 (80063)	EA	2	*	*	*	*	*	
PAOZZ	5930-548-6747	HANDLE NO-REF-DESIG FOR CAM TYPE KEYS 13-16..... IN LG X 3-8 IN OD O-A SMB142512 ((80063))	EA	30	*	*	*	*	*	

SECTION III

TM 11-5805-234-20P

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NUMBER & MFR CODE USABLE ON CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6)				(7) ILLUSTRATION	
					15-DAY ORGANIZATIONAL				(a)	(b)
					1-5	6-20	21-50	51-100	(a) FIGURE NO.	(b) ITEM NO.
PAOZZ	6240-Z37-7877	LAMP, INCANDESCENT DS761 THRU DS790 TEL SWBD TYPE SMB142912 (80063)	EA	30	*	*	*	*	*	DS761 THRU DS790 DS3
PAOZZ	6240-715-0037	LAMP, INCANDESCENT DS3 CALL LAMPS FOR LINES..... AND TRK SMB142803 (80063)	EA	595	*	*	*	*	*	
PAOZZ	6240-715-0037	LAMP, INCANDESCENT DS4 CALL LAMPS FOR LINES..... AND TRK SMB142803 (80063)	EA	REF	*	*	*	*	*	DS4
PAOZZ	6240-715-0037	LAMP, INCANDESCENT DS5 CALL LAMPS FOR LINES..... AND TRK SMB142803 (80063)	EA	REF	*	*	*	*	*	DS5
PAOZZ	6240-715-0037	LAMP INCANDESCENT DS6 CALL LAMPS FOR LINES..... AND TRK SMB142803 (80063)	EA	REF	*	*	*	*	*	DS6
PAOZZ	6240-715-0037	LAMP, INCANDESCENT DS7 CALL LAMPS FOR LINES..... AND TRK SMB142903 (80063)	EA	REF	*	*	*	*	*	DS7
PAOZZ	6240-715-0037	LAMP, INCANDESCENT DS8 CALL LAMPS FOR LINES..... AND TRK SMB142803 (80063)	EA	REF	*	*	*	*	*	DS8
PAOZZ	6240-715-0037	LAMP, INCANDESCENT DS9 CALL LAMPS FOR LINES..... AND TRK SMB142803 (80063)	EA	REF	*	*	*	*	*	DS9
PAOZZ	6240-715-0037	LAMP, INCANDESCENT DS10 CALL LAMPS FOR LINES..... AND TRK SMB142803 (80063)	EA	REF	*	*	*	*	*	DS10
PAOZZ	6210-726-4534	LENS, INDICATOR LIGHT NO-REF-DESIG GREEN	EA	15	*	*	*	*	*	
PAOZZ	6210-726-4536	LENS, INDICATOR LIGHT NO-REF-DESIG RED	EA	15	*	*	*	*	*	
PAOZZ	6210-726-4535	LENS, INDICATOR LIGHT NO-REF-DESIG WHITE	EA	15	*	*	*	*	*	31
PAOZZ	6210-726-4537	LENS, INDICATOR LIGHT NO-REF-DESIG WHITE	EA	580	*	*	*	*	*	
PAOZZ	5905-299-1749	RESISTOR. CURRENT REGULATING R40 GEN..... RESISTANCE 1 AMP 10 V 0-049 AMP TO 0-169 AMP PER MIL-E-18 T9 (813491	EA	1	*	*	*	*	*	R40
PAOZZ	5805-701-9183	SLEEVE, KEY NO-REF-DESIG USED TO INDICATE CORD..... CKT KEYS IN TROUBLE 35-64 IN DIA X 19-32 IN LG 589782 (44038)	EA	10	*	*	*	*	*	
PAOZZ	5805-681-9710	SLEEVE, TELEPHONE CORD NO-REF-DESIG USED TO..... INDICATE CORD CKT PLUGS IN TROUBLE1-1-6 IN LG X 0-305 IN DIA SMB183398 (80063)	EA	60	*	*	*	*	*	
PAOZZ	5977-702-5258	PANELS, POWER DISTRIBUTION SB-1399/GTA-14(V) AND	EA	2	*	*	*	*	*	
PAOZZ	5977-702-5259	BRUSH, ELECTRICAL CONTACT NO-REF-DESIG AC	EA	2	*	*	*	*	*	
PAOZZ	5977-883-2344	BRUSHES FOR CONVERTER CARBON W-TERM 15-16 IN LG X 0-250 IN W X 0-375 IN THK A173A732B (97475) USED ON THE SB-1332/TTC ONLY	EA	2	*	*	*	*	*	
PAOZZ	5977-883-2345	BRUSH, ELECTRICAL CONTACT NO-REF-DESIG DC	EA	2	*	*	*	*	*	
		BRUSHES FOR CONVERTER CARBON W-TERM 15-16 IN LG X 0-250 IN W X 0-375 IN THK A173A732A (97475) USED ON THE SB-1032/TTC ONLY	EA	2	*	*	*	*	*	
		BRUSH; ELECTRICAL CONTACT NO-REF-DESIG AC	EA	2	*	*	*	*	*	
		BRUSHES FOR CONVERTER CARBON W-TERM 1-1-8 IN LG X 5-B IN W X 5-16 IN THK 19745-14 (82497) USED ON THE SB-1399/GTA-14(V)	EA	2	*	*	*	*	*	
		BRUSH ELECTRICAL CONTACT NO-REF-DESIG DC	EA	2	*	*	*	*	*	
		BRUSHES FOR CONVERTER CARBON W-TERM 1-3-16 IN LG X 3-4 IN W X 5-16 IN THK 19745-15 (82497) USED ON THE SB-1399/GTA-14(V) ONLY	EA	2	*	*	*	*	*	

SECTION III

TM 11-5805-234-20P

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NUMBER & MFR CODE USABLE ON CODE	7	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6)				(7)	
						15-DAY ORGANIZATIONAL				ILLUSTRATION	
						(a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100	(a) FIGURE NO.	(b) ITEM NO.
PAOZZ	6350-688-5101	TELEPHONE CIRCUIT LINE RELAY TA-452/GTA-14(V) BUZZER DS801		EA	1	*	*	*	*		DS801
PAOZZ	5920-156-0840	SMB142336 (90063) FUSE, INDICATOR ALARM NO-REF-DESIG 1-1/3 AMP		EA	11	*	*	*	*		
PAOZZ	6350-6B8-5L01	48V SMB142343 (80063)		EA	1	*	*	*	*		
PAOZZ	5920-156-0840	TELEPHONE CIRCUIT TRUNK RELAY TA-453/GTA-14(V) BUZZER DS802 48, VDC.....		EA	11	*	*	*	*		
PAOZZ	5920-285-0347	SMB142336 (80063) FUSE, INDICATOR ALARM NO-REF-DESIG.....		EA	200	*	*	*	*		
		CYLINDRICAL SHAPE 1-2 X 5-16 IN 41-273 (26063)									

INDEX - FEDERAL STOCK NUMBER AND REFERENCE NUMBER

CROSS-REFERENCE TO FIGURE AND ITEM NUMBER

STOCK NUMBER	FIGURE NO.	ITEM NO.	STOCK NUMBER	FIGURE NO.	ITEM NO.
5110-243-3011			5930-814-4362		
5120-308-3779			5935-392-6340		
5805-681-9710			5977-702-5258		
5805-688-2685	2		5977-702-5259		
			5977-883-2344		
5805-701-9142			5977-883-2345		
5805-701-9143			5995-170-7992		
5805-701-9183			5995-173-8828		
			5995-173-8829		
			5995-173-8830		
			5995-681-8551		
			5995-681-8552		
			5995-681-8553		
5905-299-1749			6210-726-4534		
5905-299-1749	R40		6210-725-4535		
5920-156-0840			6210-726-4535	31	
5920-156-0840	F10		6210-726-4536		
5920-156-0840	F11		6210-726-4537		
5920-156-0840	F12		6240-237-7877		
5920-156-0840	F13		6240-237-7877	31	
5920-156-0840	F14		6240-715-0037		ds3
5920-156-0840	F15		6240-715-0037		DS4
5920-156-0840	'16		6240-715-0037		DS5
5920-156-0840	F17		6240-715-0037		DS6
5920-156-0840	F18		6240-715-0037		DS7
5920-156-0840	F19		6240-715-0037		DS8
5920-156-0840	47		6240-715-0037		DS9
5920-285-0347			6240-715-0037		DS10
5920-295-9826	3	61	6240-715-0037	31	
5930-258-4767			6350-688-5101		
5930-548-6747			8040-200-6302		

By Order of the Secretary of the Army:

CREIGHTON W. ABRAMS
General, United States Army
Chief of Staff

Official:

VERNE L. BOWERS
Major General, United States Army
The Adjutant General

Distribution:

Active Army:

CNGB (1)	Instl (2) except
ACSC-E (2)	Fort Gordon (10)
USAARENBD (2)	Fort Huachuca (10)
USAMB (10)	WSMR (2)
AMC (1)	Fort Carson (10)
ARADCOM (2)	Ft Richardson (ECOM Ofc) (2)
ARADCOM Rgn (2)	Army Dep (2) except
OS Maj Comd (4)	LBAD (14)
LOGCOMDS (5)	SAAD (30)
MICOM (2)	TOAD (14)
TECOM (2)	LEAD (7)
USASTRATCOM (4)	ATAD (10)
HISA (ECOM) (21)	USA Dep (2)
MDW (1)	Sig Sec USA Dep (2)
Armies (2)	Sig Dep (5)
Corps (2)	Sig FLDMS (1)
Sve Colleges (2)	USAERDAA (1)
USASESS (5)	USARDAW (1)
USAADS (2)	MAAG (1)
USAFAS (2)	USARMIS (1)
USAARMS (2)	WRAMC (1)
USAIS (2)	Units org under fol TOE:
USAES (2)	(1 copy each unit)
USAINTS (3)	11-158
USACDCEC (5)	29-134
USASA (2)	29-136

NG: None

USAR: None

For explanation of abbreviations used, see AR 310-50.

☆U.S. GOVERNMENT PRINTING OFFICE : 1992 O - 311-831 (61142)

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS

SOMETHING WRONG WITH PUBLICATION



THEN...JOT DOWN THE
DOPE ABOUT IT ON THIS FORM.
CAREFULLY TEAR IT OUT, FOLD IT
AND DROP IT IN THE MAIL.

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATE SENT

PUBLICATION NUMBER

PUBLICATION DATE

PUBLICATION TITLE

BE EXACT PIN-POINT WHERE IT IS

IN THIS SPACE, TELL WHAT IS WRONG
AND WHAT SHOULD BE DONE ABOUT IT.

PAGE
NO.

PARA-
GRAPH

FIGURE
NO.

TABLE
NO.

PRINTED NAME, GRADE OR TITLE AND TELEPHONE NUMBER

SIGN HERE

PIN : 028589-000