

D 101.11:
11-291/975

TM 11-291

DEPARTMENT OF THE ARMY TECHNICAL MANUAL


RADIO SETS

AN/VRC-13

AN/VRC-14

AND

AN/VRC-15

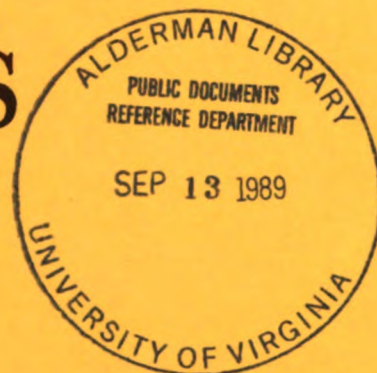

This copy is a reprint which includes current pages from Changes 1, 2, 3 and 5.

DEPARTMENT OF THE ARMY • MARCH 1951

Digitized by Google



CHANGE }
No. 5 }

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 7 April 1975

RADIO SETS AN/VRC-13, AN/VRC-14, AND AN/VRC-15

TM 11-291, 7 March 1951, is changed as follows:

Page v. Radiation warning is added after existing notice.

WARNING RADIATION HAZARD



**RADIOACTIVE MATERIAL
CONTROLLED DISPOSAL REQUIRED
ACCOUNTABILITY NOT REQUIRED**

STD RW -2

Multimeter	Ra 226	0.5uCi	6625-00-223-5244
	Electron Tube OA2WA		5960-00-503-4880
EEVC	U 238	0.1uCi	
CBS Hytron	Ni 63	0.5uCi	
Raytheon	Co 60	0.2uCi	
	Electron Tube CB2WA		
EEVC	U 238	0.1uCi	
Raytheon	Co 60	0.2uCi	

Radiation Hazard Information: The following radiation hazard information must be read and understood by all personnel before operating or repairing the Radio Sets AN/VRC-13, AN/VRC-14, and AN/VRC-15. Hazardous radioactive materials are present in the above listed components of Receiver-Transmitter, Radios RT-66/GRC, RT-67/GRC, and RT-68/GRC, Amplifier Audio Frequency AM-65/GRC, and Power Supply PP-109/GR.

The components are potentially hazardous when broken. See qualified medical personnel and the local Radiological Protection Officer (RPO) immediately, if you are exposed to or cut by broken components. First aid instructions are contained in TB 43-0116, TB 43-0122, and AR 755-15.

NEVER place radioactive components in your pocket.

Use extreme care **NOT** to break radioactive components while handling them.

NEVER remove radioactive components from cartons until you are ready to use them.

If any of these components are broken, notify the local RPO immediately. The RPO will survey the immediate area for radiological contamination and will supervise the removal of broken components. The above listed radioactive components *will not* be repaired or disassembled. Disposal of broken, unserviceable, or unwanted radioactive components will be accomplished in accordance with the instructions in AR 755-15.

By Order of the Secretary of the Army:

Official:

FRED C. WEYAND
General, United States Army
Chief of Staff

VERNE L. BOWERS
Major General, United States Army
The Adjutant General

Distribution:

To be distributed in accordance with DA Form 12-51, operator's maintenance requirements for AN/VRC-13, AN/VRC-14 and AN/VRC-15.

★ U.S. GOVERNMENT PRINTING OFFICE: 1975-065140/000

TECHNICAL MANUAL
RADIO SETS AN/VRC-13
AN/VRC-14 AND AN/VRC-15

TM 11-291 }
CHANGES No. 8 }

HEADQUARTERS,
DEPARTMENT OF THE ARMY
WASHINGTON 25, D.C., 11 April 1963

TM 11-291, 7 March 1951, is changed as follows:

Note. The parenthetical reference to previous changes (example: "page 1 of C 2") indicates that pertinent material was published in that changes.

Page 1. Make the following changes:
Add paragraph 1.1 after paragraph 1.

1.1. Index of Publications

Refer to the latest issue of DA Pam 310-4 to determine whether there are new editions, changes, or additional publications pertaining to your equipment. DA Pam 310-4 is an index of current technical manuals, technical bulletins, supply bulletins, lubrication orders, and modification work orders that are available through publications supply channels. The index lists the individual parts (-10, -20, 35P, etc.) and the latest changes and revisions of each equipment publication.

Delete paragraph 3 and substitute:

3. Forms and Records

a. Reports of Maintenance and Unsatisfactory

Equipment. Use equipment forms and records in accordance with instructions in TM 38-750.

b. Report of Damaged or Improper Shipment. Fill out and forward DD Form 6 (Report of Damaged or Improper Shipment) as prescribed in AR 700-58 (Army), NAVSANDA Publication 378 (Navy), and AFR 71-4 (Air Force).

c. Comments on Manual. Forward all comments on this publication direct to: Commanding Officer, U. S. Army Electronics Materiel Support Agency, ATTN: SELMS-MP, Fort Monmouth, N. J. DA Form 1598 (Record of Comments on Publications), DA Form 2496 (Disposition Form), or letter may be used.)

Page 49 (page 1 of C 2). Make the following changes:

Delete section IV with figures 39.1 and 39.2 and substitute.

Section IV. PREVENTIVE MAINTENANCE

61.1. Preventive Maintenance Techniques

Preventive maintenance is the systematic care, servicing, and inspection of equipment to prevent the occurrence of trouble, to reduce downtime, and to assure that the equipment is serviceable.

a. Systematic Care. The procedures given in paragraphs 61.2 through 61.6 cover systematic care essential to proper upkeep and operation of the equipment. The cleaning operations (par. 61.4) should be performed once a day. If the equipment is not used daily, however, the cleaning operations must be performed before operation after any extended shutdown, or once a week while the equipment is kept in *standby* condition. The other items must be checked before the equipment is placed in operation after a shutdown, during operation, or after it is turned off, as specified in the applicable paragraph.

b. Maintenance Service and Inspection. The maintenance service and inspection charts (pars. 61.3, 61.6) outline inspections to be made at specific intervals. These inspections are made to determine combat serviceability; that is, to determine whether the equipment is in good general (physical) condition, in good operating condition, and likely to remain combat serviceable. To assist operators in determining and maintaining combat serviceability, the charts indicate what to inspect, how to inspect, and what the normal conditions are; the *Reference* column lists the paragraph or figure that contains additional information. If the defect cannot be remedied by the operator, higher echelon maintenance or repair is required. Records and reports of these inspections must be made in accordance with TM 38-750.

61.2. Maintenance Service and Inspection Periods

Maintenance service and inspections of the radio sets are required on a daily basis. Paragraph 61.3 specifies services and inspections that must be accomplished daily and under special conditions listed below.

a. Vehicular Installations.

- (1) Before the vehicle starts on a mission.
- (2) When the equipment is initially installed.

- (3) When the equipment is reinstalled after removal for any reason.
- (4) At least once each week if the equipment is maintained in standby condition.

b. Transportable and Mobile Installations.

- (1) When the equipment is initially installed.
- (2) When the equipment is reinstalled after removal for any reason.
- (3) At least once each week if the equipment is maintained in standby condition.

61.3. Daily Maintenance Service and Inspection Chart

Item No.	Procedure		Reference
	Item	Normal condition or result	
1	SET: Inspect the equipment for: <ol style="list-style-type: none"> a. Completeness..... b. Proper installation..... c. Cleanliness..... d. Preservation..... 	<ol style="list-style-type: none"> a. Equipment must be complete..... b. Installation is proper..... c. Units must be clean and dry inside and out; free of grease, dirt, rust, corrosion, and fungus. d. Painted surfaces must be free of bare spots, rust, and corrosion. 	<ol style="list-style-type: none"> a. Par. 6. b. Par. 33. c. Par. 61.4.
4	REMOVE DIRT: Remove dirt and moisture from antenna, microphone, chest sets, connectors, carrying bags, and control panels.	Antenna, microphone, chest sets, connectors, carrying bags, and control panels are free of dirt and moisture.	Par. 61.4.
5	SEATING: Inspect seating of items readily accessible from radio set exterior, such as connector and switches.	Readily accessible items are seated properly.	Fig. 23.
6	CONTROLS: Inspect controls for binding, excessive looseness and misalignment.	Controls are free of binding, excessive looseness, and misalignment.	Fig. 34-39.
8	CORROSION: Inspect cases, mountings, and all exposed metal surfaces for corrosion, rust, and moisture.	Cases, mountings, and all exposed metal surfaces are free of corrosion, rust, and moisture.	Fig. 3.
14	WINDOWS: Inspect meter dial and dial windows for broken or damaged glass.	Meter dial and dial windows are free of broken or damaged glass.	Fig. 36.
15	DRY BATTERIES: Inspect dry batteries for leakage and bulging.	Dry batteries are free of leakage and bulging.	Figs. 32, 33.

61.4. Cleaning

Inspect the exterior of the radio set. The exterior surfaces must be clean, free of dust, dirt, grease, and fungus.

Warning: Cleaning compound is flammable and its fumes are toxic. Provide adequate ventilation. Do not use near a flame.

a. Remove dust and loose dirt with a clean, soft cloth. If necessary, use a cloth dampened (not wet) with cleaning compound.

b. Remove grease, fungus, and ground-in dirt from the cases; use a cloth dampened with cleaning compound.

c. Remove dust and dirt from plugs and jacks

with a brush.

Caution: Do not press on the meter face (glass) when cleaning; this can damage the meter.

d. Clean the panels, meter, and control knobs; use a soft clean cloth. If dirt is difficult to remove, dampen the cloth with water and mild soap.

61.5. Monthly Maintenance

Perform the maintenance functions indicated in the monthly maintenance and inspection chart (par. 61.6) once each month. A month is defined as approximately 30 calendar days of 8-hour-per-day operation. If the equipment is operated 16 hours a day, the monthly maintenance should be performed at 15-day intervals.

61.6. Monthly Maintenance Service and Inspection Chart

Item No.	Procedure		Reference
	Item	Normal condition or result	
1	SET: Inspect the equipment for: a. Completeness..... b. Proper installation..... c. Cleanliness..... d. Preservation.....	a. Equipment must be complete..... b. Installation is proper..... c. Units must be clean and dry inside and out; free of grease, dirt, rust, corrosion and fungus. d. Painted surfaces must be free of bare spots, rust, and corrosion.	a. Par. 6. b. Section II. c. Par. 61.4.
2	PUBLICATIONS: Check to see that pertinent publications are available (par. 6).	a. Technical manual is complete and in usable condition. b. All changes pertinent to the equipment are on hand.	a. Par. 6. b. DA Pam 310-4 for requirements. DA Pam 310-4.
3	MODIFICATION WORK ORDERS: Check to determine whether new applicable MWO's have been published.	All URGENT MWO's have been applied to the equipment. All ROUTINE MWO's have been scheduled.	DA Pam 310-4.
4	REMOVE DIRT: Remove dirt and moisture from antenna, microphone, chest sets, connectors, carrying bags, and control panels.	Antenna, microphone, chest sets, connectors, carrying bags, and control panels are free of dirt and moisture.	
5	SEATING: Inspect seating of items readily accessible from the set exterior, such as connectors, and switches.	Readily accessible items are seated properly.	Fig. 23.
6	CONTROLS: Inspect controls for binding, excessive looseness, and misalignment.	Controls are free of binding, excessive looseness, and misalignment.	Fig. 34-39.
7	TIGHTEN: Tighten and clean the exterior of cases, shock mounts, antenna mount, coaxial lines, and all cables.	All cases, shock mounts, the antenna mount, coaxial line, and cables are clean and tight.	Fig. 3.
8	CORROSION: Inspect cases, mounting, and all exposed metal surfaces for corrosion, rust, and moisture.	Cases, mounting, and all exposed metal surfaces are free of corrosion, rust, and moisture.	Fig. 3.
9	FRAYING: Inspect cords and cables for fraying, deterioration, kinks, and strain.	Cords, and cables are free of fraying, deterioration, kinks, and strain.	Fig. 1.
10	ANTENNA: Inspect antenna for damage, loose fit, and corrosion.	Antenna is free of damage, loose fit, and corrosion.	Fig. 10.
11	MILDEW: Inspect canvas bags, manuals, and cables for mildew, tears, and fraying.	Canvas bags, manuals, and cables are free of mildew, tears, and fraying.	Fig. 10.
12	KNOBS: Inspect accessible items such as knobs, switches, volume control, and squelch control for looseness.	Knobs, switches, volume control, and squelch control are tight.	Figs. 34-39.
14	WINDOWS: Inspect meter dial and dial windows for broken or damaged glass.	Meter dial and dial windows are free of broken or damaged glass.	Fig. 36.
15	DRY BATTERIES: Inspect dry batteries for leakage and bulging.	Dry batteries are free of leakage and bulges.	Figs. 32, 33.
16	VARIABLE CAPACITORS: Inspect variable capacitors for dirt, moisture, misalignment of plates, and loose mountings.	Variable capacitors are clean and free of dirt and moisture; plates are aligned, and mountings are tight.	Fig. 52, 53.
17	SEATING: Inspect tubes for proper seating.	Tubes are seated properly.....	Fig. 54.
18	RESISTORS: Inspect resistors for cracks, discoloration, chipping, and blistering.	Resistors are free of cracks, discoloration, chipping, and blistering.	Fig. 49, 50.
19	CAPACITORS: Inspect capacitors for loose contacts, corrosion, and dirt.	Capacitors are clean, free of corrosion, loose contacts, and dirt.	Figs. 48-51, 54.

APPENDIX I. REFERENCES

DA PAM 810-4	Index of Technical Manuals, Technical Bulletins, Supply Bulletins, Lubrication Orders, and Modification Work Orders.	TM 9-218	Painting Instructions for Field Use.
		TM 88-750	The Army Equipment Record System and Procedures.

By Order of the Secretary of the Army:

EARLE G. WHEELER,
General, United States Army,
Chief of Staff.

Official:

J. C. LAMBERT,
Major General, United States Army,
The Adjutant General.

Distribution:

Active Army:

DASA (6)
 USASA (2)
 CNGB (1)
 CofEngrs (1)
 TSG (1)
 CSigO (5)
 CofT (1)
 USA CD Agcy (1)
 USCONARC (5)
 USAMC (5)
 ARADCOM (2)
 ARADCOM Rgn (2)
 OS Maj Comd (3)
 OS Base Comd (2)
 LOGCOMD (2)
 USAECOM (5)
 USAMICOM (3)
 USASCC (4)
 MDW (1)
 Armies (2)
 Corps (2)
 USA Corps (3)
 USATC AD (2)
 USATC Engr (2)
 USATC Inf (2)
 USATC Armor (2)
 Instl (2) except
 Ft Monmouth (63)
 Svc Colleges (2)
 Br Svc Sch (2)
 GENDEP (OS) (2)
 Sig Dep (OS) (12)
 Sig Sec, GENDEP (5)

Army Dep (2) except
 Ft Worth (8)
 Lexington (12)
 Sacramento (17)
 Tobyhanna (12)
 USA Elct RD Actv, White Sands (13)
 USA Elct RD Actv, Ft Huachuca (2)
 USA Trans Tml Comd (1)
 Army Tml (1)
 POE (1)
 OSA (1)
 AMS (1)
 WRAMC (1)
 AFIP (1)
 ARMY Pic Cen (2)
 USA Mbl Spt Cen (1)
 USA Elct Mat Agcy (25)
 Chicago Proc Dist (1)
 USARCARIB Sig Agcy (1)
 Sig Fld Maint Shops (3)
 JBUSMC (2)
 Units org under fol TOE (2 cy ea UNOINDC)

5-155	7-12	11-7	11-557	17-85	29-36
5-157	7-19	11-16	11-587	17-86	29-37
6-315	7-25	11-57	11-592	17-100	29-56
6-319	7-26	11-67	11-597	17-105	37
6-325	7-31	11-98	17	17-106	37-100
6-326	7-45	11-117	17-17	17-107	44-85
6-415	7-46	11-155	17-55	29-21	44-86
6-419	7-100	11-157	17-56	29-25	55-75
6-435	9-65	11-500	17-57	29-26	55-76
7	9-67	(AA-AC)	17-65	29-27	57
7-11	9-167	(4)	17-66	29-35	57-100

NG: State AG (3); units—same as active Army except allowance is one copy to each unit.

USAR: None.

For explanation of abbreviations used see AR 320-50.

TECHNICAL MANUAL

RADIO SETS

AN/VRC-13, AN/VRC-14, AND AN/VRC-15

CHANGES }
No. 2 }

TM 11-291, 7 March 1951, is changed as follows:

59.1. Antijamming Procedures
(Added)

If the radio set is jammed by unwanted signals, notify the immediate superior officer promptly, and continue to operate the equipment under any condition. Make no reference to the effect of the jamming signals during transmission. Follow the procedures below until the desired signal read-through is possible and communication re-established.

a. Slowly vary the TENTH MCS tuning knob (fig. 4) of the jammed radio set to both sides of the assigned frequency. This may affect some separation of the desired signal from the undesired jamming signal. However, if the control is in the detent position, turn the TENTH MCS knob fully counterclockwise. This will release the detent and permit continuous tuning. Again vary the TENTH MCS tuning knob as above. This may re-establish read-through on one side or the other of the assigned frequency.

b. Vary the SQUELCH control (fig. 4) slowly, from one position to another. If this does not decrease or eliminate the strength of the jamming signal, operate the control to the OFF position.

c. Locate the radio set so that an object such as a truck, tank, jeep, or tree is between the source of the jamming signal and the antenna. The strength of the jamming signal may be reduced or entirely eliminated.

d. If the above instructions fail to produce the desired results, request a change in call sign and frequency.

e. If, after a change in call sign and frequency, signal read-through is still impossible, use another means to get the message through and continue to operate the equipment. Continuance of operation may cause the enemy to be uncertain of the jamming success and to cease transmitting the jamming signal, or to switch to other frequencies.

DEPARTMENT OF THE ARMY
WASHINGTON 25, D. C., 3 September 1954

Continued operation of the radio set transmitter will keep the enemy uncertain as to the jamming success at what the enemy believes is the active communicating frequency of the radio transmitter.

Section IV. PREVENTIVE MAINTENANCE
(Added)

61.1. Definition of Preventive Maintenance

Preventive maintenance is work performed on equipment (usually when the equipment is not in use) to keep it in good working order so that breakdowns and needless interruptions in service will be kept to a minimum. Preventive maintenance differs from troubleshooting and repair since its object is to prevent certain troubles from occurring.

61.2. General Preventive Maintenance Techniques

a. Use #000 sandpaper to remove corrosion.
b. Use a clean, dry, lint-free cloth or a dry brush for cleaning.

- (1) If necessary, except for electrical contacts, moisten the cloth or brush with Solvent, Dry Cleaning (SD), and wipe the parts dry with a dry cloth.
- (2) Clean electrical contacts with a cloth moistened with carbon tetrachloride and wipe them dry with a dry cloth.

Caution: Repeated contact with carbon tetrachloride with the skin or prolonged breathing of the fumes is dangerous. Make sure adequate ventilation is provided.

c. If available, dry compressed air may be used at a line pressure not exceeding 60 pounds per square inch to remove dust from inaccessible places. Be careful, however, or mechanical damage from the air blast may result.

d. For further information on preventive maintenance techniques, refer to TB SIG 178.

61.2. Use of Preventive Maintenance Forms (figs. 39.1 and 39.2)

a. The decision as to which items on DA Forms 11-238 (Operator First Echelon Maintenance Check List for Signal Corps Equipment—Radio Communication, Direction Finding, Carrier, Radar) and 11-239 (Second and Third Echelon Maintenance Check List for Signal Corps Equipment—Radio Communication, Direction Finding, Carrier, Radar) are applicable to this equipment is a tactical decision to be made in the case of first echelon maintenance by the communication officer/chief or designated representative, and in the case of the second and third echelon maintenance, by the individual making the inspection. Instructions for the use of each form appear on the reverse side of the form.

b. Circled items on figures 39.1 and 39.2 are partially or totally applicable to Radio Set AN/VRC-13, Radio Set AN/VRC-14, and Radio Set AN/VRC-15. References in the ITEM block refer to paragraphs in the text that contain additional maintenance information.

61.3. Performing Exterior Preventive Maintenance

Caution: Tighten screws, bolts, and nuts carefully. Fittings tightened beyond the pressure for which they are designed will be damaged or broken.

a. Check for completeness and satisfactory condition of the radio equipment. The components of the equipment are listed in paragraph 6, and are illustrated in figures 3 through 17.

b. Check suitability of location and installation for normal operation (par. 4b).

c. Remove dirt and moisture from the antenna, microphones, headsets, chest sets, connectors, carrying bags, and all control panels.

d. Inspect the seating of items readily accessible from the exterior of the set such as pilot lamps, fuses, connectors, and switches.

e. Inspect controls for binding, scraping, excessive looseness, worn and chipped gears, misalignment, and positive action.

f. Clean and tighten the exterior of components and cases, shock mounts, antenna mount, coaxial transmission line leading from the radio set to the antenna, and all cable connections.

g. Inspect cases, mounting, antenna, and all exposed metal surfaces for rust, corrosion, and moisture.

h. Inspect cords, cables, wires, and shock mount for fraying, deterioration, kinks, and strains.

i. Inspect the antenna for corrosion, loose fit, and damaged insulator.

j. Inspect canvas bags, technical manuals, and cabling for mildew, tears, and fraying.

k. Inspect inaccessible items such as knobs, switches, volume control, squelch control, and pilot lamp assemblies for looseness.

l. Inspect storage batteries for dirt, loose terminals, electrolyte level, specific gravity of electrolyte, and damaged cases.

m. Inspect the meter dial and all dial windows for broken and damaged glass.

n. Clean the name plate, dial and meter windows, and pilot lamp assemblies.

o. Inspect shelters and covers for adequacy of weatherproofing.

61.4. Performing Interior Preventive Maintenance

Caution: Disconnect all power before performing the following operations. Upon completion, reconnect power and check for satisfactory operation.

a. Inspect electron tubes for loose envelopes, loose cap connectors, cracked sockets, and insufficient socket tension; remove the dust and dirt; if a vacuum tube checker is available, check the emission of receiver-type tubes.

b. Inspect fixed capacitors for leaks, bulges, and discoloration.

c. Inspect relay assemblies for loose mountings, burned, pitted, or corroded contacts, misalignment of contacts and springs, insufficient spring tension, and binding of armatures and hinged parts.

d. Inspect variable capacitors for dirt, moisture, misalignment of plates, and loose mountings.

e. Inspect bushings, resistors, and insulators for cracks, chipping, blistering, discoloration, and moisture.

f. Inspect terminals of large fixed capacitors and resistors for corrosion, dirt, and loose contacts.

g. Clean and tighten switches, relay cases, and the interior of chassis and cabinets not readily accessible.

h. Lubricate the equipment in accordance with applicable Department of the Army Lubrication Order.

i. Inspect Generator G-8/GRC (used for field installations) for brush wear, spring tension, arc-

ing, and fitting of commutator (refer to TM 11-5087, Generator G-8/GRC).

j. Clean and tighten connections and mountings of transformers, chokes, and potentiometers.

k. Inspect chokes, transformers, and potentiometers for overheating and oil leakage.

l. Before shipping or storing, remove the batteries from Remote Control C-438/GRC, Local Control C-434/GRC, and Case CY-590/GRC.

m. Inspect for leaking waterproof gaskets, and for loose and worn parts of gaskets.

n. Check to see that components have received adequate moistureproof and fungiproof treatment.

61.5. Lubrication, Weatherproofing, Rustproofing, and Painting

a. Lubrication. The only component of Radio Sets AN/VRC-13, AN/VRC-14, and AN/VRC-15 which may require lubrication in the field is Mounting MT-299/GR. Graphite, or other suitable lubricant, should be used on the following parts:

- (1) Metal rack hinges.
- (2) Wing-nut fasteners.
- (3) Rails on inner part of U-shaped castings.
- (4) Locking connector for slide in control unit.
- (5) Locking levers and locking strips.

b. Weatherproofing.

- (1) *General.* When operated under the severe climatic conditions of tropical, arctic, and desert regions, this equipment requires special treatment and maintenance. Fungus growth, insects, dust, corrosion, salt spray, excessive moisture, and extreme temperature are harmful to most materials.
- (2) *Tropical maintenance.* A special moistureproofing and fungiproofing treat-

ment has been given to all components of these radio sets at the factory. This treatment provides a reasonable degree of protection. Refer to TB SIG 13, and TB SIG 72.

(3) *Winter maintenance.* Special precautions necessary to prevent poor performance, or total operational failure of equipment in extremely low temperatures are explained in TB SIG 66 and TB SIG 219.

(4) *Desert maintenance.* Special precautions to prevent equipment failure in areas subject to extremely high temperatures, low humidity, and excessive sand and dust are explained in TB SIG 75.

c. Rustproofing and Painting.

(1) When the finish on the units has been badly scarred or damaged, rust and corrosion can be prevented by touching up bared surfaces. Use #00 or #000 sandpaper to clean the surface down to the bare metal. Obtain a bright smooth finish.

Caution: Do not use steel wool. Minute particles frequently enter the units and cause harmful internal shorting or grounding circuits.

(2) When a touch-up job is necessary, apply paint with a small brush. Remove rust from the case by cleaning corroded metal with solvent (SD). In severe cases it may be necessary to use solvent (SD) to soften the rust and to use sandpaper to complete the preparation for painting. Paint used will be authorized and consistent with existing regulations. Refer to TM 9-2851.

OPERATOR FIRST ECHELON MAINTENANCE CHECK LIST FOR SIGNAL CORPS EQUIPMENT
RADIO COMMUNICATION, DIRECTION FINDING, CARRIER, RADAR

INSTRUCTIONS: See other side

EQUIPMENT NOMENCLATURE **RADIO SETS AN/VRC-13, AN/VRC-14, AND AN/VRC-15** EQUIPMENT SERIAL NO.

LEGEND FOR MARKING CONDITIONS: ✓ Satisfactory; X Adjustment, repair or replacement required; ⊕ Defect corrected.
 NOTE: Strike out items not applicable.

DAILY

NO.	ITEM	CONDITION						
		S	M	T	W	T	F	S
①	COMPLETENESS AND GENERAL CONDITION OF EQUIPMENT (receiver, transmitter, carrying cases, wire and cable, microphones, tubes, spare parts, technical manuals and accessories). PAR. 81.30							
②	LOCATION AND INSTALLATION SUITABLE FOR NORMAL OPERATION. PAR. 81.30							
③	CLEAN DIRT AND MOISTURE FROM ANTENNA, MICROPHONE, HEADSETS, CHESTSETS, KEYS, JACKS, PLUGS, TELEPHONES, CARRYING BAGS, COMPONENT PANELS.							
④	INSPECT SEATING OF READILY ACCESSIBLE "PLUCK-OUT" ITEMS: TUBES, LAMPS, CRYSTALS, FUSES, CONNECTORS, VIBRATORS, PLUG-IN COILS AND RESISTORS.							
⑤	INSPECT CONTROLS FOR BINDING, SCRAPING, EXCESSIVE LOOSENESS, WORN OR CHIPPED BEARS, MISALIGNMENT, POSITIVE ACTION.							
⑥	CHECK FOR NORMAL OPERATION.							

WEEKLY

NO.	ITEM	COMPL. DATE	NO.	ITEM	COND. DATE
①	CLEAN AND TIGHTEN EXTERIOR OF COMPONENTS AND CASES, RACK MOUNTS, SHOCK MOUNTS, ANTENNA MOUNTS, COAXIAL TRANSMISSION LINES, WAVE GUIDES, AND CABLE CONNECTIONS. PAR. 81.30		②	INSPECT STORAGE BATTERIES FOR DIRT, LOOSE TERMINALS, ELECTROLITE LEVEL AND SPECIFIC GRAVITY, AND DAMAGED CASES.	
②	INSPECT CASES, MOUNTINGS, ANTENNAS, TOWERS, AND EXPOSED METAL SURFACES, FOR RUST, CORROSION, AND MOISTURE.		③	CLEAN AIR FILTERS, GRASS NAME PLATES, DIAL AND METER WINDOWS, JEWEL ASSEMBLIES.	
③	INSPECT COND. CABLE, WIRE, AND SHOCK MOUNTS FOR CUTS, BREAKS, FRAYING, DETERIORATION, KINKS, AND STRAIN.		④	INSPECT METERS FOR DAMAGED GLASS AND CASES.	
④	INSPECT ANTENNA FOR ECCENTRICITIES, CORROSION, LOOSE FIT, DAMAGED INSULATORS AND REFLECTORS.		⑤	INSPECT SHELTERS AND COVERS FOR ADEQUACY OF WEATHER-PROOFING.	
⑤	INSPECT CANVAS ITEMS, LEATHER, AND CABLING FOR MILDew, TEARS, AND FRAYING.		⑥	CHECK ANTENNA GUY WIRES FOR LOOSENESS AND PROPER TENSION.	
⑥	INSPECT FOR LOOSENESS OF ACCESSIBLE ITEMS: SWITCHES, KNOBS, JACKS, CONNECTORS, ELECTRICAL TRANSFORMERS, POWER-STATS, RELAYS, SELSYNS, MOTORS, BLOWERS, CAPACITORS, GENERATORS, AND PILOT LIGHT ASSEMBLIES.		⑦	CHECK TERMINAL BOX COVERS FOR CRACKS, LEAKS, DAMAGED GASKETS, DIRT AND GREASE.	

⑦ IF DEFICIENCIES NOTED ARE NOT CORRECTED DURING INSPECTION, INDICATE ACTION TAKEN FOR CORRECTION.

DA FORM 11-238

REPLACES DA FORM 439, 3 DEC 50, WHICH IS OBSOLETE.

TM 291-C2-1

Figure 39.1 (Added) DA Form 11-238.

SECOND AND THIRD ECHelon MAINTENANCE CHECK LIST FOR SIGNAL CORPS EQUIPMENT			
RADIO COMMUNICATION, SECTION (RIBINO, CARRIER, BOARD)			
EQUIPMENT IDENTIFICATION: See other side			
EQUIPMENT IDENTIFICATION RADIO SETS AN/VRC-13, AN/VRC-14, AND AN/VRC-15		EQUIPMENT SERIAL NO.	
LOGSHEET FOR MAINTENANCE CONDITIONS: <input checked="" type="checkbox"/> Satisfactory; <input type="checkbox"/> Adjustment, repair or replacement required; <input type="checkbox"/> Defect corrected.			
NOTE: Serial nos. items not applicable.			
NO.	ITEM	NO.	ITEM
1	COMPLETENESS AND GENERAL CONDITION OF EQUIPMENT (enclosure, transmitter, carrying case, wire and cable, microphone, tubes, spare parts, technical manuals and accessories).	7A	ELECTRON TUBES - INSPECT FOR LOOSE ENVELOPES, CAP CONNECTIONS, CRACKED SOCKETS; INSUFFICIENT SOCKET SPRING TENSION; CLEAN DUST AND OILY CARTRIDGES; CHECK CONDITION OF SOCKETED TUBE TUBES. PAR. 91.4.2
2	LOCATION AND INSTALLATION SUITABLE FOR NORMAL OPERATION.	7B	INSPECT FILM OUT-GOING FOR LOOSE PARTS, OIL, MISALIGNMENT AND CORROSION.
3	CLEAN DUST AND MOISTURE FROM ANTENNAE, MICROPHONE, HEADSETS, CHECKETS, REFR. JARNS, PLATES, TELEPHONES, CARRYING CASES, COMPONENT PANELS.	7C	INSPECT FIXED CAPACITORS FOR LEAKS, OILS, AND DISCOLORATION.
4	INSPECT SEATING OF READILY ACCESSIBLE "PUSH-OUT" ITEMS: TUBES, LAMPS, CRYSTALS, FUSES, CONNECTIONS, VIBRATORS, PUSH-IN COILS AND RESISTORS.	7D	INSPECT DELAY AND CIRCUIT BREAKER ASSEMBLIES FOR LOOSE MOVEMENT; BURNED, PITTED, CORRODED CONTACTS; MISALIGNMENT OF CONTACTS AND SPRINGS; INSUFFICIENT SPRING TENSION; BENDING OF PLUNGERS AND RING PARTS. PAR. 91.4.3
5	INSPECT CONTROLS FOR BINDING, SCRAPPING, EXCESSIVE LOOSENESS, WORN OR CRIPPED GEARS, MISALIGNMENT, POSITIVE ACTION.	7E	INSPECT VARIABLE CAPACITORS FOR OIL, MOISTURE, MISALIGNMENT OF PLATES, AND LOOSE MOVEMENT.
6	CHECK FOR NORMAL OPERATION.	7F	INSPECT RESISTORS, OILS, AND INDUCTIONS FOR CRACKS, CHIPPING, DISLINTING, DISCOLORATION AND MOISTURE.
7	CLEAN AND TIGHTEN EXTERIOR OF COMPONENTS AND CASES, BACK MOUNTS, SOCKET MOUNTS, ANTENNA MOUNTS, COAXIAL TRANSMISSION LINES, WAVE GUIDES, AND CABLE CONNECTIONS.	7G	INSPECT TERMINALS OF LARGE FIXED CAPACITORS AND RESISTORS FOR CORROSION, OIL AND LOOSE CONTACTS.
8	INSPECT CASES, MOUNTINGS, ANTENNAE, TUBING, AND EXPOSED METAL SURFACES, FOR RUST, CORROSION, AND MOISTURE.	7H	CLEAN AND TIGHTEN SWITCHES, TERMINAL BLOCKS, PLUGS, RELAY CASES, AND INTERIORS OF CRABBS AND CABINETS NOT READILY ACCESSIBLE.
9	INSPECT CORD, CABLE, WIRE, AND SOCKET MOUNTS FOR CUTS, BREAKS, FRAYING, DETENTIONING, BURNS, AND STRAINS.	7I	INSPECT TERMINAL BLOCKS FOR LOOSE CONNECTIONS, CRACKS AND BREAKS.
10	INSPECT ANTENNA FOR ECCENTRICITIES, CORROSION, LOOSE FIT, DAMAGED INSULATORS AND REFLECTORS.	7J	CHECK SETTINGS OF ADJUSTABLE DELAYS.
11	INSPECT CANNES ITEMS, LEATHERS, AND CABLES FOR BILDER, TEARS, AND FRAYING.	7K	LABELED EQUIPMENT IN ACCORDANCE WITH APPLICABLE DEPARTMENT OF THE ARMY LABELING INSTRUCTIONS. PAR. 91.4.4
12	INSPECT FOR LOOSENESS OF ACCESSIBLE ITEMS: SWITCHES, BURNS, JACKS, CONNECTIONS, ELECTRICAL TRANSFORMERS, POTENTIOMETERS, RELAYS, RELAYING, MOTORS, OILERS, CAPACITORS, GENERATORS, AND PILOT LIGHT ASSEMBLIES.	7L	INSPECT GENERATORS, AMPLIFIERS, SYNCHRONIZERS, FOR BRUSH WEAR, SPRING TENSION, AGING, AND FITTING OF COMPONENTS. PAR. 91.4.5
13	INSPECT STORAGE BATTERIES FOR OIL, LOOSE TERMINALS, ELECTROLYTE LEVEL AND SPECIFIC GRAVITY, AND DAMAGED CASES.	7M	CLEAN AND TIGHTEN CONNECTIONS AND MOUNTINGS FOR TRANSFORMERS, COILS, POTENTIOMETERS, AND INDICATORS.
14	CLEAN AIR FILTERS, BRASS NAME PLATES, DIAL AND METER WINDOWS, JACKET ASSEMBLIES.	7N	INSPECT TRANSFORMERS, COILS, POTENTIOMETERS, AND INDICATORS FOR OVERHEATING AND OIL-LEAKAGE.
15	INSPECT METERS FOR DAMAGED GLASS AND CASES.	7O	BEFORE SHIPPING OR STORING - REMOVE BATTERIES. PAR. 91.4.6
16	INSPECT SHELTERS AND COVERING FOR ADEQUACY OF WEATHERPROOFING.	7P	INSPECT CAPTURED RAY TUBES FOR BURNED SCREENS.
17	CHECK ANTENNA OUT DRIVES FOR SPRINGING AND PROPER TENSION.	7Q	INSPECT BATTERIES FOR SHORTS AND DEAD CELLS.
18	CHECK TERMINAL BOX COVERS FOR CRACKS, LEAKS, DAMAGED CASES, OIL AND OILERS.	7R	INSPECT FOR LEAKING WATERPROOF CASSETS, WORN OR LOOSE PARTS.
19	IF DEFICIENCIES NOTED ARE NOT CORRECTED DURING INSPECTION, INDICATE ACTION TAKEN FOR CORRECTIONS.	7S	MOISTURE AND FUMI PROOF. PAR. 91.4.7

DA FORM 11-239

REPLACES DA FORM 959, 2 DEC 50, WHICH IS OBSOLETE.

11-239-2

Figure 39.3 (Added) DA Form 11-239.

TM 291-22-2

LAG 418.44 (8 Aug 54)

BY ORDER OF THE SECRETARY OF THE ARMY:

M. B. RIDGWAY,
General, United States Army,
Chief of Staff.

OFFICIAL:

JOHN A. KLEIN,
Major General, United States Army,
The Adjutant General.

DISTRIBUTION:

Active Army:

Tec Svc, DA (1)
Tec Svc Bd (1)
AFF (5)
AFF Bd (incl ea Test Sec)
(1)
Army AA Comd (2)
OS Maj Comd (5)
OS Base Comd (5)
Log Comd (5)
MDW (1)
Armies (5)
Corps (2)
Tng Div (2)
Ft & Op (2)
Gen & Br Svc Sch (5)
SigC Sch (25)
Gen Depots (2)
SigC Sec, Gen Depots (10)
SigC Depots (20)

POB (2)
OS Sup Agencies (2)
SigC Fld Maint Shops (3)
SigC Lab (5)
MII Dist (1)
Units organized under fol-
lowing T/O & E's:
6-485A, FA Bn Hv Sp
(155mm-3" How) (2)
6-515A, FA Bn (VHv
Towed 240mm How)
(2)
7, Inf Div (2)
11-127, Sig Rep Co (2)
11-128A, Sig Depot Co
(2)
11-500A (AA through
AE), Sig Admin
Teams (2)

Units organized under fol-
lowing T/O & E's—
Continued
11-587A, Sig Base Maint
Co (2)
11-592A, Hq. & Hq Co,
Sig Base Depot (2)
11-597A, Sig Base Depot
Co (2)
17-51A, Armd Cav Regt
(2)
17-55A, Armd Cav Re-
con Bn (2)
17-57, Recon Co (2)
19-57A, MP Co (Sep) or
MP Co, MP Bn (2)
57A, Abn Div (2)

NG: None.

USAR: None.

Unless otherwise noted, distribution applies to ConUS and overseas.
For explanation of abbreviations used, see SR 220-50-1.

TECHNICAL MANUAL

RADIO SETS AN/V C-13, AN/VRC-14 AND AN/VRC-15

CHANGES }
No. 1 }

DEPARTMENT OF THE ARMY
WASHINGTON 25, D. C., 18 October 1951

TM 11-291, 7 March 1951, is changed as follows:

86. Cables

When normal indications * * * in figure 22. The schematic diagram of Cable Assembly CX-1211/U is shown in figure 83. The above mentioned * * * making continuity checks.

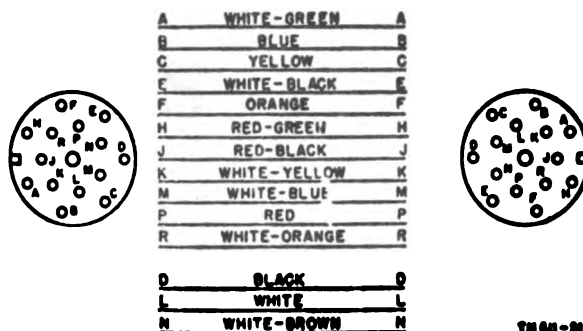


Figure 83 (Added). Cable Assembly CX-1211/U, schematic diagram.

[AG 413.44 (1 Oct 51)]

BY ORDER OF THE SECRETARY OF THE ARMY:

OFFICIAL:

WM. E. BERGIN
Major General, USA
The Adjutant General

J. LAWTON COLLINS
Chief of Staff, United States Army

DISTRIBUTION:

Tech Svc (1); Arm & Svc Bd (1); AFF Bd (ea Svc Test Sec) (1); AFF (5); AA Comd (2); OS Maj Comd (5); Base Comd (5); MIDW (5); Log Comd (2); A (20); CHQ (2); FC (2); Sch (2) except 11 (25); Gen Dep (2); Dep 11 (20) except Sig Sec, Gen Dep (10); Tng Div (2); PE (10), OSD (2); Lab 11 (5); 4th & 5th Ech Maint Shops 11 (3); Two (2) copies to each of the following T/O & E's: 6-419; 11-107; 11-127; 11-500 CA, CB, CC, CD; 11-587; 11-592; 11-597; 17-115; 17-116; 17-125; SPECIAL DISTRIBUTION.

For explanation of distribution formula, see SR 310-90-1.

DEPARTMENT OF THE ARMY TECHNICAL MANUAL
TM 11-291

RADIO SETS
AN/VRC-13
AN/VRC-14
AND
AN/VRC-15

DEPARTMENT OF THE ARMY • MARCH 1951

*United States Government Printing Office
Washington : 1951*

DEPARTMENT OF THE ARMY

WASHINGTON 25, D. C., 7 March 1951

TM 11-291 is published for the information and guidance of all concerned.

[AG 413.44 (1 Mar 51)]

BY ORDER OF THE SECRETARY OF THE ARMY:

OFFICIAL:

EDWARD F. WITSELL
Major General, USA
The Adjutant General

J. LAWTON COLLINS

Chief of Staff, United States Army

DISTRIBUTION:

Tech Svc (2) except 11 (65); Arm & Svc Bd (1); AFF Bd (ea Svc Test Sec) (1); AFF (5); AA Comd (2); OS Maj Comd (5); Base Comd (5); MDW (5); A (20); CHQ (2); FC (2); Sch (2) except 6, 7, 17, 44 (50), 11 (100); Gen Dep (2); Dep 11 (20) except Sig Sec, Gen Dep (10); Tng Div (2); PE (10), OSD (2); Lab 11 (5); 4th & 5th Ech Maint Shops 11 (3); Two (2) copies to each of the following T/O & E's: 6-419; 11-107; 11-127; 11-500 CA, CB, CC, CD; 11-587; 11-592; 11-597; 17-115; 17-116; 17-125; SPECIAL DISTRIBUTION.

For explanation of distribution formula, see SR 310-90-1.

CONTENTS

	<i>Paragraph</i>	<i>Page</i>
CHAPTER 1. INTRODUCTION.		
<i>Section I.</i> General.....	1-3	1
<i>II.</i> Description and data.....	4-19	3
CHAPTER 2. INSTALLATION INSTRUCTIONS.		
<i>Section I.</i> Introduction.....	20-21	19
<i>II.</i> Vehicular installation details.....	22-27	19
<i>III.</i> Equipment installation details.....	28-34	27
<i>IV.</i> Adjustments for operation.....	35-36	30
<i>V.</i> Control Group AN/GRA-6 and miscellaneous equipment.....	37-38	31
CHAPTER 3. OPERATING INSTRUCTIONS.		
<i>Section I.</i> Modes of operation.....	39-43	36
<i>II.</i> Controls and instruments.....	44-52	36
<i>III.</i> Operation.....	53-61	45
CHAPTER 4. THEORY OF OPERATION.		
<i>Section I.</i> Introduction.....	62-65	50
<i>II.</i> Power distribution and push-to-talk control circuits.....	66-69	51
<i>III.</i> Operation from Control Group AN/GRA-6.....	70-74	56
<i>IV.</i> Unit theory.....	75-79	58
CHAPTER 5. ORGANIZATIONAL MAINTENANCE.		
<i>Section I.</i> Trouble shooting.....	80-87	65
<i>II.</i> Replacement of parts.....	88-93	72
CHAPTER 6. AUXILIARY EQUIPMENT.	94-99	82
APPENDIX I. REFERENCES.....		90
II. IDENTIFICATION TABLE OF PARTS.....		92
III. RELATED RADIO SETS.....		102
INDEX.....		111


WARNING

HIGH VOLTAGE

**is used in the operation
of this equipment.**

DEATH ON CONTACT

**may result if operating personnel fail
to observe safety precautions.**

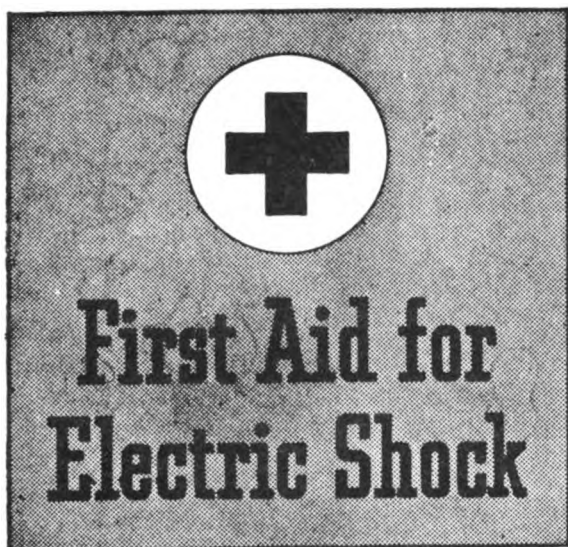

RESCUE.

In case of electric shock, shut off the high voltage at once and ground the circuits. If the high voltage cannot be turned off without delay, free the victim from contact with the live conductor as promptly as possible. Avoid direct contact with either the live conductor or the victim's body. Use a dry board, dry clothing, or other nonconductor to free the victim. An ax may be used to cut the high-voltage wire. Use extreme caution to avoid the resulting electric flash.

SYMPTOMS.

a. Breathing stops abruptly in electric shock if the current passes through the breathing center at the base of the brain. If the shock has not been too severe, the breath center recovers after a while and normal breathing is resumed, provided that a sufficient supply of air has been furnished meanwhile by artificial respiration.

b. The victim is usually very white or blue. The pulse is very weak or entirely absent and unconsciousness is complete. Burns are usually present. The victim's body may become rigid or stiff in a very few minutes. This condition is due to the action of electricity and is not to be considered rigor mortis. Artificial respiration must still be given, as several such cases are reported to have recovered. The ordinary and general tests for death should never be accepted.

TREATMENT.

a. Start artificial respiration immediately. At the same time send for a medical officer, if assistance is available. Do not leave the victim unattended. Perform artificial respiration at the scene of the accident, unless the victim's or operator's life is endangered from such action. In this case only, remove the victim to another location, but no farther than

is necessary for safety. If the new location is more than a few feet away, artificial respiration should be given while the victim is being moved. If the method of transportation prohibits the use of the Shaeffer prone pressure method, other methods of resuscitation may be used. Pressure may be exerted on the front of the victim's diaphragm, or the direct mouth-to-mouth method may be used. Artificial respiration, once started, must be continued, without loss of rhythm.

b. Lay the victim in a prone position, one arm extended directly overhead, and the other arm bent at the elbow so that the back of the hand supports the head. The face should be turned away from the bent elbow so that the nose and mouth are free for breathing.

c. Open the victim's mouth and remove any foreign bodies, such as false teeth, chewing gum, or tobacco. The mouth should remain open, with the tongue extended. Do not permit the victim to draw his tongue back into his mouth or throat.

d. If an assistant is available during resuscitation, he should loosen any tight clothing to permit free circulation of blood and to prevent restriction of breathing. He should see that the victim is kept warm, by applying blankets or other covering, or by applying hot rocks or bricks wrapped in cloth or paper to prevent injury to the victim. The assistant should also be ever watchful to see that the victim does not swallow his tongue. He should continually wipe from the victim's mouth any frothy mucus or saliva that may collect and interfere with respiration.

e. The resuscitating operator should straddle the victim's thighs, or one leg, in such manner that:

(1) the operator's arms and thighs will be vertical while applying pressure on the small of the victim's back;

(2) the operator's fingers are in a natural position on the victim's back with the little finger lying on the last rib;

(3) the heels of the hands rest on either side of the spine as far apart as convenient without allowing the hands to slip off the victim;

(4) the operator's elbows are straight and locked.

f. The resuscitation procedure is as follows:


(1) Exert downward pressure, not exceeding 60 pounds, for 1 second.

(2) Swing back, suddenly releasing pressure, and sit on the heels.

(3) After 2 seconds rest, swing forward again, positioning the hands exactly as before, and apply pressure for another second.

g. The forward swing, positioning of the hands, and the downward pressure should be accomplished in one continuous motion, which requires 1 second. The release and backward swing require 1 second. The addition of the 2-second rest makes a total of 4

TL15338-D

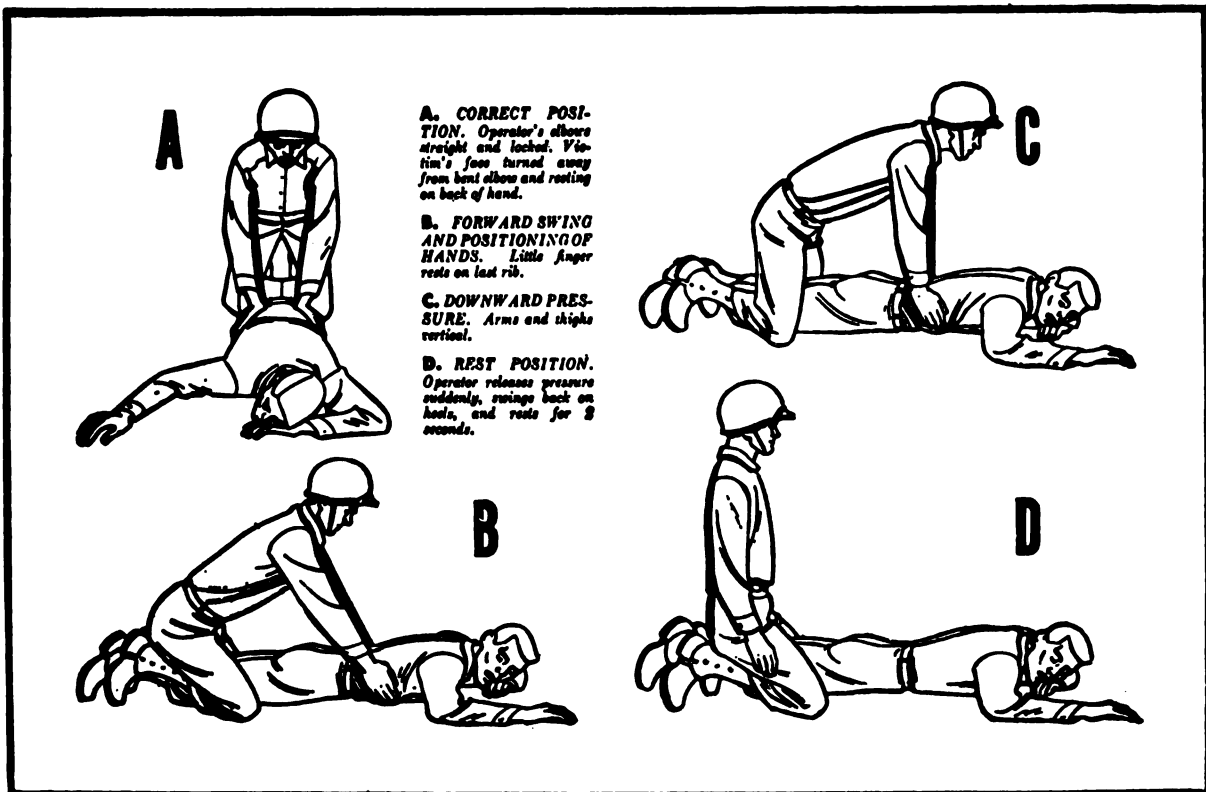

seconds for a complete cycle. Until the operator is thoroughly familiar with the correct cadence of the cycle, he should count the seconds aloud, speaking distinctly and counting evenly in thousands. Example: one thousand and one, one thousand and two, etc.

h. Artificial respiration should be continued until the victim regains normal breathing or is pronounced dead by a medical officer. Since it may be necessary to continue resuscitation for several hours, relief operators should be used if available.

RELIEVING OPERATOR.

The relief operator kneels beside the operator and follows him through several complete cycles. When the relief operator is sure he has the correct rhythm, he places his hands on the operator's hands without applying pressure. This indicates that he is ready to take over. On the backward swing, the operator moves and the relief operator takes his position. The relieved operator follows through several complete cycles to be sure that the new operator has the correct rhythm. He remains alert to take over instantly if the new operator falters or hesitates on the cycle.

STIMULANTS.

a. If an inhalant stimulant is used, such as aro-

matic spirits of ammonia, the individual administering the stimulant should first test it himself to see how close he can hold the inhalant to his own nostril for comfortable breathing. Be sure that the inhalant is not held any closer to the victim's nostrils, and then for only 1 or 2 seconds every minute.

b. After the victim has regained consciousness, he may be given hot coffee, hot tea, or a glass of water containing $\frac{1}{2}$ teaspoon of aromatic spirits of ammonia. Do not give any liquids to an unconscious victim.

CAUTIONS.

a. After the victim revives, keep him LYING QUIETLY. Any injury a person may have received may cause a condition of shock. Shock is present if the victim is pale and has a cold sweat, his pulse is weak and rapid, and his breathing is short and gasping.

b. Keep the victim lying flat on his back, with his head lower than the rest of his body and his hips elevated. Be sure that there is no tight clothing to restrict the free circulation of blood or hinder natural breathing. Keep him warm and quiet.

c. A resuscitated victim must be watched carefully as he may suddenly stop breathing. Never leave a resuscitated person alone until it is CERTAIN that he is fully conscious and breathing normally.

715339-E

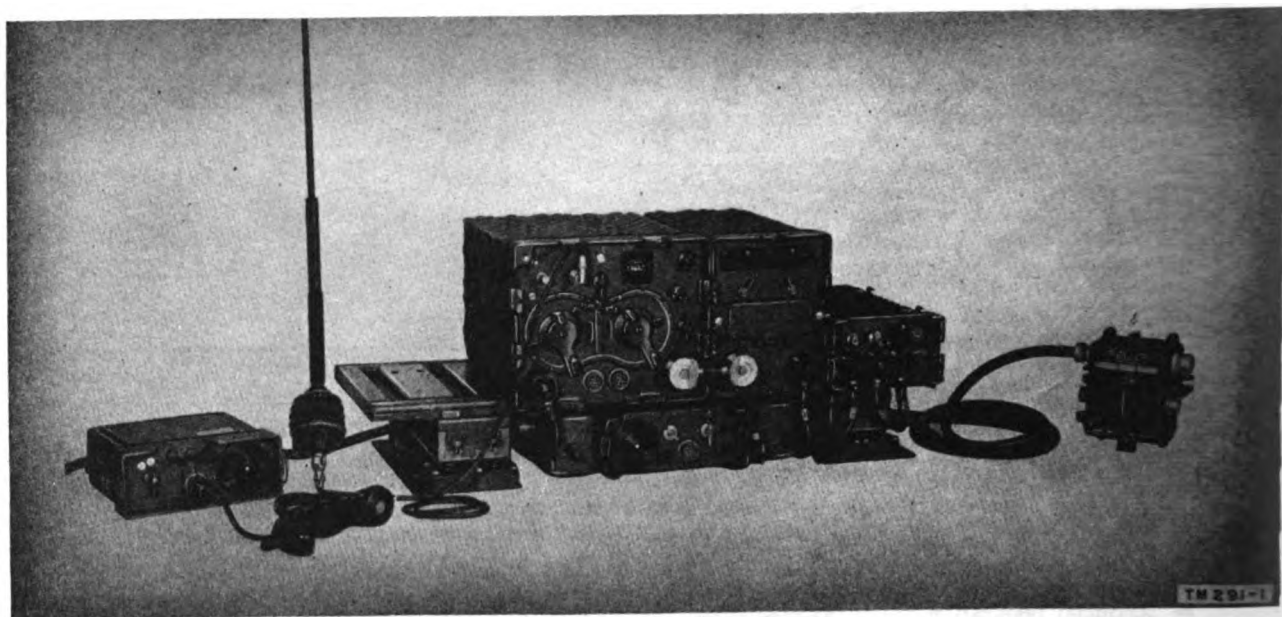


Figure 1. Radio Set AN/VRC-13.

CHAPTER 1

INTRODUCTION

Section I. GENERAL

1. Scope

a. This technical manual contains instructions for the installation, operation, and organizational maintenance of Radio Sets AN/VRC-13, -14, and -15. The information is intended primarily for operators and organizational maintenance personnel and, hence, is restricted to system considerations. Detailed information on the various units which comprise the several systems is presented only so far as system applications are involved. Detailed field maintenance instructions for the individual major components are published in separate manuals.

b. Certain schematic drawings for this equipment are included separately, because of their size, in an envelope following the index. These include figures 18, 40, 41, 71, 72, 76, 77, 78, 79, 80, 81, and 82. To this extent, therefore, figure numbers throughout the manual are not in strict numerical sequence, and whenever the instructions refer to figures, 18, 40, 41, 71, 72, 76, 77, 78, 79, 80, 81, or 82, the illustration will be found in the envelope at the back of the manual.

2. Nomenclature

The basic similarities of Radio Sets AN/VRC-13, -14, and -15 allow simultaneous treatment of these sets in most instances. To expedite this simultaneous treatment, an arbitrary nomenclature has been devised to refer to the sets and their respective units collectively. This expedient is outlined below.

a. The over-all systems, Radio Sets AN/VRC-13, -14, and -15, are referred to collectively as the *radio sets*. Wherever instructions are limited to a particular set or group of sets, specific reference is made to that effect and full nomenclature (for example, Radio Set AN/VRC-13) is used for the set involved.

b. The term *Set 1* is used in this manual to designate the receiver-transmitter included in each of the radio sets. Set 1 may be any one of Receiver-Transmitters RT-66/GRC, RT-67/GRC, or RT-68/GRC. The particular Set 1 which is used in each of the radio sets is listed in paragraph 6. The term *Set 2* refers to Receiver-Transmitter RT-70/GRC, which is not used in this system.

c. The term *Set 1 power supply* is used to designate Power Supply PP-109/GR or PP-112/GR, either of which may be used to supply operating voltages for Set 1 only. The battery voltage available, 12 or 24 volts, determines which power supply must be used (par. 11).

d. AF Amplifier AM-65/GRC, a common component of all the radio sets, is referred to in this manual as the *interphone amplifier*.

e. The term *amplifier power supply* is used in this manual to designate Power Supply PP-281/GRC or PP-282/GRC, either of which is used to supply operating voltage for the interphone amplifier in all of the radio sets. The battery voltage available, 12 or 24 volts, determines which power supply must be used.


f. To identify the various control units of the radio sets in a functional manner, the following terms are used: Control Box C-375/VRC is referred to as the *interphone box*; Local Control C-434/GRC is referred to as the *local control unit*; and Remote Control C-33/GRC is referred to as the *remote control unit*.

3. Forms and Records

The following forms will be used for reporting unsatisfactory conditions of Army matériel and equipment.

a. DD Form 6, (Report of Damaged or Improper Shipment) will be filled out and forwarded as prescribed in SR 745-45-5.

b. DA AGO Form 468 (Unsatisfactory Equip-

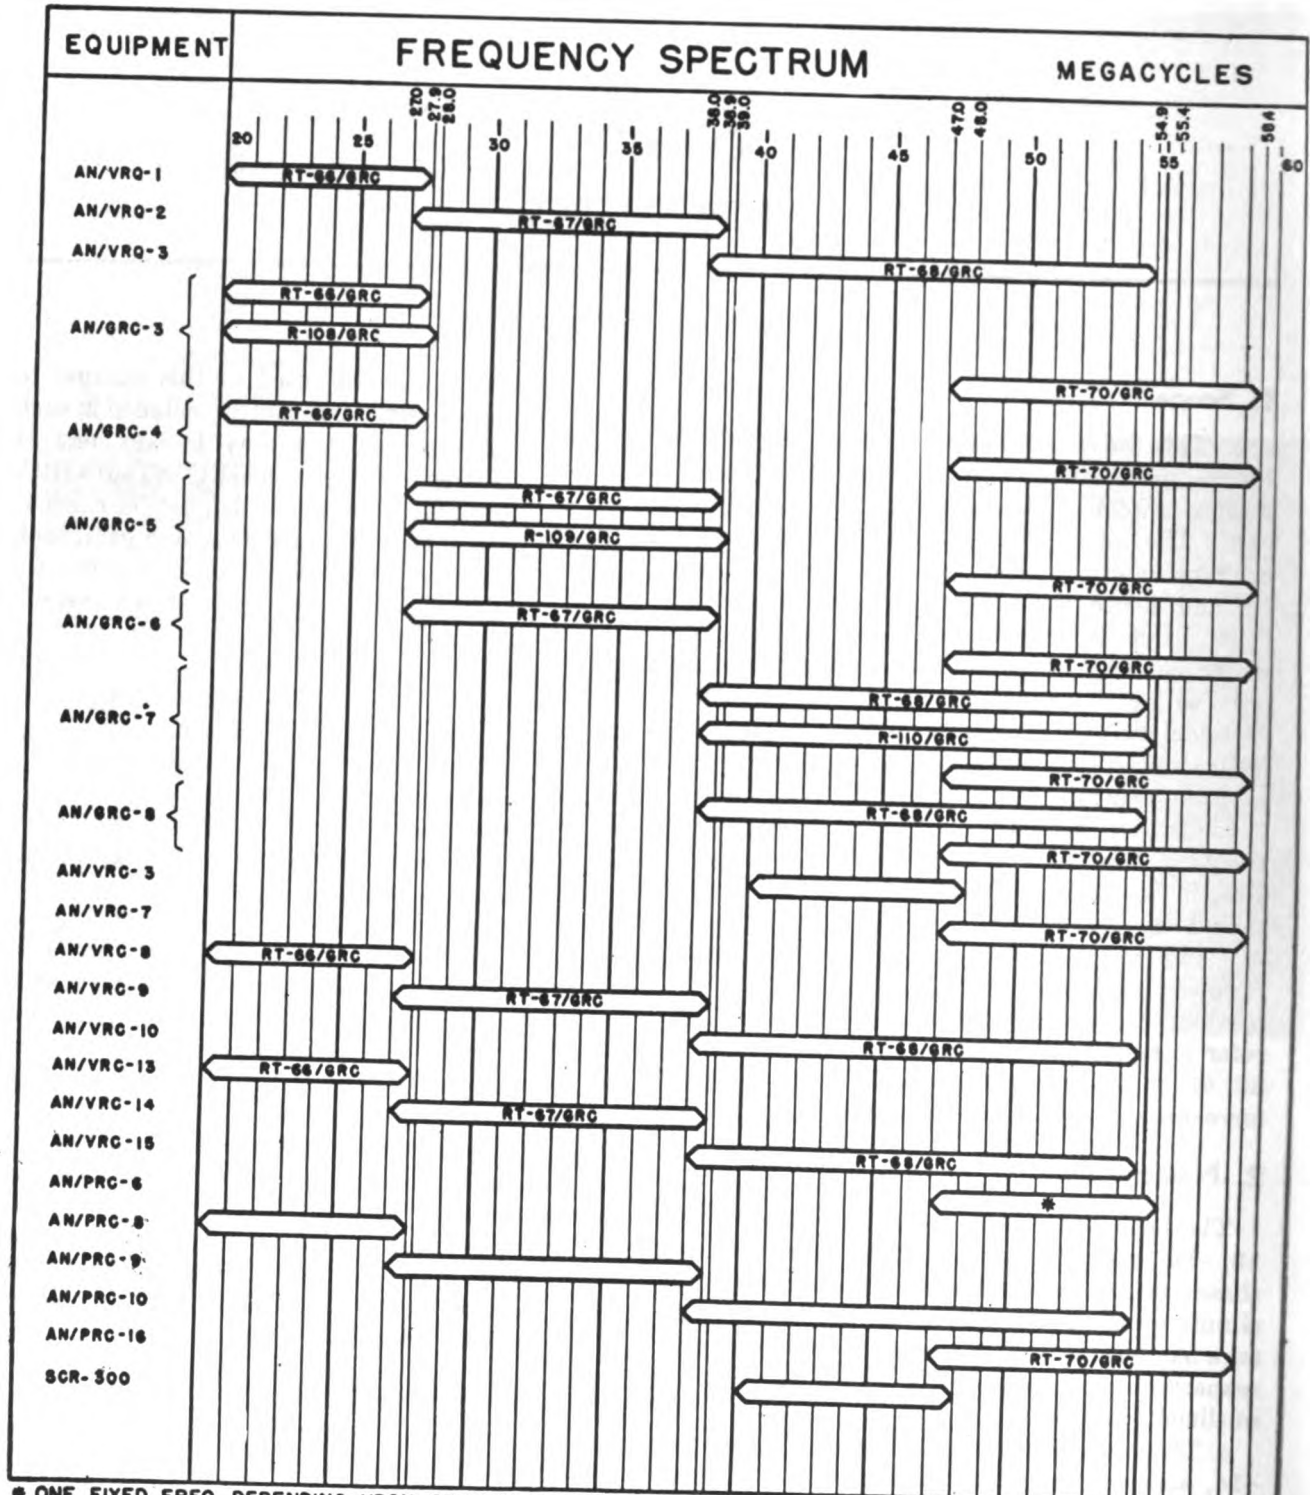

* ONE FIXED FREQ. DEPENDING UPON CRYSTAL USED.

TM 898-2

Figure 8. Frequency spectrum chart.

ment Report) will be filled out and forwarded to the Office of the Chief Signal Officer as prescribed in SR 700-45-5.

c. WD AGO Form 419 (Preventive Maintenance

Checklist for Signal Corps Equipment) will be prepared in accordance with instructions on the back of the form.

d. Use other forms and records as authorized.

Section II. DESCRIPTION AND DATA

4. Purpose of Equipment

a. Radio Sets AN/VRC-13, -14, and -15 provide f-m (frequency-modulated) radiotelephone facilities within the frequency range of 20 to 54.9 mc (megacycles). The specific frequency range of each set and other radio equipment with which the sets can communicate is indicated in the frequency spectrum chart (fig. 2). An overlap of .9 mc is provided between the bands covered by Radio Sets AN/VRC-13 and -14. Similarly a .9-mc overlap exists between the bands covered by Radio Sets AN/VRC-14, and -15. The purpose of this overlap is to permit the establishment of liaison between sets that are operated in different tactical groups.

b. The radio sets can be installed and operated in trucks, personnel carriers, tanks, armored vehicles, weapons carriers, and other authorized vehicles (par. 8). Primarily, the sets are designed for short range operation within and between armored, artillery, and infantry units. Specifically, Radio Set AN/VRC-13 is intended for armored use, Radio Set AN/VRC-14 is intended for artillery use, and Radio Set AN/VRC-15 is intended for infantry use.

5. Technical Characteristics

Type of transmission and reception.	Voice and 1600-cycle f-m signals.
Frequency range:	
Radio Set AN/VRC-13.	20 to 27.9 mc.
Radio Set AN/VRC-14.	27 to 38.9 mc.
Radio Set AN/VRC-15.	38 to 54.9 mc.
Type of tuning.....	Choice of detent, preset channels, or continuous tuning.
Number of detent channels available:	
Radio Set AN/VRC-13.	80.
Radio Set AN/VRC-14.	120.
Radio Set AN/VRC-15.	170.
Number of preset detented channels.	2.
Detent channel spacing...	100 kc (kilocycles).
Communication range:	
Vehicles in motion.....	10 miles, approximately.
Stationary vehicles.....	15 miles, approximately

Type of transmission and reception—Continued.	Voice and 1600-cycle f-m signals—Continued.
Antenna requirements.....	One whip type serves both the transmitter and the receiver circuits.
Antenna circuit tuning....	Transmitter antenna circuit tunable at 1-mc intervals for a particular antenna installation by means of antenna tuning control. After adjustment, tuning is automatic for all channels. Receiver antenna circuit tuned at one frequency for use over frequency range.
Receiver bandwidth.....	Approximately 80 kc, 6 db (decibel) down.
Receiver sensitivity.....	30-db signal-plus-noise to noise ratio with $\frac{1}{2}$ - μ (microvolt) input signal.
Types of operation.....	(1) Standard push-to-talk single frequency operation. (2) Remote push-to-talk and power control operation up to a distance of approximately 2 miles using the AN/GRA-6. (3) Simple telephone circuit operation between the remote and local positions. (4) Interphone operation between various points in an installation.
Total power drain.....	From 60 to 230 watts depending upon the mode of operation.
Unit power drains:	
Receiver-transmitter:	
12.6-volt input.....	Input 2.3 amperes on stand-by and 11.9 amperes on transmission.
25.2-volt input.....	Input 1.5 amperes on stand-by and 7.3 amperes on transmission.
Interphone amplifier:	
12.6-volt input.....	Input 2.6 amperes on stand-by, and 3.2 amperes on transmission.
25.2-volt input.....	Input 1.4 amperes on stand-by, and 1.8 amperes on transmission.
Transmitter r-f (radio-frequency) power output.	16 watts on HIGH power; 2 watts on LOW power.

Type of transmission and reception—Continued. Voice and 1600-cycle f-m signals—Continued.

Receiver a-f (audio-frequency) power output. Approximately 1 watt and 50 mw (milliwatts) at speaker and phone output terminals respectively; approximately 30 mw at fixed level output terminals. (Input to interphone amplifier.)

Interphone a-f power output:

Set 1 + Set 2 + Interphone. 1800 mw.

Set 1 + Interphone..... 350 mw.

Set 2 + Interphone..... 350 mw.

Microphone input impedance. 150 ohms.

Type of transmission and reception—Continued. Voice and 1600-cycle f-m signals—Continued.

Audio output impedance... 150 ohms at Set 1 + Set 2 + Interphone output of interphone amplifier; 600 ohms at all other output terminals.

6. Table of Components

A composite table of components for all of the radio sets is presented below. All dimensions and weights are approximate. The table includes components of the basic sets only. For installation and operation in particular vehicles, the additional equipment listed in paragraph 8 is also required.

Component	No. for radio sets			Dimensions					Unit weight (lb)
	Radio Set AN/VRC-13	Radio Set AN/VRC-14	Radio Set AN/VRC-15	Height (in.)	Depth (in.)	Width (in.)	Volume (cu ft)		
Receiver-Transmitter RT-66/GRC.....	1			9	13	11¼	0.76	35	
Receiver-Transmitter RT-67/GRC.....		1		9	13	11¼	.76	35	
Receiver-Transmitter RT-68/GRC.....			1	9	13	11¼	.76	35	
AF Amplifier AM-65/GRC.....	1	1	1	4¼	13	7½	.30	15.5	
Power Supply PP-281/GRC or PP-282/GRC.....	1	1	1	4½	6	3	.04	6	
Power Supply PP-109/GR or PP-112/GR.....	1	1	1	9	13	7¼	.54	35	
Control Box C-375/VRC.....	1	1	1	8	4	7	.1	3.5	
Local Control C-434/GRC.....	1	1	1	3½	10½	8¼	.18	8	
Remote Control C-433/GRC.....	1	1	1	3½	9¾	7	.13	5	
Handset H-33/PT.....	1	1	1	3	2¾	7¼	.03	2	
Bag CW-189/GR.....	1	1	1	11	10½	7¼		1	
Mounting MT-297/GR.....	1	1	1	5	12	34	1.06	50	
Adapter UG-273/U.....	1	1	1				.006	.34	
Adapter UG-306/U.....	1	1	1	¾		1	.006	.36	
Bag CW-206/GR.....	1	1	1	(diam) 3	5	40	.34	3.5	
Special Purpose Cable WM-46/U.....	1	1	1	(thk) .6	(wd)	120	.4	9	
RF Cable Assembly CG-568/U.....	1			(diam)		50	.01	.5	
RF Cable Assembly CG-530/U.....		1	1			50	.01	.5	
Special Purpose Cable Assembly CX-1211/U.....	1	1	1				.25	.5	
Case CY-684/GR.....	1	1	1				.17	3	
Connector and bandnut, Appleton Electric Company No. 61007 and BL-50, or equal.....	1	1	1				.01	.3	
Mast Section MS-116-A.....	2	2				39.5	.0461	.6	
Mast Section MS-117-A.....	2	2	2			39.5	.042	1.4	
Mast Section MS-118-A.....	2	2				39.5	.016	.5	
Mast Section AB-24/GR.....			2			23.5	.003	.13	
Mast Base AB-15/GR.....	1	1	1	15				2	
Technical manual (TM 11-291).....	2	2	2				.08	1	

7. Packaging Data

The basic components of each of the radio sets (par. 6) are packed for shipment in three wooden boxes. First, the components are packaged individually in moisture-vaporproof containers and then distributed in three wooden boxes. Weights and volumes of the three over-all containers are listed in *a* below; the contents of each box are listed in *b* below.

Note. Items may be packaged in a manner different from that shown, depending on the supply channel.

a. WEIGHT AND VOLUME OF BOXES. The

weights and volumes of the three wooden boxes are as follows:

Box	Weight (lbs)	Volume (cu ft)
1.....	100	2.00
2.....	129	4.10
3.....	108	2.49
Total.....	337	8.59

b. CONTENTS OF EACH BOX FOR RADIO SETS AN/VRC-13, -14, AND -15. The contents of boxes No. 1, 2, and 3 are the same for all three radio sets except for the one difference in each box noted in the following table.

Box No.	Contents	Quan.	Notes
1	Receiver-Transmitter RT-66/GRC.....	1	Supplied with AN/VRC-13 only.
	or Receiver-Transmitter RT-67/GRC.....	1	Supplied with AN/VRC-14 only.
	or Receiver Transmitter RT-68/GRC.....	1	Supplied with AN/VRC-15 only.
	Power Supply PP-109/GR.....	1	PP-109/GR supplied for 12-volt systems.
2	Power Supply PP-112/GR.....	1	PP-112 for 24-volt systems.
	Mast Base AB-15/GR.....	1	
	Mast Section MS-117-A.....	2	
	Mast Section AB-24/GR.....	2	Supplied with AN/VRC-15 only.
	Mast Section MS-118-A.....	2	Supplied with AN/VRC-13 and AN/VRC-14 only.
	and		
	Mast Section MS-116-A.....	2	
	Control Group AN/GRA-6.....	1	
	Adapter UG-273/U.....	1	
	Adapter UG-306/U.....	1	
	Special Purpose Cable Assembly CX-1211/U.....	1	
	Bag CW-206/GR.....	1	
	Case CY-684/GR.....	1	
	Technical manual (TM. 11-291).....	2	
AF Amplifier AM-65/GRC.....	1		
Power Supply PP-281/GRC.....	1	PP-281/GRC supplied for 12-volt systems.	
or			
Power Supply PP-282/GRC.....	1	PP-112/GR for 25-volt systems.	
3	Cable WM-46 ()/U.....	10 ft	
	Control Box C-375/VRC.....	1	
	Mounting MT-297/GR.....	1	
	Cable Assembly CG-568/U.....	1	CG-568/U supplied with AN/VRC-13 only.
	Cable Assembly CG-530/U.....	1	CG-530/U supplied with AN/VRC-14 and -15 only.

8. Additional Equipment Required

a. To install and operate any of the radio sets, both a basic unit (par. 6) and an installation unit are required. The basic unit is common to all installations; the installation unit varies with the type of vehicle for which the installation is in-

tended. Such items as audio accessories, control boxes, cable lengths, junction boxes, and mounting hardware vary from vehicle to vehicle. For this reason, a separate installation unit is supplied for each vehicular installation. Table I gives the stock numbers used in requisitioning the installation unit, basic unit, and the complete equipment.

b. The audio accessories for the radio sets (any of which may be supplied depending upon the installation) are described in paragraph 18. The remaining contents of the installation units are not listed in detail.

c. In addition to the equipment included in basic units and installation units, the following dry cells are required for operation (par. 37).

- Four 1½-volt Batteries BA-30.
- One 45-volt Battery BA-414/U.

Table I. Vehicular Installation Units

Radio set	Type of vehicle	Stock No.		
		Complete equipment	Basic unit	Installation unit
AN/VRC-13	Light Armored Car M8.....	2S4502-13-V17	2S4502-13/12	2S2501-3-V17/50
AN/VRC-13	75-mm Gun Motor Carriage M18.....	2S4502-13-V65	2S4502-13/24	2S4502-13-V65/5
AN/VRC-13	Armored Utility Vehicle M39.....	2S4502-13-V91	2S4502-13/24	2S2501-3-V91/50
AN/VRC-14	Light Armored Car M8.....	2S4502-14-V17	2S4502-14/12	2S2501-3-V17/50
AN/VRC-14	76-mm Gun Motor Carriage M18.....	2S4502-14-V65	2S4502-14/24	2S4502-13-V65/5
AN/VRC-14	Armored Utility Vehicle M39.....	2S4502-14-V91	2S4502-14/24	2S2501-3-V91/50
AN/VRC-15	Light Armored Car M8.....	2S4502-15-V17	2S4502-15/12	2S2501-3-V17/50
AN/VRC-15	75-mm Gun Motor Carriage M18.....	2S4502-15-V65	2S4502-15/24	2S4502-13-V65/5
AN/VRC-15	Armored Utility Vehicle M39.....	2S4502-15-V91	2S4502-15/24	2S2501-3-V91/50

Note. This table is subject to changes in vehicle types.

9. General System Description

a. INTRODUCTION. Radio Set AN/VRC-13 (fig. 1) is typical of all the sets discussed in this manual. The nomenclature outlined in paragraph 2 and the table of components (par. 6) will facilitate adaptation of the following general description to any particular radio set. The system cordage diagram (fig. 28), which is essentially a composite illustration of all sets, is also helpful in the understanding of the various systems.

b. COMMON COMPONENTS (fig. 3). All of the basic radio sets have the following items in common:

- (1) One receiver-transmitter, an interphone amplifier, and suitable power supplies.
- (2) A mounting.
- (3) Three control units.
- (4) Suitable antenna systems and interconnecting cables.

c. RADIO SET AN/VRC-13. Figure 1 shows the major components of Radio Set AN/VRC-13 connected to simulate a 24-volt operating installation. Receiver-Transmitter RT-66/GRC is utilized as Set 1; Power Supply PP-112/GR furnishes operating voltages for Set 1; and AF Amplifier AM-65/GRC serves as the interphone amplifier. Operating voltage for the amplifier is furnished by a plug-in power supply unit (Power Supply PP-282/GRC) contained within the amplifier. All of the above-mentioned units are secured on Mount-

ing MT-297/GR which is normally bolted to a vehicular mounting surface. The mounting also accommodates one of the control units (Local Control C-434/GRC) as a plug-in unit with electrical connections. From the mounting, connections are made to the vehicular battery, to the major units supported on the mounting, and to Control Box C-375/VRC. When the local control unit is plugged into the mounting as shown, connection is made to Remote Control C-433/GRC by telephone wire. Connections to the antenna system are made directly from the panel of Set 1 (fig. 28).

d. 12-VOLT SYSTEM. The system described above is applicable to vehicles which have a 24-volt storage battery. To operate the system from a 12-volt storage battery, Power Supplies PP-109/GR and PP-281/GRC must be substituted for Power Supplies PP-112/GR and PP-282/GRC, respectively. Either installation constitutes a basic Radio Set AN/VRC-13.

e. RADIO SETS AN/VRC-14 AND -15. If Receiver-Transmitter RT-67/GRC or RT-68/GRC is used as the radio set, and the antenna system for the set is changed as indicated in figure 28, the basic installation becomes Radio Set AN/VRC-14 or Radio Set AN/VRC-15. Each basic set has its own stock number as indicated in table I, which must be used in requisitioning a particular set. Note the different stock numbers for 12- and 24-volt supplies.

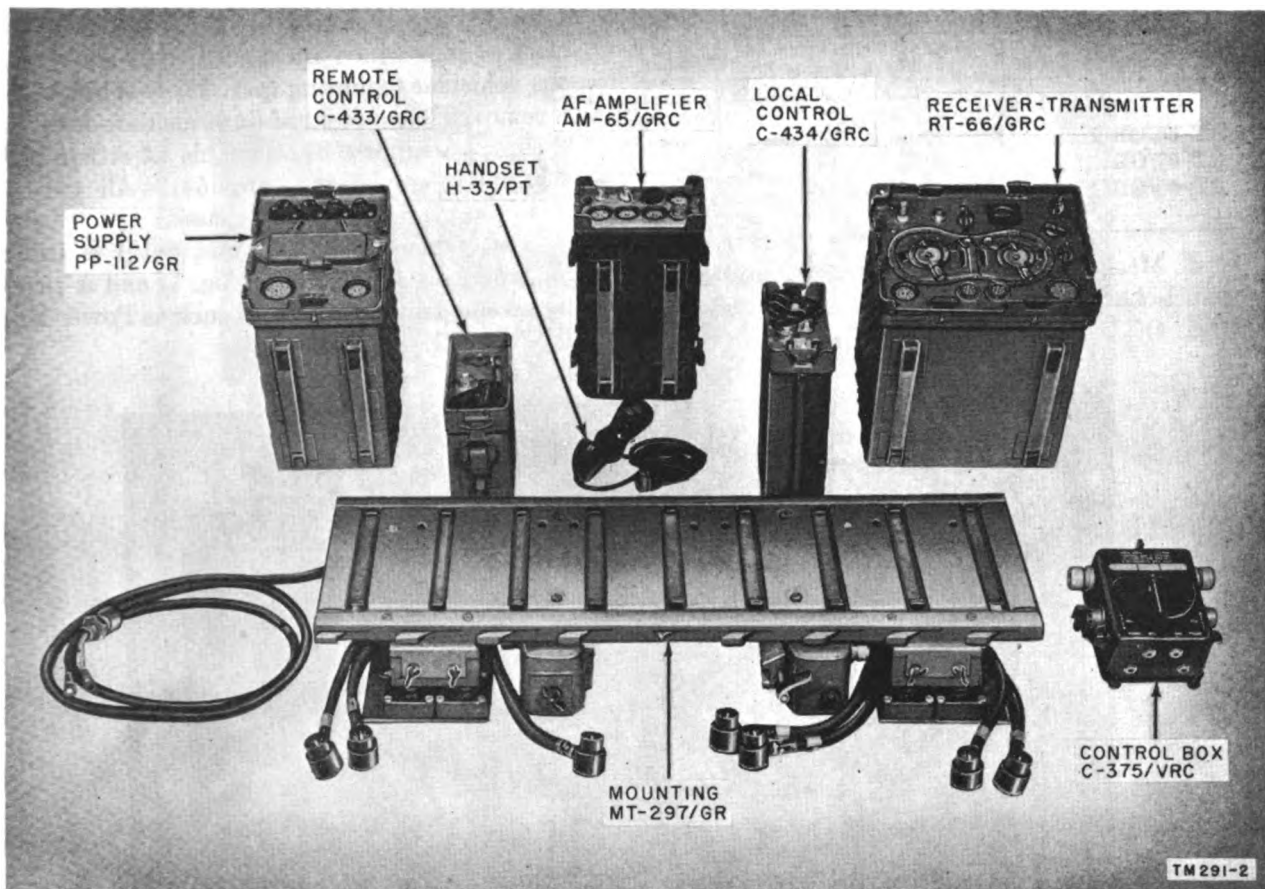


Figure 3. Common components of Radio Sets AN/VRC-13, -14, and -15.

f. SUMMARY. The essential difference between the radio sets is the receiver-transmitter used as Set 1. This in turn depends upon the frequency range desired for operation. Paragraph 10 indicates which set is used with each system, and paragraph 5 shows the frequency range for each system.

10. Set 1 Receiver-Transmitter

a. One of Receiver-Transmitters RT-66/GRC, RT-67/GRC, RT-68/GRC is used as Set 1 in each of the radio sets described in this manual. The particular system in which each of the receiver-transmitters is used is as follows: RT-66/GRC is used in AN/VRC-13; RT-67/GRC is used in AN/VRC-14; and RT-68/GRC is used in AN/VRC-15.

b. The Set 1 receiver-transmitters are very similar in structure, function, and detailed circuit and mechanical arrangement; they differ from

each other only in their operating frequency range and in the components which determine the frequency range. Hence, Receiver-Transmitter RT-66/GRC (fig. 4) is similar externally to the other receiver-transmitters except for the calibrations of the tuning dial and nameplate designation. Characteristics pertinent to system operation are listed in paragraph 5; complete information on the receiver-transmitters is contained in a separate technical manual.

c. Each Set 1 consists of a double-conversion type, superheterodyne f-m receiver and f-m transmitter which use a common antenna. The tuning mechanism of each receiver-transmitter is detented at every 100 kc of its frequency range to provide the channel selections indicated in the following chart. In addition to the detent selections, any two of the channels may be preset (par 51) to allow rapid selection, or the detent mechanism can be disengaged to allow continuous tuning.

Receiver-transmitter	Frequency coverage	No. of channels
RT-66/GRC.....	20 to 27.9 mc.....	80
RT-67/GRC.....	27 to 38.9 mc.....	120
RT-68/GRC.....	38 to 54.9 mc.....	170

d. Mechanically, the receiver-transmitters are panel-chassis assemblies inclosed in a metal case (fig. 4). The bottom of the case is fitted with

channel rails which are used to secure the unit to the vehicular mounting (par. 32). When the case is removed, the r-f and i-f (intermediate-frequency) chassis assemblies are available at either side of the unit (figs. 52, 53, and 54). All tubes are mounted on these vertical chassis.

e. In vehicular installations, Set 1 is installed on Mounting MT-297/GR (fig. 1) and is powered by a vehicular power supply such as Power Supply PP-112/GR.

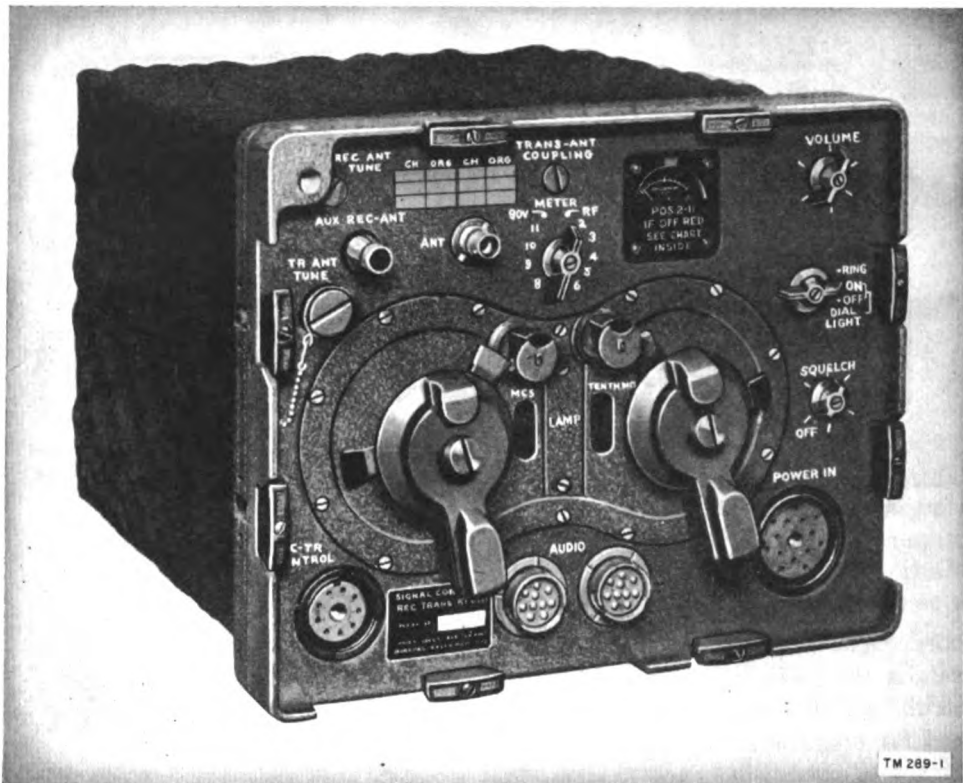


Figure 4. Receiver-Transmitter RT-66/GRC.

11. Set 1 Power Supply

a. Either Power Supply PP-109/GR or PP-112/GR is used to furnish operating plate and screen voltages for Set 1, depending on whether the vehicular storage battery supplies 12 or 24 volts, respectively. The two units are similar externally (fig. 5) and differ internally only in those circuits necessary to convert the battery voltage to the proper operating voltage for the receiver-transmitter. Detailed information on the power supplies is contained in a separate technical manual.

b. The power supply develops plate, screen,

bias, filament, microphone, and relay potentials for the receiver-transmitter. The plate, screen, and bias voltages are developed by a vibrator type power supply circuit. Input battery voltage is supplied through a POWER IN receptacle on the front panel (fig. 5), and all output voltages are available at the POWER OUT receptacle on the front panel.

c. Mechanically, the power supply units are panel-chassis assemblies inclosed in a metal case. Channel rails on the bottom of the case permit installation of the case on Mounting MT-297/GR. When the case is removed (figs. 49, 50, and 51), the replaceable parts on the chassis are accessible

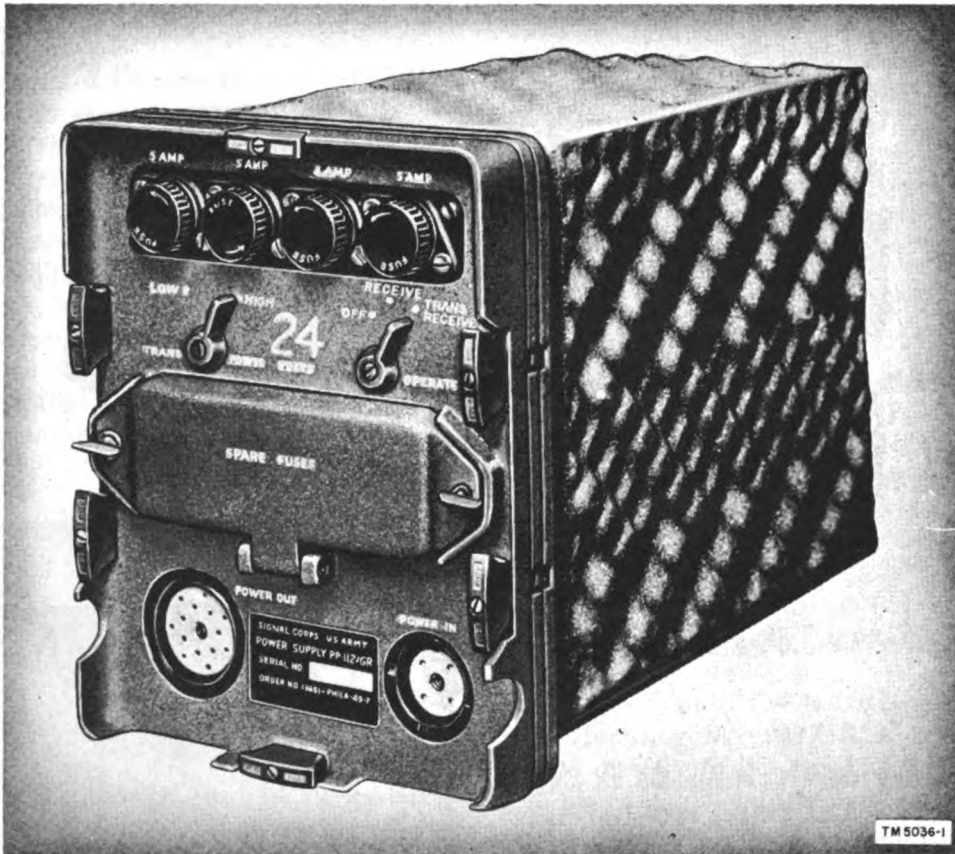


Figure 5. Power Supply PP-112/GR, front view.

12. AF Amplifier AM-65/GRC

a. AF Amplifier AM-65/GRC (fig. 6) is a common component of all the radio sets described in this manual. Generally referred to as the interphone amplifier, this unit serves a dual purpose, providing not only for intercommunication between control boxes but also for monitoring the receiver-transmitter. Detailed information on the amplifier is contained in a separate technical manual.

b. Electrically, the interphone amplifier is a three-channel electronic mixer and a-f amplifier. The three channels provide a *Set 1+Interphone* output, a *Set 1+Set 2+Interphone* output, and a *Set 2+Interphone* output. The interphone signal predominates on the *Set 1+Set 2+Interphone* channel; the signals from receiver-transmitters are equal in strength to the interphone signal on the other two channels.

Note.—Since Set 2 is not used in this installation, the third channel carries only the interphone signal.

c. Mechanically, the interphone amplifier is a panel-chassis assembly inclosed in a metal case.

Channel rails on the bottom of the case permit the installation of the unit on Mounting MT-297/GR. When the case is removed (fig. 47), all replaceable parts are accessible.

d. A compartment within the amplifier (fig. 47) accommodates a plug-in power supply unit (Power Supply PP-281/GRC or PP-282/GRC for 12- and 24-volt operation, respectively) which supplies operating plate and screen voltages for the amplifier.

13. Mounting MT-297/GR

a. Mounting MT-297/GR (fig. 7) serves as a support for major units of the radio sets and as a junction box for interconnecting various units. Figures 1 and 18 demonstrate the dual function of the mounting.

b. At either end of the mounting are two shock-mounted supports which normally are bolted to a vehicular mounting surface. A hinged mounting table is secured to these supports and a junction box is suspended from the under surface of the table near the center of the unit (fig. 7).

14. Control Box C-375/VRC

a. One or more of Control Boxes C-375/VRC (fig. 8) is used in every installation of the radio sets described in this manual. One unit is supplied with the basic radio set; additional units may be supplied in the installation kits (par. 8).

b. Control Box C-375/VRC is a remote junction point and switching unit for the control and audio lines to Set 1 and the interphone amplifier. Switches on the control box may connect any of these lines to the 10-pin audio connections on either side of the box (figs. 55 and 56) and to the MIC. and PHONE jacks on the bottom of the box (fig. 56).

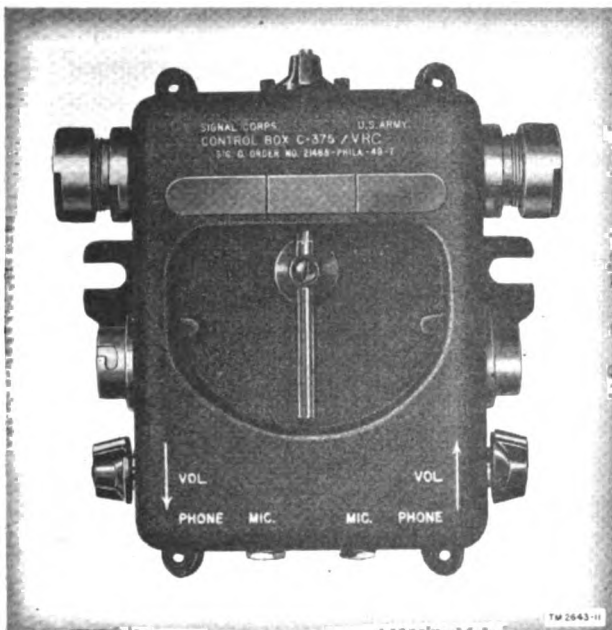


Figure 8. Control Box C-375/VRC.

c. Normally, the control boxes are installed at some distance from Mounting MT-297/GR (in locations convenient for the driver, gunner, commander, or other operator) and are connected to the mounting either directly or indirectly by means of Special Purpose Cable WM-46/U. Cable entries are provided at either side of the control box (figs. 55 and 56).

15. Control Group AN/GRA-6

(fig. 9)

a. Control Group AN/GRA-6 may be used to provide local and remote push-to-talk control and local or remote control of power for the radio set and includes provisions for telephone communication between local and remote control stations. The control group includes Local Control C-434/GRC, Remote Control C-433/GRC, Handset H-33/PT, and Bag CW-189/GR. Complete information on the control group is contained in a separate technical manual.

b. Local Control C-434/GRC may be plugged into Mounting MT-297/GR or it may be connected directly to the panel of Set 1 and/or the interphone amplifier by means of a plug-terminated cord at the rear of the unit (fig. 30). The switching facilities of the unit allow for push-to-talk transmission from a handset plugged into the AUDIO connector on the front panel.

Note. It is possible to obtain remote interphone operation and push-to-talk control of Set 1 by plugging the audio connectors, P-1 and P-2, at the rear of the local control, into the front panels of the interphone amplifier and Set 1.

c. Remote Control C-433/GRC may be as far as 2 miles removed from the local unit. A two-wire through metallic telephone line is used to

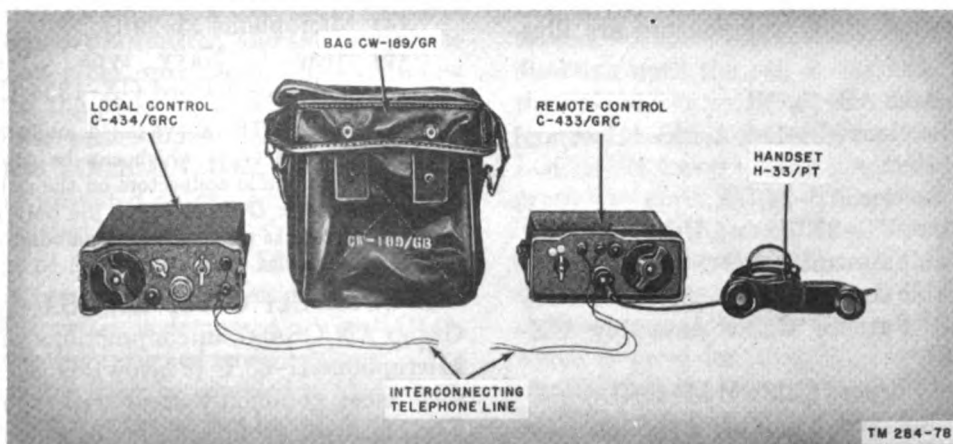


Figure 9. Control Group AN/GRA-6.

interconnect the two units. The combined switch actions of the two units make it possible to extend both power control and push-to-talk facilities to the remote unit. The remote unit will also accommodate a handset.

d. Handset H-33/PT may be used at the panel AUDIO connector of either control unit. The handset is equipped with a push-to-talk, nonlocking, spring return switch which incorporates two electrically independent SPST (single-pole, single-throw) switches. The handset cord is terminated in a 10-pin connector which will mate with the receptacles on the panels of the control unit.

e. Provisions for simple telephone communication (including ringing) are also incorporated in the control units. This facility makes the control group adaptable for field telephone usage.

f. Bag CW-189/GR is provided for storing and carrying purposes. The units may be stored in the bag when they are not used or when they are being transported.

16. Power Supplies PP-281/GRC and PP-282/GRC

Power Supply PP-282/GRC (shown with the minor components in fig. 10) is used in the interphone amplifier in 24-volt installations of the radio set. The unit supplies plate and screen operating voltage for the interphone amplifier. Power Supply PP-281/GRC, similar in appearance and general characteristics, is used for 12-volt installations. The units are vibrator type power supplies which plug into the compartment on the amplifier chassis (fig. 47).

17. Minor Components

a. The following minor components are illustrated in figure 10.

- (1) Mast Base AB-15/GR.
- (2) Mast Sections MS-116-A, MS-117-A, and MS-118-A.
- (3) Mast Section AB-24/GR.
- (4) Adapters UG-273/U and UG-306/U.
- (5) RF Cable Assembly CG-568/U.
- (6) RF Cable Assembly CG-530/U.
- (7) Special Purpose Cable Assembly CX-1211/U.
- (8) Special Purpose Cable WM-46/U.
- (9) Connector and bondnut, Appleton Electrical Company No. 61007 and BL-50, or equal.

(10) Case CY-684/GR.

(11) Bag CW-206/GR.

Note. With the exception of the last three items listed, all of the above components are represented functionally on the system cordage diagram (fig. 28). For physical and electrical descriptions, refer to the identification table of parts in appendix II.

b. The connector and bondnut are used for connecting the power cable of the radio set (W-8 on fig. 28) to the vehicular power terminal box. The connector is of the feedthrough type, and the bondnut locks the connector in place.

c. Case CY-684/GR is a metal box provided for the storage of running spares. Compartments are provided for tubes, lamps, fuses, and other replaceable parts. The case will not accommodate all of the running spares which are supplied with the various units (par. 19), but will accommodate some of each type. Refer to paragraph 38 for recommendations on the selection of spares to be stored in Case CY-684/GR.

d. Bag CW-206/GR is provided for the storage of spare antenna mast sections, Case CY-684/GR, audio accessories (not in use), and technical manuals.

18. Audio Accessories

a. **TYPE.** Audio accessories for operating the radio sets are supplied in the installation units and vary in type and number according to the type of vehicular installation. Some or all of the following items may be supplied.

- (1) Chest Set Group AN/GSA-6 and Headset-Microphone H-63/U.
- (2) Dynamic Loudspeaker LS-166/U.
- (3) Handset H-33/PT.
- (4) Microphone M-29/U.
- (5) Headset, Navy type CW-49507 and Headset Cord CX-1334/U.

Note. The above-listed audio accessories are the only types which can be connected to the 10-pin audio connectors on the radio sets. Control Box C-375/VRC is the only unit equipped with jacks which will accommodate any substitute accessories (4 below).

b. **CHEST SET GROUP AN/GSA-6.** Chest Set Group AN/GSA-6, in conjunction with Headset-Microphone H-63/U (c below), is the audio accessory most commonly used with the radio sets. The chest set group consists of a chest-mounting switch box and a 5-foot cord which terminates in an eight-contact receptacle and a 10-pin audio

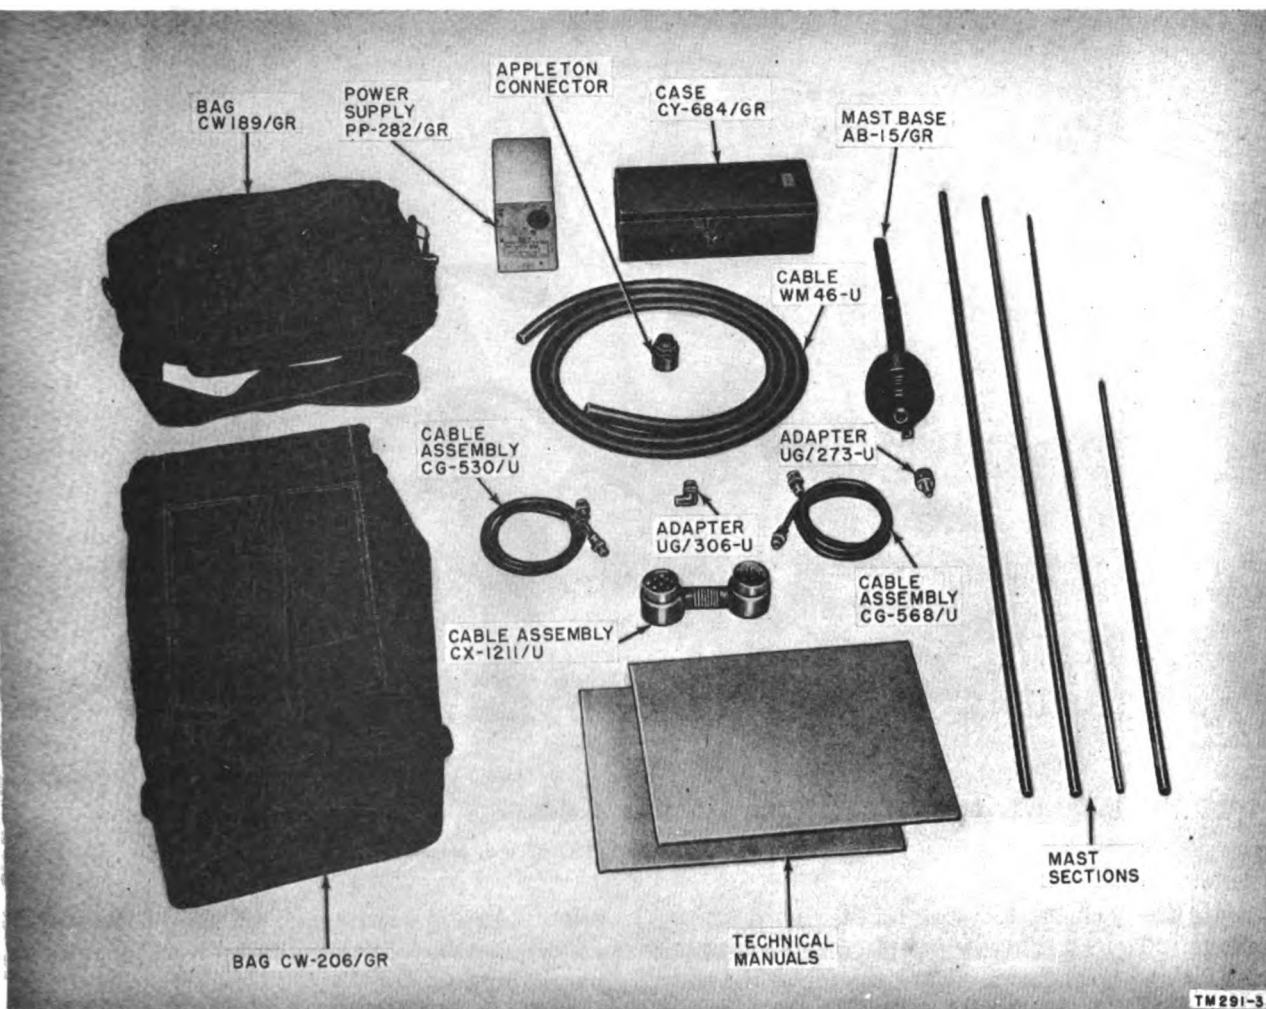


Figure 10. Minor components of Radio Set AN/VRC-13.

connector. The receptacle mates with the plug on one end of the switch box and may be disconnected quickly. The audio connector will mate with any of the 10-pin connectors on the control units, the receiver-transmitter, and the interphone amplifier. Two plugs provided on the switch box will mate with the jacks on Headset-Microphone H-63/U. Two push-button switches labeled HOLD ON and LOCK ON, both for push-to-talk operation, are provided on one side of the switch box; a push-button RADIO switch is provided on the other side of the box. The LOCK-ON push-button switch remains down when depressed until the HOLD-ON switch is depressed. The HOLD-ON switch is spring returned when released. The LOCK-ON switch may be disabled in the following manner: Unscrew the screws holding the cover to the body of the chest set and lift the cover from the body (fig. 11). Be careful not to damage the

gasket. Determine the location of the lock to be used from figure 12. Loosen the screw holding the lock to the chassis in the chest set, until the LOCK-ON locking device may be lifted and turned. Rotate the device in a counterclockwise direction until the peg at the base of it falls into the hole shown in figure 12. Tighten the screw, securing the locking device in place. To place the LOCK-ON feature back in operation, reverse the procedure given above. The push-button switch is normally in the interphone position, allowing for interphone operation when only the push-to-talk switch is pressed. (This is true only when the chest set is connected to Control Box C-375/VRC, which is wired for interphone operation.) Radio transmission is accomplished by pressing both the RADIO push-button and one of the push-to-talk switches. The push-button may be locked in either position as follows: Remove the cover and



Figure 11. Chest Set Group AN/GSA-6, assembled.

locate the lock in the same manner as described above. To lock it in the interphone position, slide the locking mechanism toward the top of the chest set without depressing the RADIO push-button. To lock it in the RADIO position, first depress and hold the push-button and then slide the lock toward the top of the chest set.

c. HEADSET-MICROPHONE H-63/U. Headset-Microphone H-63/U (fig. 13) consists of two series-connected 300-ohm receivers and a 40- to 150-ohm microphone. The microphone is mounted on an adjustable boom attached to the receiver headband. Two 14-inch conductors from the microphone and headset are terminated in two-pin and three-pin jacks, respectively. These jacks will mate with the plugs on Chest Set Group AN/GSA-6.

d. DYNAMIC LOUDSPEAKER LS-166/U. Dynamic Loudspeaker LS-166/U (fig. 14) is a 4-inch, permanent magnet field, dynamic type loudspeaker with a voice-coil impedance of 8 ohms, and a 600-ohm impedance input transformer. A 5-foot cord, terminated in a 10-pin audio connector, is provided for connecting the speaker to the audio receptacles wired for loudspeaker or phone oper-

ation. A rotary switch on the side of the speaker may be used to switch units from speaker to phone output.

e. HANDSET H-33/PT. Handset H-33/PT (fig. 15) is a combination microphone and a receiver with a push-to-talk switch and connecting cord. The microphone impedance is 40 ohms; the receiver impedance is 300 ohms. The push-to-talk switch provided consists of two electrically independent SPST switches. The cord is 5 feet long and is terminated in a 10-pin audio connector which will mate with the audio connectors on the receiver-transmitter, the interphone amplifier, and the control units.

f. MICROPHONE M-29/U. Microphone M-29/U (fig. 16) consists of a 40- to 100-ohm carbon microphone element in a plastic case with a push-to-talk switch and connecting cord attached. The push-to-talk switch incorporates two electrically independent SPST switches. The connecting cord is 5 feet long and terminates in a 10-pin audio connector which will mate with the connectors on the receiver-transmitters, the interphone amplifier, and the control units.

g. HEADSET NAVY TYPE CW-49507 AND HEAD-

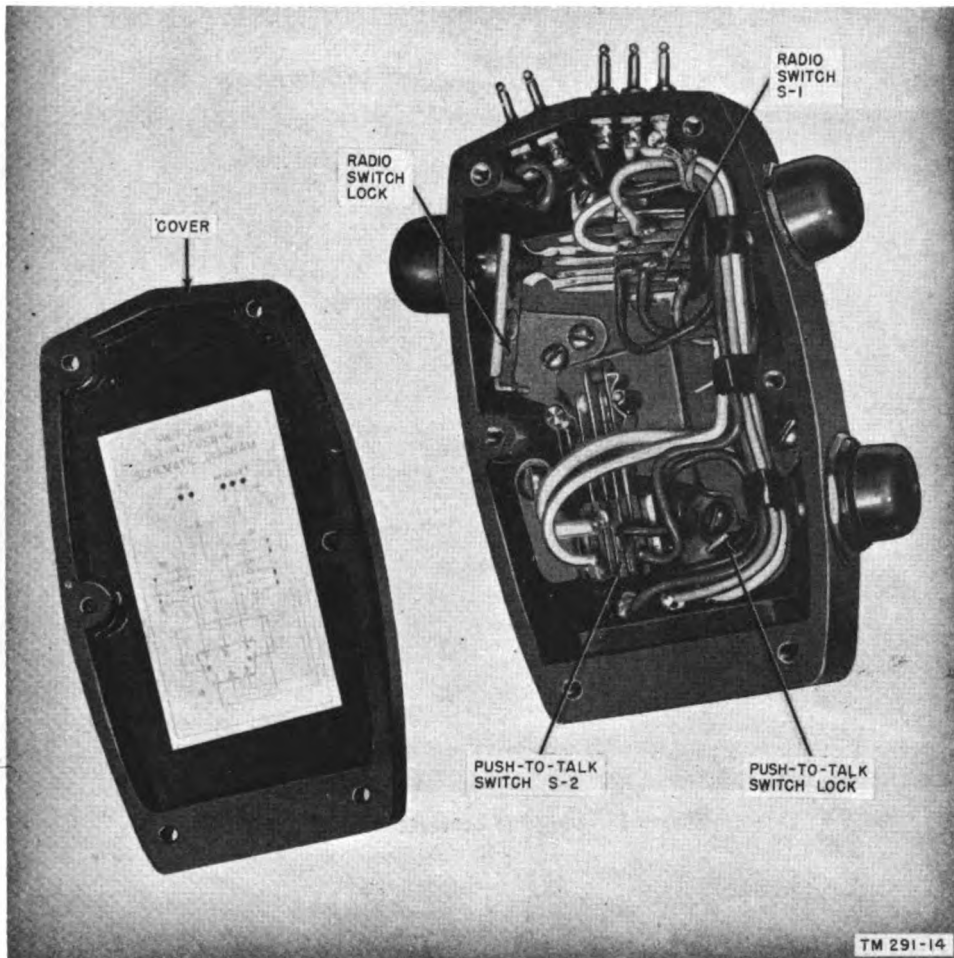


Figure 12. Chest Set Group AN/GSA-6, open view.

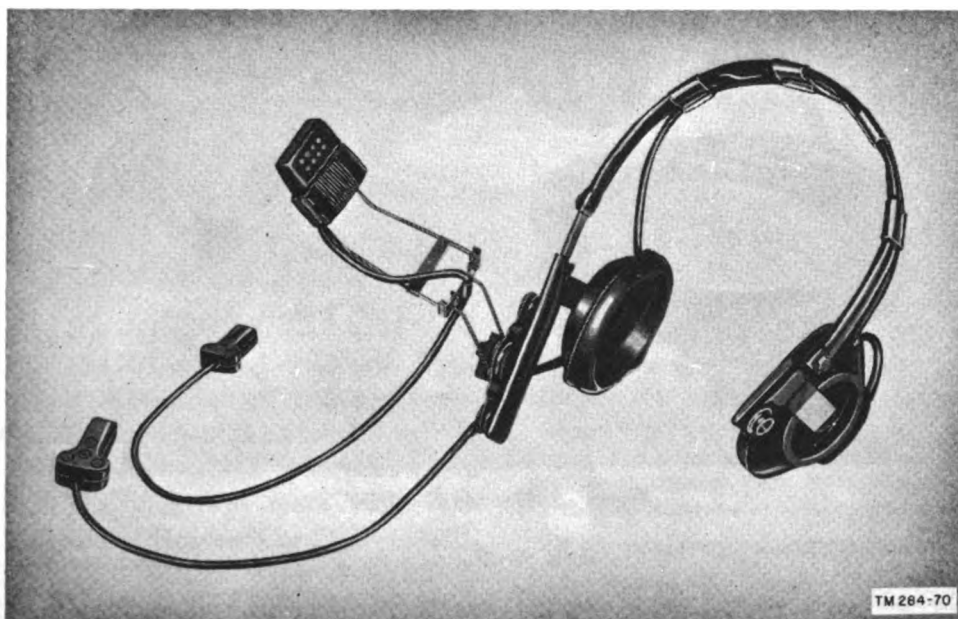


Figure 13. Headset-Microphone H-63/U

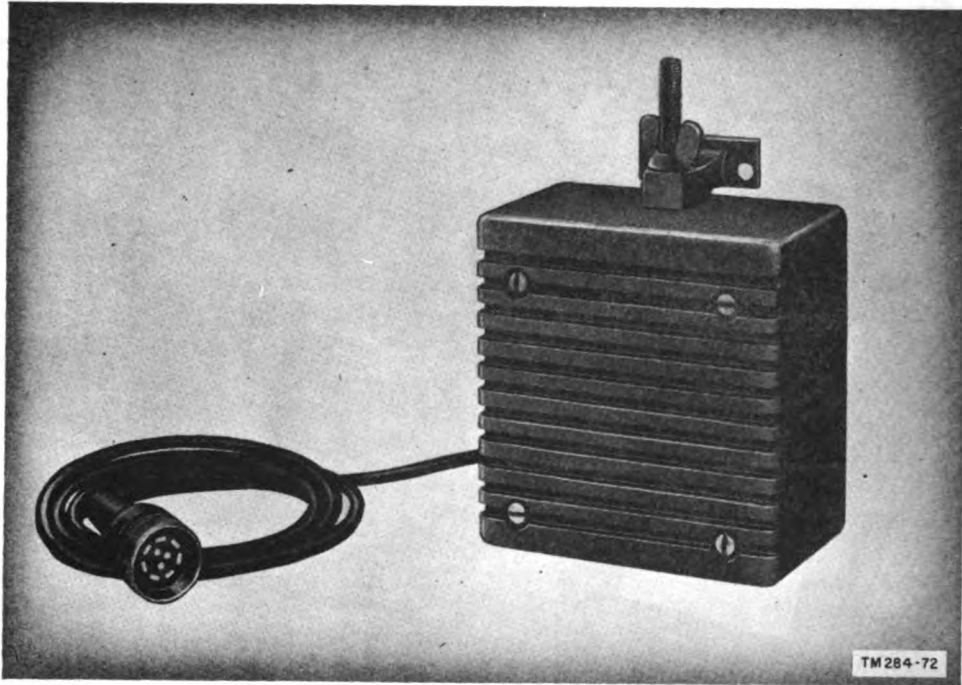


Figure 14. Dynamic Loudspeaker LS-166/U

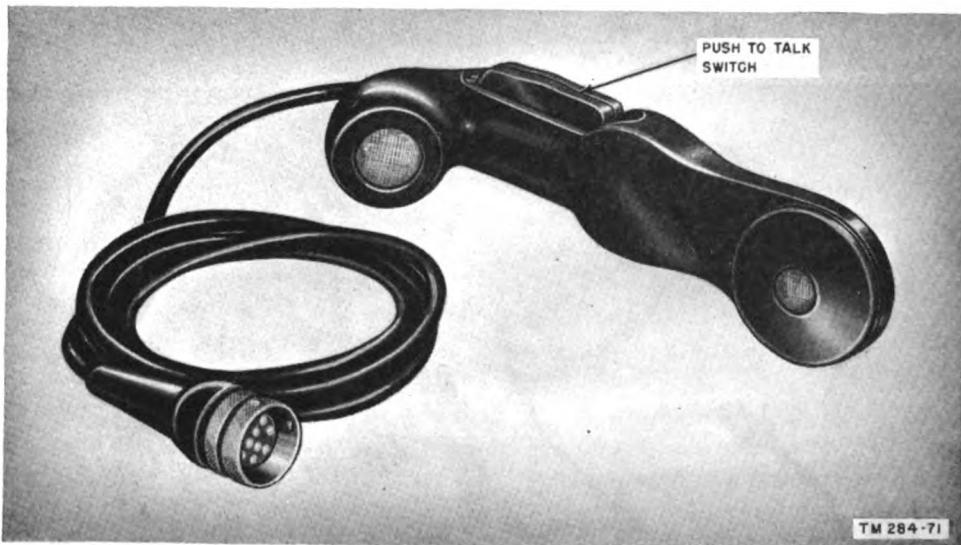


Figure 15. Handset H-33/PT.

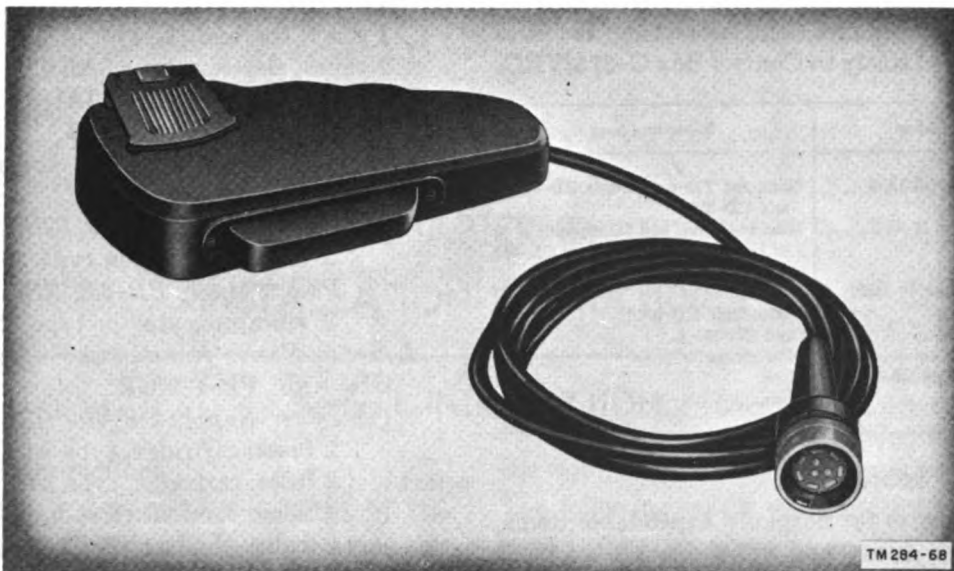


Figure 16. Microphone M-29/U.



Figure 17. Headset Navy Type CW-49507 and Cord CX-1334/U.

SET CORD CX-1334/U. Headset Navy Type CW-49507 (fig. 17) consists of two series-connected 300-ohm receivers. A 14-inch cord is connected to the receivers and is terminated in Plug PL-54. The plug will mate with Jack JK-26, on one end of Headset Cord CX-1334/U. Headset Cord CX-1334/U is 5 feet long. It is terminated in a 10-pin audio connector and serves to connect the headset to the audio connectors on

the receiver-transmitter, the interphone amplifier, and the control units.

Note. The audio accessories should not be used indiscriminately on any of the units, even though it is possible to connect them physically. Refer to chapter 3 for correct usage of the audio accessories.

h. SUBSTITUTE ACCESSORIES. The substitute audio accessories listed in the following table may be used only if it is absolutely necessary. Performance will be inefficient, however, because of

impedance mismatches, and operating facilities will be confined solely to Control Box C-375/VRC.

Standard Item	Substitute Item
Chest Set Group AN/GSA-6.....	Chest Set TD-4 on Cords CD-307-A and CD-318.
Headset-Microphone H-63/U.....	Headset H-16/U and Microphone T-45 or Headset H8-30 with Cord CD-633 and Microphone T-45.
Headset Navy Type CW-49607.....	Headset H-16/U or Headset H8-30 with Cord CD-633.
Cord CX-1334/U.....	Cord CD-307-A.
Microphone M-29/U.....	Microphone T-17.
Dynamic Loudspeaker L8-106/U.....	None.
Handset H-33/PT.....	None.

19. Running Spares

Running spares for normally expendable items, such as tubes, fuses, and vibrators, are supplied with some of the system components. The spares supplied are listed in the following subparagraphs:

Note. Case CY-684/GR, provided for carrying the spare parts, is not ample for carrying all of the parts supplied; therefore, it will be necessary to make a selection of those parts most likely to be needed. A suggested list of such parts is given in paragraph 38.

a. SPARE PARTS FOR RECEIVER-TRANSMITTERS RT-66/GRC, RT-67/GRC, AND RT-68/GRC. The spare parts supplied for each of those components are identical:

- 2 tubes, electron, type 1A3.
- 2 tubes, electron, type 1AE4.
- 2 tubes, electron, type 1L4.
- 4 tubes, electron, type 1R5.
- 1 tube, electron, type 1S5.
- 6 tubes, electron, type 1U4.
- 3 tubes, electron, type 2E24.
- 1 tube, electron, type 3A4.
- 5 tubes, electron, type 3A5.
- 2 tubes, electron, type 3B4.
- 6 tubes, electron, type 3Q4.
- 2 tubes, electron, type 6AK5.

b. SPARE PARTS FOR AF AMPLIFIER AM-65/GRC.

- 1 fuse, cartridge, 4-ampere (F-1).
- 1 fuse, cartridge, 10-ampere (F-1).
- 1 tube, ballast (R-52).

- 1 relay, thermal (K-1).
- 2 tubes, electron, type 6AK6.
- 3 tubes, electron, type 12AU7.
- 2 tubes, electron, type 0B2.

c. SPARE PARTS FOR POWER SUPPLIES PP-281/GRC AND PP-282/GRC.

- (1) *Power Supply PP-281/GRC.*
2 vibrators, plug-in type, 6-volt input.
- (2) *Power Supply PP-282/GRC.*
2 vibrators, plug-in type, 24-volt input.

d. SPARE PARTS FOR POWER SUPPLIES PP-109/GR AND PP-112/GR.

- (1) *Power Supply PP-109/GR.*
2 fuses, cartridge, type AGU, 5-ampere.
2 fuses, cartridge, type AGU, 10-ampere.
1 relay, thermal (K-1 or K-2).
2 tubes, ballast (R-24, R-25, R-31, R-37, R-38, and R-40).
1 tube, electron, type 1007.
2 tubes, electron, type 0B2.
2 tubes, electron, type 0A2.
3 vibrators, 6-volt (E-1, E-2, and E-3).
- (2) *Power Supply PP-112/GR.*
3 fuses, cartridge, type AGU, 5-ampere.
1 fuse, cartridge, type AGU, 3-ampere.
1 relay, thermal (K-1 or K-2).
3 tubes, ballast (R-24, R-25, R-31, R-37, R-38, and R-40).
1 tube, electron, type 1007.
2 tubes, electron, type 0B2.
2 tubes, electron, type 0A2.
3 vibrators, 24-volt (E-1, E-2, and E-3).

e. SPARE PARTS FOR CONTROL GROUP AN/GRA-6.

4 lamps, glow, 125-volt, 1/25-watt GE lamp #WE-51.

f. SPARE MAST SECTIONS FOR RADIO SETS AN/VRC-13, AND -14.

- 1 Mast Section MS-116A.
- 1 Mast Section MS-117A.
- 1 Mast Section MS-118A.

g. SPARE MAST SECTIONS FOR RADIO SET AN/VRC-15.

- 1 Mast Section MS-117A.
- 1 Mast Section AB-24/GR.

CHAPTER 2

INSTALLATION INSTRUCTIONS

Section I. INTRODUCTION

20. Scope of Instructions

The installation instructions included in this manual are generalized to make them applicable to any installation. The variety of vehicles in which the radio sets may be installed necessarily limits the specificity of such details as the exact location of units, the routing of cables, the placement of antennas, etc. Required clearances, interconnection data, and all other essential information is included. For specific details pertinent to particular vehicles, reference should be made to the installation instructions supplied with the installation units for the vehicles. Each of the installation units listed in paragraph 8 contains instructions pertinent to the particular vehicle for which the unit is intended.

21. General Unpacking Instructions

Take the usual precautions against damage to

the equipment during the unpacking procedure. The following points of procedure should be observed whenever possible:

- a. Unless instructions are given to the contrary, unpack equipment as required in the order described. Unpacking all boxes simultaneously may interfere with an orderly procedure, and will complicate any possible division of labor.
- b. As each box is unpacked, check its contents against the master packing slip.
- c. Use cutters to clip metal bands.
- d. Do not pry off the tops or sides of boxes; use a nail puller to remove the nails and lift off the sides and/or the tops of boxes.
- e. Save boxes, containers, and other packaging material, if practicable, for possible use for storage or reshipment.

Section II. VEHICULAR INSTALLATION DETAILS

Notes. Vehicular installation procedures are those which involve modification of the vehicle (for example, the drilling of holes) or some special technique peculiar to a type of vehicle (for example, the routing of cables).

22. Unpacking

The material comprising the installation unit and the material contained in box 3 of the basic unit (par. 7) are required for the vehicular installation details. Unpack the installation unit and box 3 of the basic unit, observing the general precautions noted in paragraph 21.

23. Mounting MT-297/GR

Mounting MT-297/GR should be located and secured in place; all external connections should be completed.

- a. Locate Mounting MT-297/GR according to the installation instructions for the particular vehicle. In an installation, allow the minimum clearances indicated in figure 18.
- b. Loosen the four wingnut fasteners which hold the mounting table firm against the shock mounts. Swing the mounting table back on its hinges to make the junction box available. Remove the three cover plates from the junction box (fig. 19).
- c. If the vehicular supply is 12 volts, connect jumpers between terminals 14 and 15 and between 15 and 16; also connect 17 and 18. For 24-volt operation these jumpers are not required.
- d. Prepare one end of the 10-foot length of Special Purpose Cable WM-46/U in accordance with instructions given in figure 20.

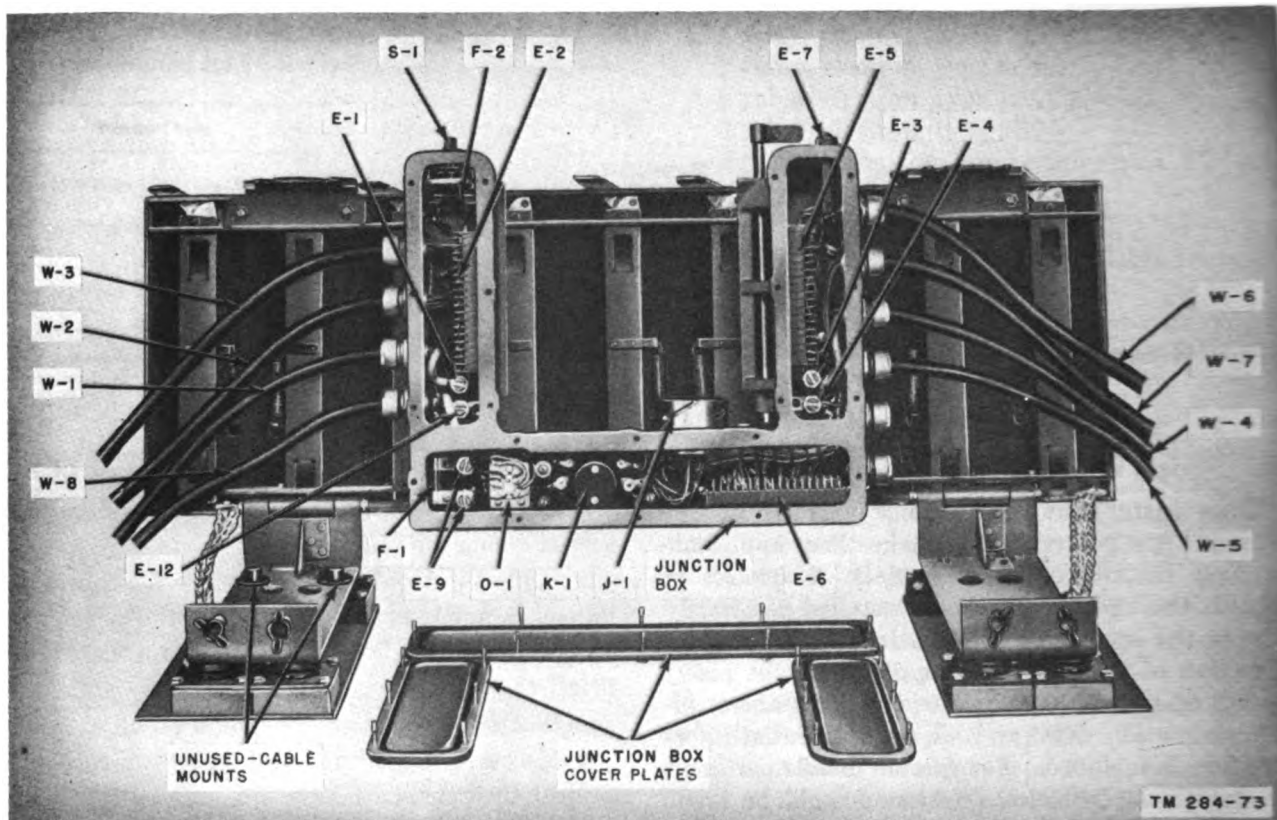


Figure 19. Mounting MT-297/GR, open view.

e. Loosen the bondnut on the cable clamp at one of the unused cable entries on the right-hand side of the junction box (fig. 19). Remove the nut, metal ring, and rubber washer from the cable clamp and slip them over the prepared end of the cable in the same order (nut, ring, and washer). (The rubber plug which will be found in the cable entry is for waterproofing an unused entry; it will not be required in the final assembly.)

f. Insert the prepared end of the cable through the cable entry and solder the individual conductors to the terminals of terminal board E-6 in the mounting (fig. 19); observe the color coding indicated in figure 21. The cable should be inserted until the outer insulation protrudes on the inside of the junction box. Sufficient slack should be allowed for all terminal connections.

g. When the connections are complete, tighten the bondnut on the cable clamp.

h. Before replacing the covers on the junction box, check the tightness of the solderless connectors, E-1, E-3, E-4, E-9, and E-12 (fig. 19). Cable compression can cause these connectors to become loose over a period of time. The fuse may be checked at this time also.

i. Replace the covers on the junction box.

j. In Radio Sets AN/VRC-13, -14, and -15, which do not use an auxiliary receiver, fasten the two receiver cables (W-1 and W-2 in fig. 19) to the unused cable mounts (fig. 19).


k. Spot and drill the eight mounting holes in accordance with the dimensional data shown in figure 18. Bolt the mounting to the vehicle.

l. Swing the mounting table back to its normal position and tighten the wingnut fasteners at each end of the table.

m. Route the loose end of Special Purpose Cable WM-46/U in accordance with instructions outlined in the installation instructions supplied with the vehicular installation unit. (Although the units to be interconnected are Mounting MT-297/GR and Control Box C-375/VRC, vehicular layout will determine whether a direct connection will be made or whether slip rings and/or junction boxes will intervene (par. 24b).

n. Place the power switch of the mounting in the OFF position. Do not turn this switch ON throughout the entire installation procedure.

o. Connect the battery cable (W-8 in fig. 19) in accordance with instructions furnished with the

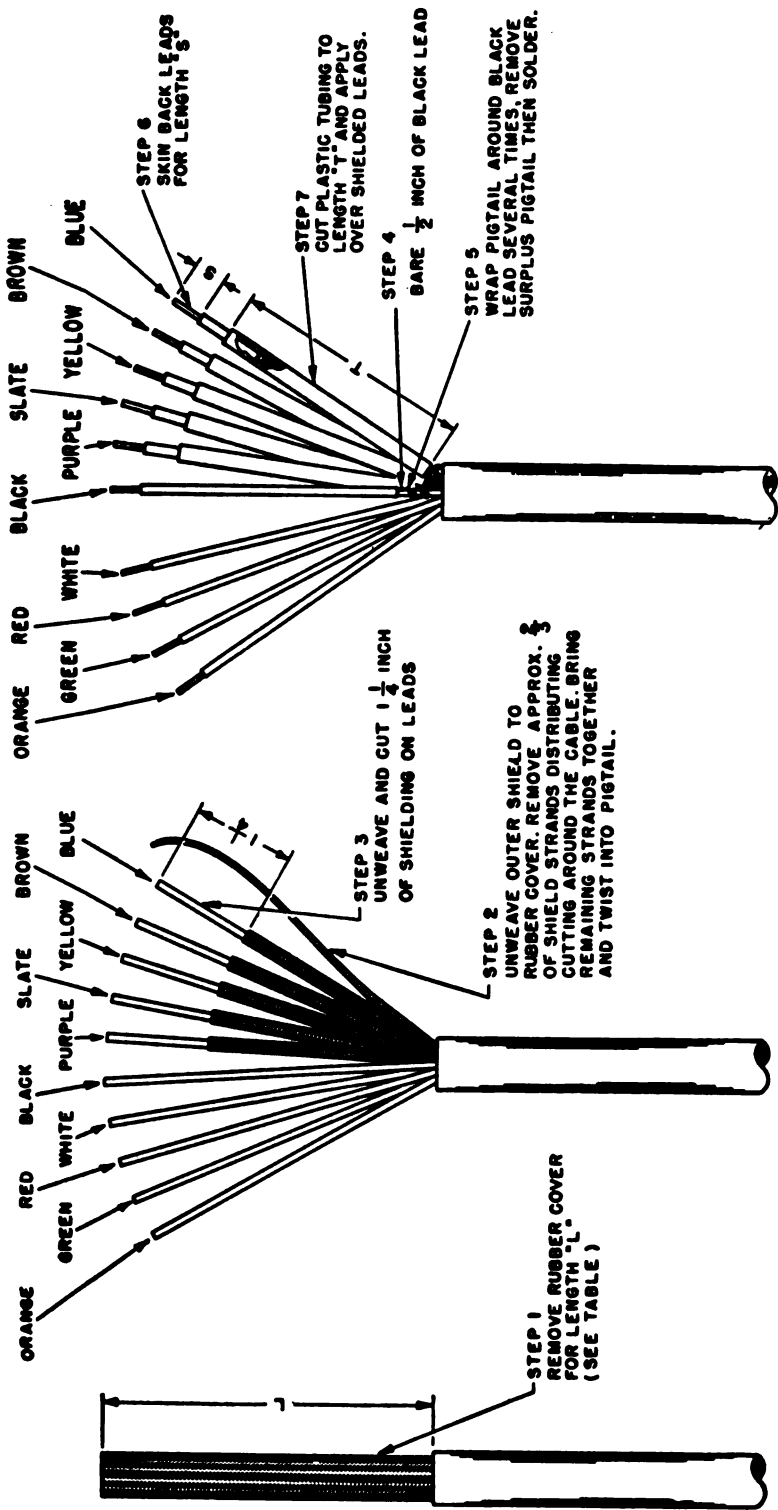

COMPONENT	LENGTH "L"	LENGTH "S"	LENGTH "T"
CONTROL BOX G-375/VRC	4	$\frac{3}{8}$	$3\frac{3}{8}$
MOUNTINGS MT-297/GR, MT-299/GR, MT-299/GR, MT-300/GR	6	$\frac{3}{8}$	$5\frac{3}{8}$
TERMINAL BOX SC-D-9319	6	$\frac{3}{8}$	$5\frac{3}{8}$
TURRET TERMINAL BOX M MEDIUM TANK M46	10	$\frac{3}{8}$	$9\frac{3}{8}$
BENDIX - SCINTILLA CONNECTOR SIZE 28 SHELL	$1\frac{3}{8}$	$\frac{5}{16}$	NOT USED
BENDIX - SCINTILLA CONNECTOR SIZE 22 SHELL	$1\frac{1}{4}$	$\frac{1}{4}$	NOT USED

Figure 80. Preparation of Special Purpose Cable WM-46/U.

installation unit. Generally, the cable will connect to a vehicular junction box rather than directly to the battery. Use the connector and bondnut supplied with the basic unit to secure the cable at its point of entry into the junction box. Leave enough slack to allow the mounting cable to be swung back without straining the cable.

24. Control Box C-375/VRC

One or more Control Boxes C-375/VRC may be supplied in the installation units in addition to the box supplied with the basic unit. The boxes must be located, mounted, and then interconnected with Mounting MT-297/GR.

a. Spot the location of the control boxes and drill the mounting holes. The exact locations will vary from vehicle to vehicle and must be determined from the specific instructions supplied with the installation unit. In all cases, minimum clearances of $2\frac{1}{2}$, 4, and $3\frac{3}{4}$ inches should be allowed on the top, the bottom, and the sides, respectively. Before mounting the units, make the connections described for each unit (b and c below).

b. Remove the cover from the control box, remove the bondnut, ring, and washer from one of the cable clamps at the side of the box, and slip the nut, ring, and washer over the loose end of Special Purpose Cable WM-46/U. (This may be the other end of the cable connected to Mounting MT-297/GR; more commonly, it will be an extension of this cable from a vehicular junction box or another Control Box C-375/VRC. In all cases, the cable end should be prepared in accordance with instructions shown in 20.)

c. Solder the prepared conductors to the unused terminals of terminal board E-2 in the control box, observing the color coding shown in figure 21.

d. When connections are complete, tighten the cable clamp, replace the cover, and mount the units in place, using the hardware provided in the bag attached to each control box.

e. On the composition strips above the selector switch on the panel of each control box, write the following designations from left to right, respectively: "SET 1+INT" "SET 1+SET 2+INT" and "INT" only."

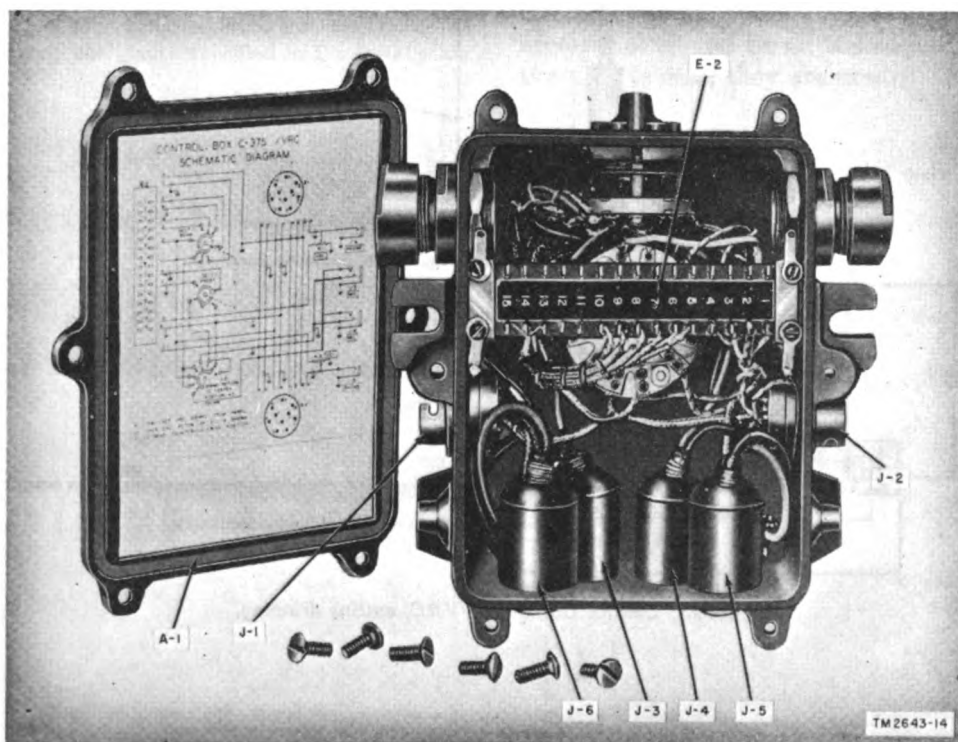


Figure 22. Control Box C-375/VRC, rear view.

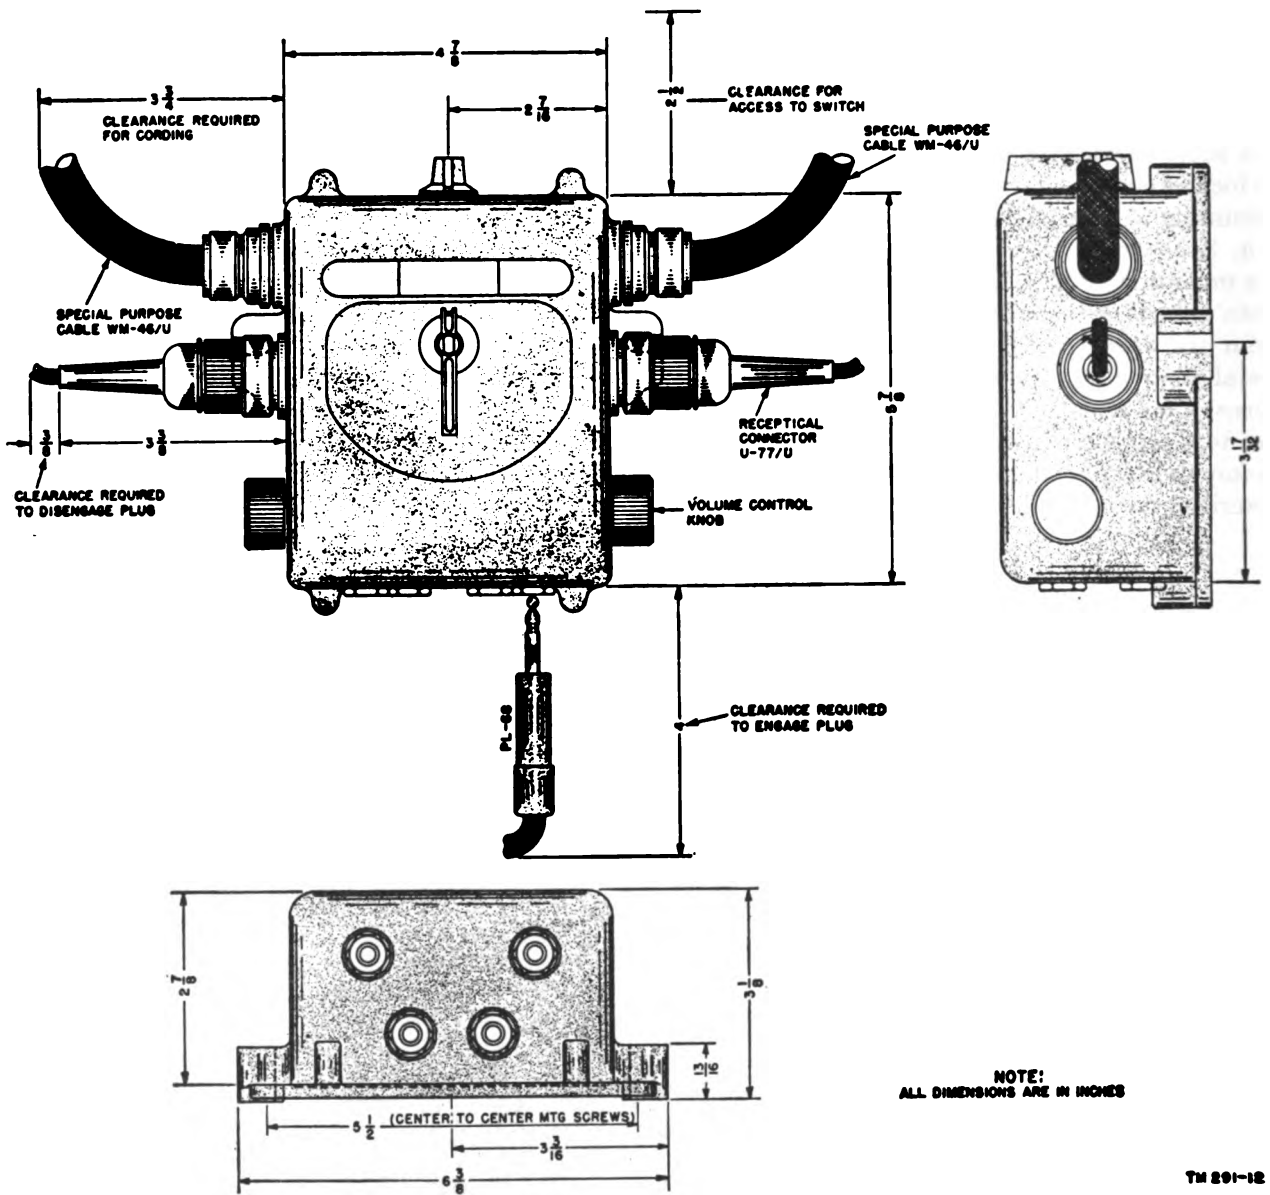


Figure 23. Control Box C-375/VRC, outline drawing.

TM 291-12

25. Routing Antenna Cables

The antenna cable is used to connect from the receiver-transmitter panel to the antenna-mast bases. While actual connections cannot be made at this time, provisions must be made for routing the cables. RF Cable Assembly CG-568/U is provided for Set 1 with Radio Sets AN/VRC-13, while AN/VRC-14, and AN/VRC-15 utilize RF Cable Assembly CG-530/U.

a. If holes must be drilled in the vehicle, or any other vehicular modification must be made in order to route the antenna cables, follow the instructions supplied in the installation unit.

b. If the antenna cables are to be clamped to the vehicle, follow the instructions supplied in the installation unit. When a particular installation calls for the use of Adapter UG-306/U (supplied in the installation units), connect the adapter to the end of the cable which will connect to the mast base.

Note. In most cases, the 50-inch antenna cables supplied with the basic units will be sufficiently long. In those cases where a longer length is required, the cable and connectors will be supplied in the installation units. If the connectors are not already assembled to the cable, terminate the cables in accordance with instructions given in figures 24 and 25. Lengths must not be chosen at random. Use only the length specified in the installation instructions.

26. Vehicular Provisions for Antenna-mast Bases

a. Any drilling, installation of mounting brackets, and other vehicular details which are necessary for installing the antenna-mast base should be made at this time. The location of the mast and the mounting provisions are different for each type of vehicle, and necessary instructions will be supplied with the vehicular installation unit.

b. Because it is possible, in some instances, that the remaining installation procedures will not be completed until after the vehicle has been shipped to a different depot or organizational unit, actual mounting of the antenna-mast bases is not included as a vehicular installation detail. (Its installation might complicate the shipment of the vehicle.) Whether the entire installation is carried through to completion in one or two steps, however, the antenna-mast bases are the next items to be installed (par. 29).

27. Storing of Audio Accessories

The audio accessories supplied in the installation unit will not be required until the equipment is ready for an operational test (par. 36). The accessories should be unpacked and stored within the vehicle until they are needed.






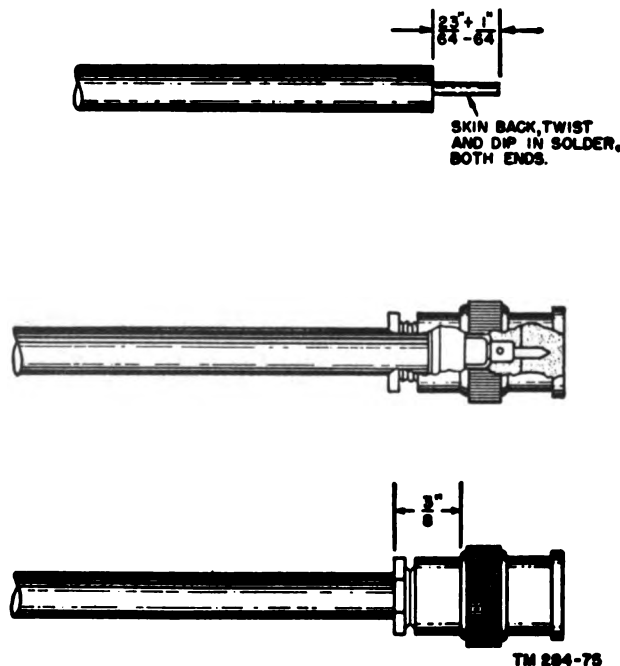




Figure 24. Termination of RF Cable Assembly CG-568/U.

RG-62/U CABLE IN U8-261/U OR U8-262/U JACKS

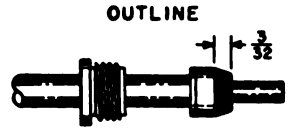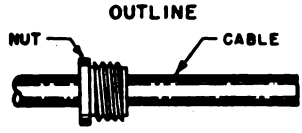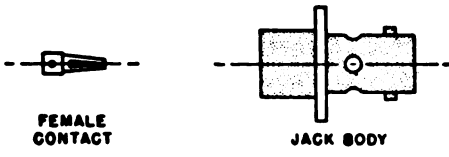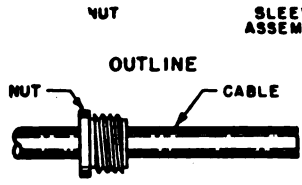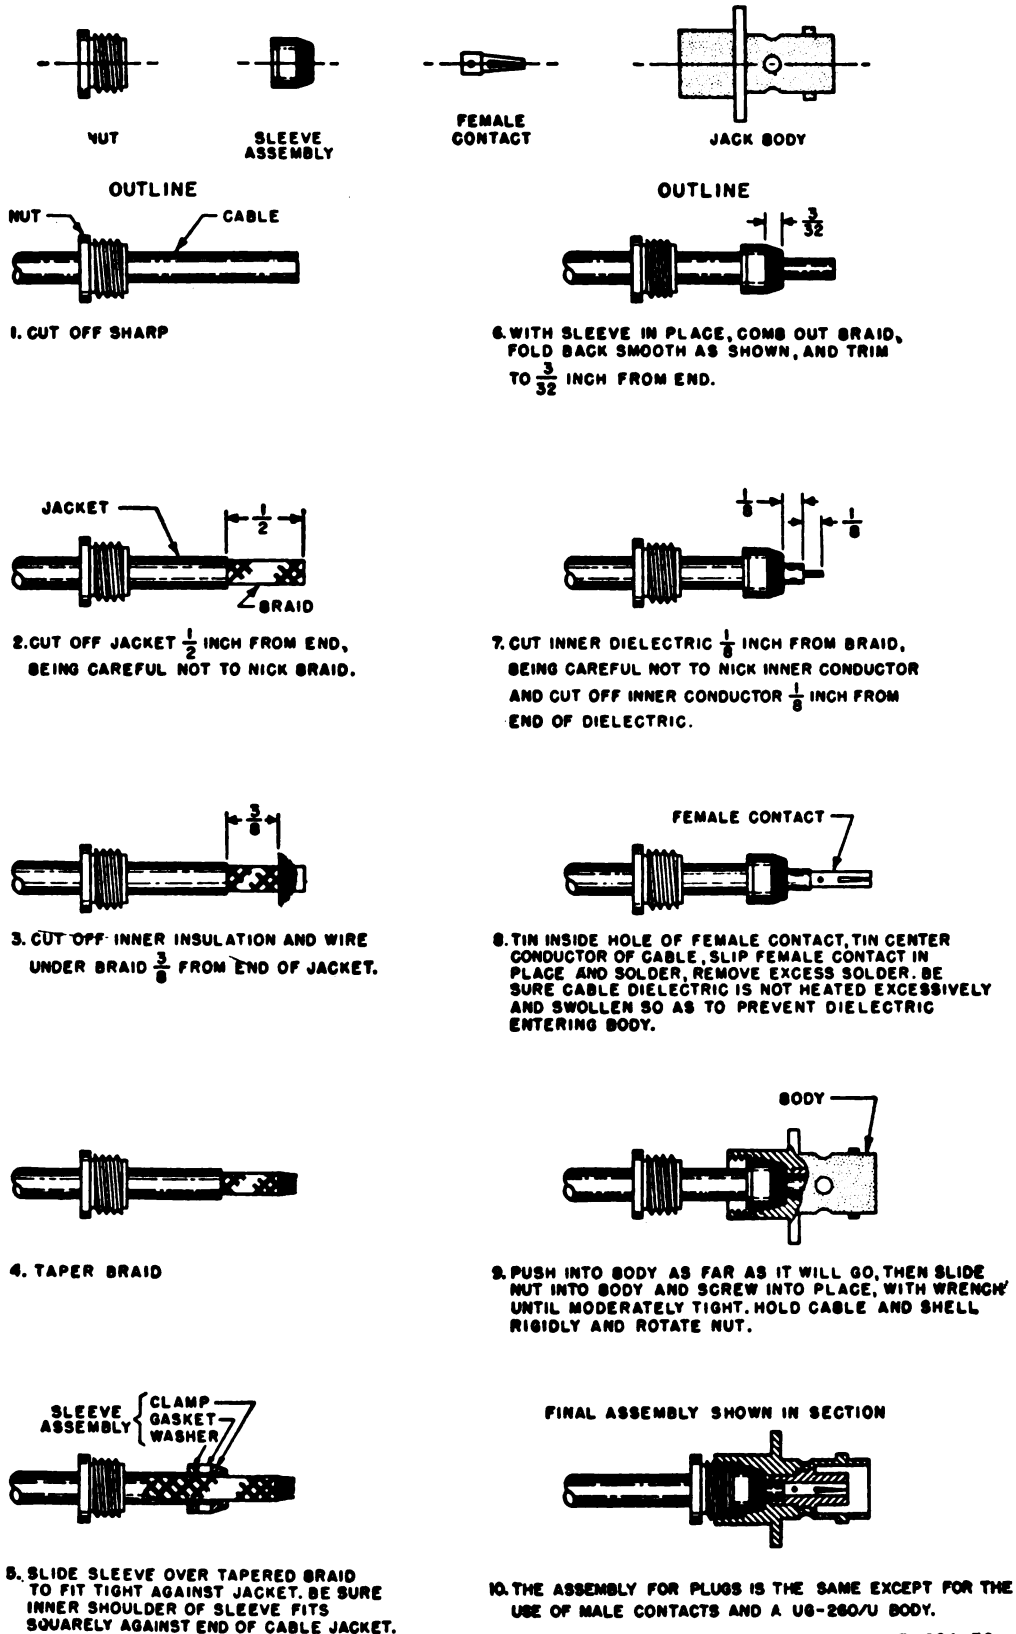



1. CUT OFF SHARP

6. WITH SLEEVE IN PLACE, COMB OUT BRAID, FOLD BACK SMOOTH AS SHOWN, AND TRIM TO $\frac{3}{32}$ INCH FROM END.

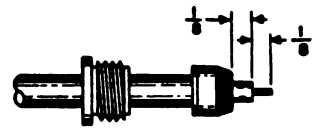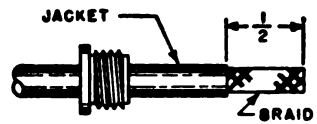


2. CUT OFF JACKET $\frac{1}{2}$ INCH FROM END, BEING CAREFUL NOT TO NICK BRAID.

7. CUT INNER DIELECTRIC $\frac{1}{8}$ INCH FROM BRAID, BEING CAREFUL NOT TO NICK INNER CONDUCTOR AND CUT OFF INNER CONDUCTOR $\frac{1}{8}$ INCH FROM END OF DIELECTRIC.

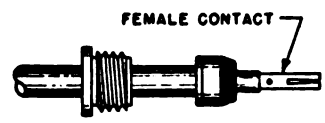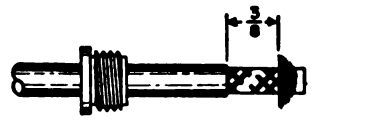


3. CUT OFF INNER INSULATION AND WIRE UNDER BRAID $\frac{3}{8}$ FROM END OF JACKET.

8. TIN INSIDE HOLE OF FEMALE CONTACT, TIN CENTER CONDUCTOR OF CABLE, SLIP FEMALE CONTACT IN PLACE AND SOLDER, REMOVE EXCESS SOLDER. BE SURE CABLE DIELECTRIC IS NOT HEATED EXCESSIVELY AND SWOLLEN SO AS TO PREVENT DIELECTRIC ENTERING BODY.

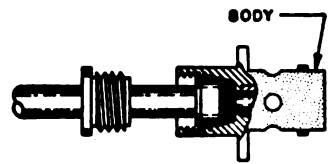

4. TAPER BRAID

9. PUSH INTO BODY AS FAR AS IT WILL GO, THEN SLIDE NUT INTO BODY AND SCREW INTO PLACE, WITH WRENCH UNTIL MODERATELY TIGHT. HOLD CABLE AND SHELL RIGIDLY AND ROTATE NUT.

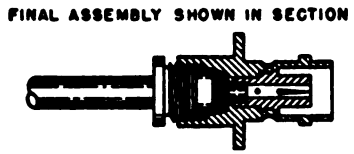

5. SLIDE SLEEVE OVER TAPERED BRAID TO FIT TIGHT AGAINST JACKET. BE SURE INNER SHOULDER OF SLEEVE FITS SQUARELY AGAINST END OF CABLE JACKET.

10. THE ASSEMBLY FOR PLUGS IS THE SAME EXCEPT FOR THE USE OF MALE CONTACTS AND A U8-260/U BODY.

TM264-76

Figure 25. Termination of RF Cable Assembly CG-530/U.

Section III. EQUIPMENT INSTALLATION DETAILS

Note. The term *equipment installation* has been arbitrarily selected to refer to those installation procedures which are independent of the vehicle in which the radio sets are installed.

28. Unpacking

When all vehicular installation details have been completed, unpack the remaining boxes (1 and 2) of the basic unit (par. 7). Observe the general precautions noted in paragraph 21.

29. Mounting Mast Base AB-15/GR (fig. 26)

The location of the mast base is, in most cases, prescribed by the vehicle. In general, however, the mast base should be placed as high as possible and with a maximum cable length of 50 inches between the base and the receiver-transmitter. To install the mast base, follow the instructions outlined below and in figure 26.

a. Loosen the ground clamp on the adapter which is supplied on the mast base. Remove the adapter and replace it with Adapter UG-273/U. Retighten the ground clamp on the new adapter.

b. Separate the two cup insulators by unscrewing the body of the mast base.

c. Insert the body of the mast base, with upper cup insulator attached, through the hole in the mounting surface, which may be a special surface.

d. Bring the lower cup insulator up from the under side of the mounting surface so that the

bolt in the lower insulator engages the body of the mast base. The lockwasher and the ground braid from the clamp on the adapter should be between the mounting surface and the lower insulator (fig. 26).

e. Screw the body of the mast base in a clockwise direction to tighten the assembly.

f. If the mounting surface does not provide a good ground, an additional ground bond must be made between the mounting surface and the vehicle.

30. Antenna Mast Section


(fig. 28)

a. Set 1 of Radio Sets AN/VRC-13 and -14 utilizes three long mast sections, Mast Sections MS-116-A, MS-117-A, and MS-118-A. Screw the three sections together and screw the assembly into the Set one mast base.

b. Set 1 of Radio Set AN/VRC-15 utilizes one long and one short mast section, Mast Sections MS-117-A and AB-24/GR, respectively. Screw the two sections together, and screw the assembly into the Set 1 mast base.

31. AF Amplifier AM-65/GRC

A power supply must be installed in the amplifier, and the fuse and internal power supply switch must be checked before the amplifier is

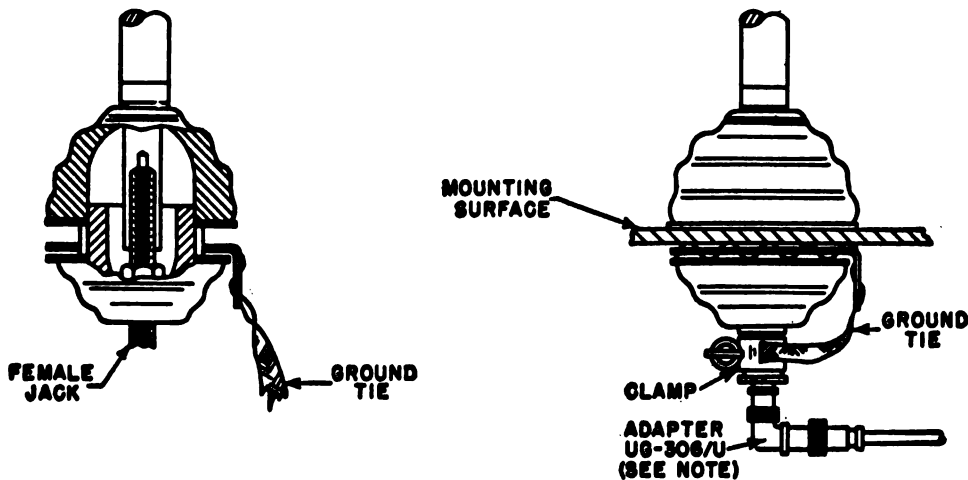

NOTE:

ADAPTER UG-306/U USED ONLY WHEN SPECIFICALLY CALLED FOR.

TM 264-81

Figure 26. Mast Base AB-15/GR, installation drawing.

secured on the mountin. Perform the following steps:

a. Remove the panel-chassis assembly from the outer case (par. 89).

b. Insert and clamp the plug-in power supply unit (fig. 27) in the compartment on the amplifier chassis (fig. 47) so that the receptacle on the power supply mates with the plug within the amplifier compartment. Use Power Supply PP-281/GRC for 12-volt systems and Power Supply PP-282/GRC for 24-volt systems.

c. Turn the internal switch on the amplifier chassis (fig. 47) to the 12V or 24V position, depending on the supply voltage being used.

d. Check the fuse in the fuse holder on the front panel of the amplifier. The amplifier is shipped with a 4-ampere fuse which is suitable for operation in a 24-volt system with Power Supply PP-282/GRC. For 12-volt systems, with Power Supply PP-281/GRC, replace the 4-ampere fuse with a 10-ampere fuse from the running spares supplied with the unit (par. 19). Place a spare fuse of the proper amperage for the system in the clips on the chassis (fig. 47).

e. Fasten the correct supply voltage marker on the left-hand side of the amplifier panel. The amplifier is shipped with the 24V 4A marker in place (fig. 6). For 12-volt systems, the marker should be replaced by the 12V 10A marker which

is located beneath the 24V 4A marker. The marker serves as a reminder that the plug-in power supply unit, the fuse, and the setting of the internal switch (c and d above) should correspond to the storage battery being used.

f. Replace the panel-chassis assembly in the case and turn the OFF-INT-RT-70 switch to the OFF position.

Caution. Before placing the amplifier or any of the units on the mounting, again check the position of the power switch on the mounting. Turn it to the OFF position.

g. Release the locking mechanism for the two right-hand channels of the mounting by rotating the locking handles (fig. 7) toward the left.

h. Place the amplifier on the mounting so that the rails on the bottom of the case rest in the two right-hand channels of the mounting. Rotate the locking handles to the right to secure the amplifier in place.

32. Set 1 and Set 1 Power Supply

a. Place the OPERATE switch of the Set 1 Power Supply PP-109/GR or PP-112/GR in the OFF position, and secure the unit on the mounting beside AF Amplifier AM-65/GRC (fig. 28). Use Power Supply PP-109/GR in 12-volt systems and Power Supply PP-112/GR in 24-volt systems.

b. Place and lock the Set 1 receiver-transmitter on the mounting next to the power supply. Refer to figure 28 for the particular receiver-transmitter used in each system.

33. Interconnections

Make the system interconnections outlined below and illustrated in figure 28.

a. Connect Adapter UG-306/U to the ANT connector on Set 1. Connect one end of the antenna cable (RF cable Assembly CG-568/U or CG-530/U) as indicated in figure 28 to the adapter; connect the other end of the cable to the Set 1 mast base (par. 29). Another UG-306 may be used at the base depending upon the installation kit and instructions supplied.

b. Check that the OPERATE switch of the Set 1 power supply is in the OFF position, and connect Special Purpose Cable Assembly CX-1211/U between the POWER OUT receptacle of the power supply and the POWER IN receptacle of Set 1. Tighten the screw handles on the cable assembly connectors as much as possible to insure waterproofing.

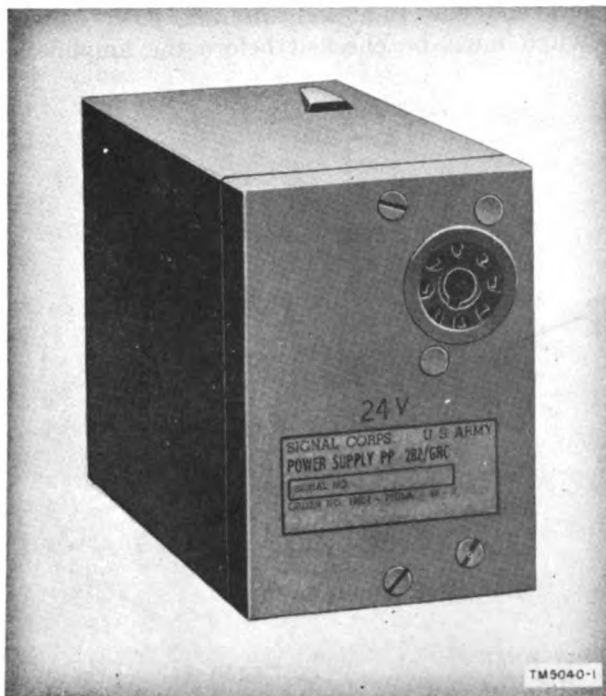


Figure 27. Power Supply PP-282/GRC, front view.

RADIO SET	RECEIVER-TRANSMITTER	MAST SECTION	ANTENNA CABLE	POWER SUPPLIES
AN/VRC-13	RT-66/GRC	MS-116-A	CG-568/U	PP-109/GR WHEN USED WITH 12-V SOURCE OR PP-112/GR WHEN USED WITH 24-V SOURCE
AN/VRC-14	RT-67/GRC	MS-117-A		
AN/VRC-15	RT-68/GRC	MS-117-A AB-24/GR	CG-530/U	

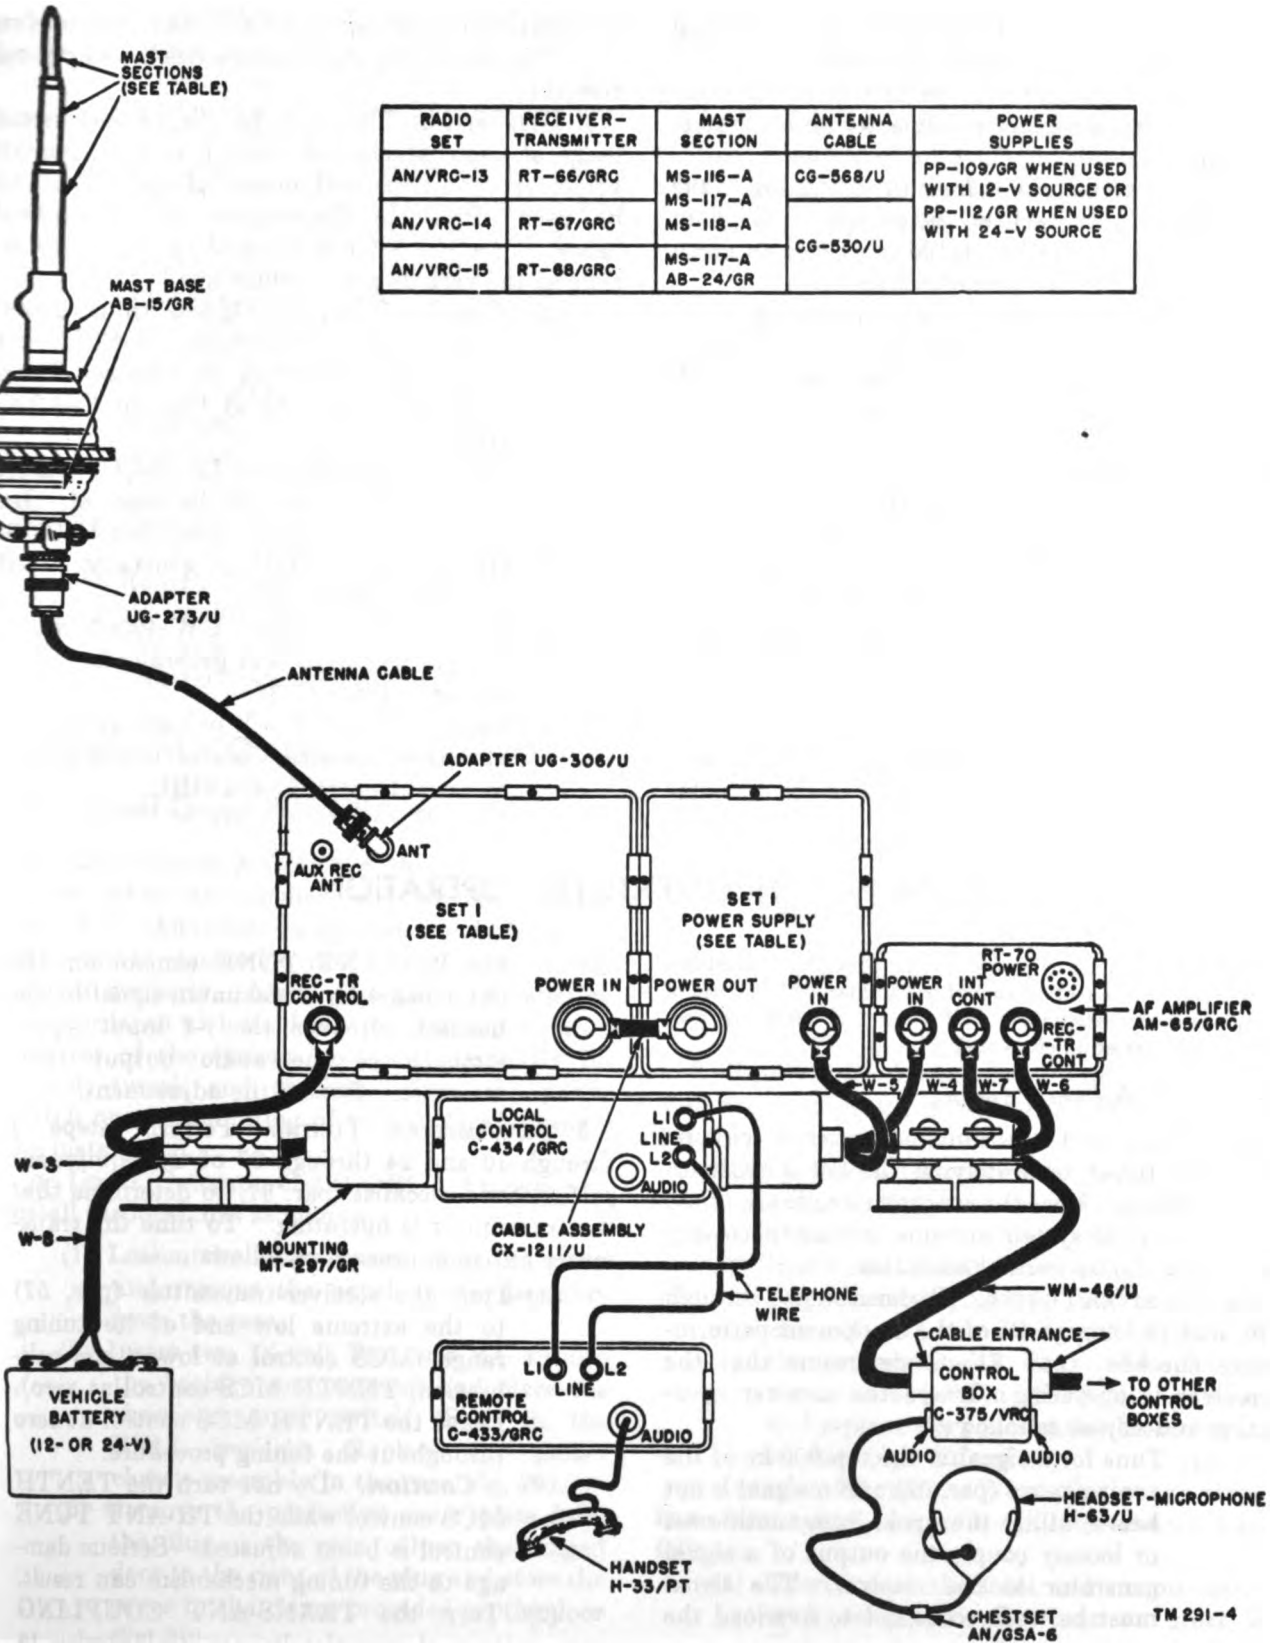


Figure 98. System cordage diagram.

TM 291-4

c. Connect cable W-6 from the mounting (fig. 19) to the REC-TR CONT receptacle on the amplifier. Tighten the screw handle on the cable connector as much as possible to insure waterproofing.

d. Connect cable W-7 from the mounting to the INT CONT receptacle on the amplifier. Tighten the screw handle on the cable connector as much as possible to insure waterproofing.

e. Connect cable W-4 from the mounting to the POWER IN receptacle on the amplifier. Tighten the screw handle on the cable connector as much as possible to insure waterproofing.

f. Connect cable W-5 from the mounting to the POWER IN receptacle on the Set 1 power supply. Tighten the screw handle on the cable connector as much as possible to insure waterproofing.

g. Connect cable W-3 from the mounting to the REC-TR CONTROL receptacle on Set 1. Tighten the screw handle on the cable connector as much as possible to insure waterproofing.

34. Audio Accessories

a. ASSEMBLY. The chest sets, headset, and headset-microphone sets provided in the installa-

tion unit should be assembled and made ready for use. The remaining audio accessories are shipped assembled.

b. DISPOSITION. The specific disposition and usage of audio accessories depend, in part, upon vehicular conditions and modes of operation to be used. Probable dispositions are indicated below. (See ch. 3 for the operating modes possible at the various audio connectors.)

- (1) Chest Set Group AN/GSA-6 will be used with Headset-Microphone H-63/U at the audio connectors of Control Box C-375/VRC and Local Control C-434/GRC.
- (2) Dynamic Loudspeaker LS-166/U, when supplied, will generally be used at the audio connector on Control Box C-375.
- (3) Microphone M-29/U is generally used at Control Box C-375.
- (4) Headset Navy Type CW-49507 with Cord CX-1334/U will generally be used at Control Box C-375.
- (5) Handset H-33/PT will be used generally at either Remote Control C-433/GRC or Local Control C-434/GRC.

Section IV. ADJUSTMENTS FOR OPERATION

Note. Personnel who are to perform the procedures described in this section should be familiar with the use of controls and instruments and with the operating procedures described in chapter 3.

35. Set 1 Antenna Tuning

Receiving and transmitting antenna circuits must be tuned separately in the Set 1 receiver-transmitters. Once the antenna circuits are tuned for a particular system antenna, it is not necessary to retune during normal operation.

a. RECEIVER TUNING. Perform steps 1 through 16, and 18 through 21 of the equipment performance checklist (par. 81) to determine that the receiver is operating. Leave the receiver operating and adjust as follows:

- (1) Tune for a signal in the top 900 kc of the tuning range (par. 57). If a signal is not heard, utilize the signal from another set or loosely couple the output of a signal generator to the receiver. The signal must be weak so as not to overload the receiver.
- (2) Using an ordinary screw driver, adjust

the REC-ANT TUNE control on the Set 1 panel for a maximum signal in the headset. Reduce the r-f input signal strength as the audio output level increases. Repeat the adjustment.

b. TRANSMITTER TUNING. Perform steps 1 through 16 and 24 through 27 of the equipment performance checklist (par. 81) to determine that the transmitter is operating. To tune the transmitter antenna, proceed as follows:

- (1) Tune the receiver-transmitter (par. 57) to the extreme low end of its tuning range (MCS control at lowest mc calibration, TENTH MCS control at zero). Leave the TENTH MCS control at zero throughout the tuning procedure.

Caution. Do not turn the TENTH MCS control while the TR-ANT TUNE control is being adjusted. Serious damage to the tuning mechanism can result.

- (2) Turn the TRANS-ANT COUPLING control completely counterlockwise to obtain minimum coupling.

- (3) Press and hold the RADIO and press-to-talk switches on the chest set.

Note. Keep all personnel removed as far as possible from the antenna while making the following adjustments.

- (4) Using an ordinary screw driver, adjust the TR-ANT TUNE control on the Set 1 panel for a maximum r-f reading on the panel meter. If it is impossible to obtain a reading, advance the setting of the TRANS-ANT COUPLING control slightly and repeat the procedure. Keep the coupling as low as possible while adjusting the TR-ANT TUNE for a maximum r-f reading. When the maximum reading is obtained, release the RADIO or push-to-talk switch on the chest set.
- (5) Repeat (3) and (4) above for each integral mc calibration on the MCS dial and for the highest detented frequency of each receiver-transmitter (27.9, 38.9, and 54.9

mc for Receiver-Transmitters RT-66/GRC, RT-67/GRC, and RT-68/GRC, respectively).

- (6) When adjustments are complete for each setting of the MCS control, turn the MCS control to the approximate center of the tuning range, and adjust the TRANS-ANT COUPLING control for a maximum r-f reading.
- (7) Repeat (3) through (6) above.

36. Operational Check

When Set 1 has been tuned, make a complete operation check of the system by performing the procedure outlined in the equipment performance checklist (par. 81). Omit steps 31 to 44 which pertain to Control Group AN/GRA-6. If abnormal indications are obtained, it will be necessary to trouble-shoot the system. When required, follow the trouble-shooting suggestions contained in the checklist.

Section V. CONTROL GROUP AN/GRA-6 AND MISCELLANEOUS EQUIPMENT

37. Control Group AN/GRA-6

Control Group AN/GRA-6 should only be installed when its peculiar facilities are required (par. 42). An initial installation should be made, however, to determine that the equipment will operate properly. Make this initial installation in accordance with the following instructions after the rest of the system has been completely installed, tuned, and checked. Turn the power switch on the mounting of OFF before beginning the installation.

a. LOCAL CONTROL C-434/GRC. Prepare and install the local unit as follows:

- (1) Loosen the screw fasteners on the panel and remove the panel-chassis assembly from the case.
- (2) Insert two 1½-volt Batteries BA-30 into the battery compartment and place the chassis-mounted switch (S-1) in the BELL position. Replace the panel-chassis assembly in the case (fig. 29).
- (3) Remove the protective cover plate from the plug at the rear. Open the hinged door to the right of the plug and store the cover in the clamp provided on the door (fig. 30).
- (4) Insert the unit in Mounting MT-297/GR.

Be sure the unit fits properly into the receptacle provided in the mounting. The locking lever to the right of the mounting bay which accommodates the unit (figs. 1 and 7) must be held in the open position (up) until the unit is properly installed and then rotated clockwise to the locking position (down).

b. REMOTE CONTROL C-433/GRC. Preparation and installation of the remote unit is as follows:

- (1) Loosen the fasteners which secure the case. Remove the panel-chassis assembly from the case.
- (2) Insert two 1½-volt Batteries BA-30 in the compartment provided, and insert and connect a 45-volt Battery BA-414/U in its compartment. Place the chassis-mounted switch in the BELL position and replace the panel-chassis assembly in its case (figs. 31 and 33).

c. INTERCONNECTION. When the above steps have been taken, the units are interconnected as follows:

- (1) Interconnect the local and remote units with telephone wire over as great a distance (up to 2 miles) as desired. Insert no switchboards or drops on the line.

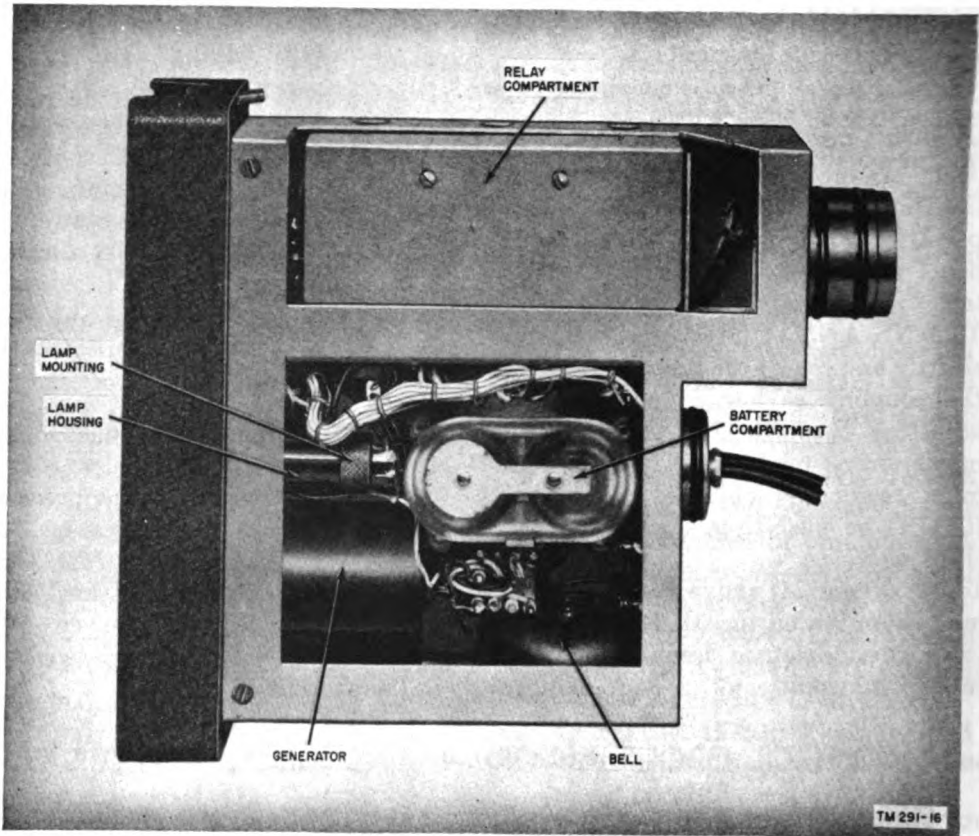


Figure 29. Local Control C-434/GRC, batteries installed.

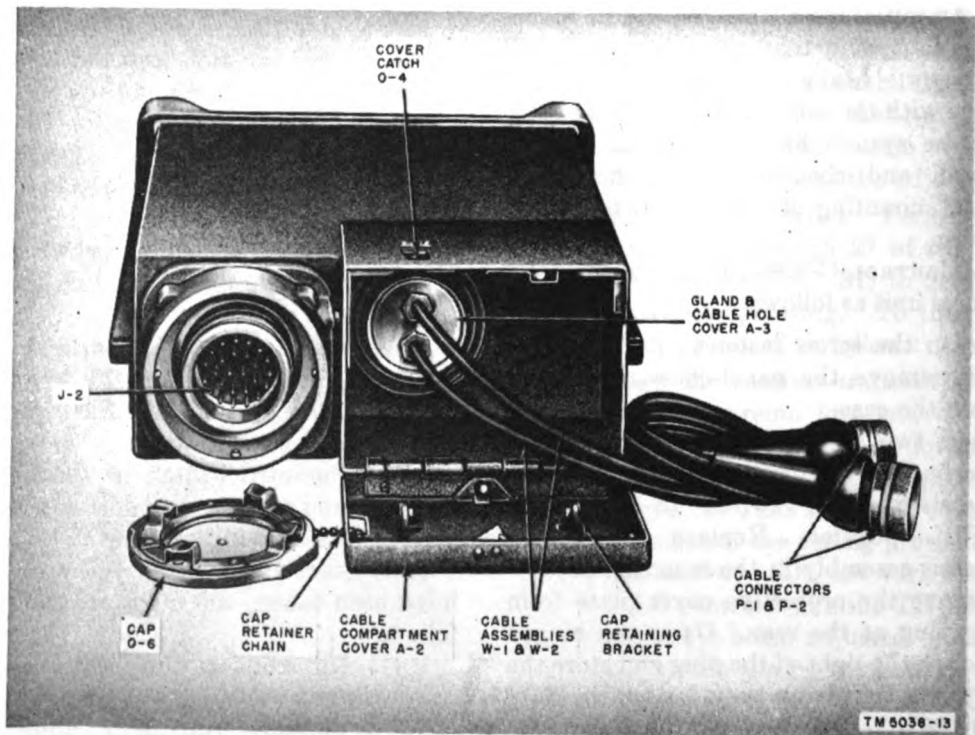


Figure 30. Local Control C-434/GRC, rear view.



Figure 31. Remote Control C-433/GRC, batteries installed.

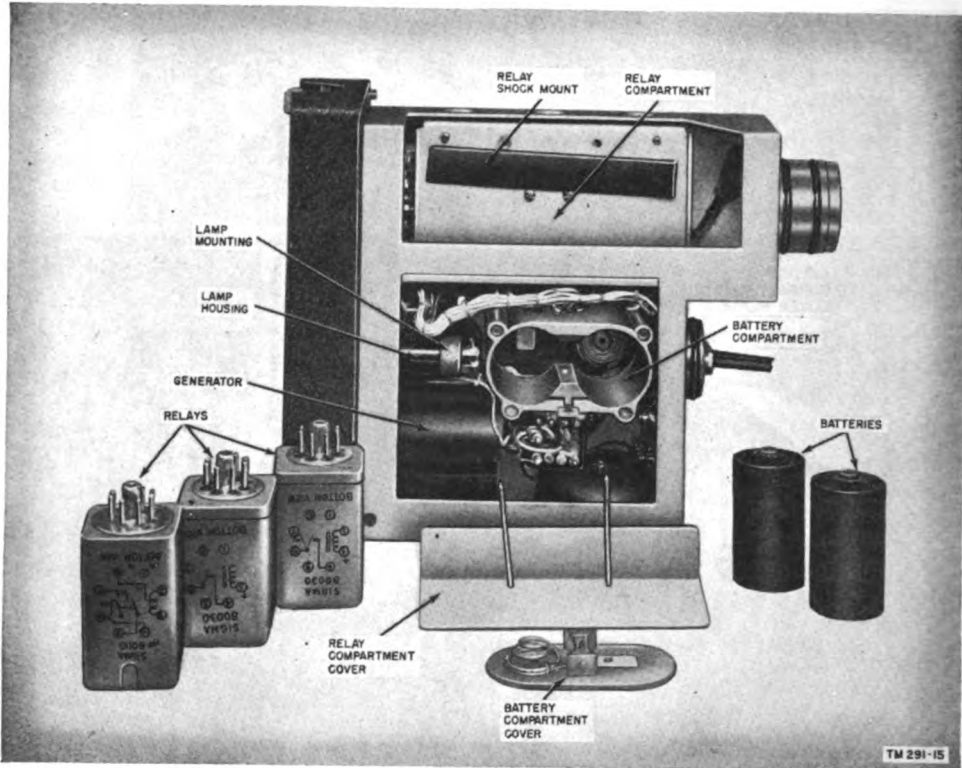


Figure 32. Local Control C-434/GRC, batteries removed.

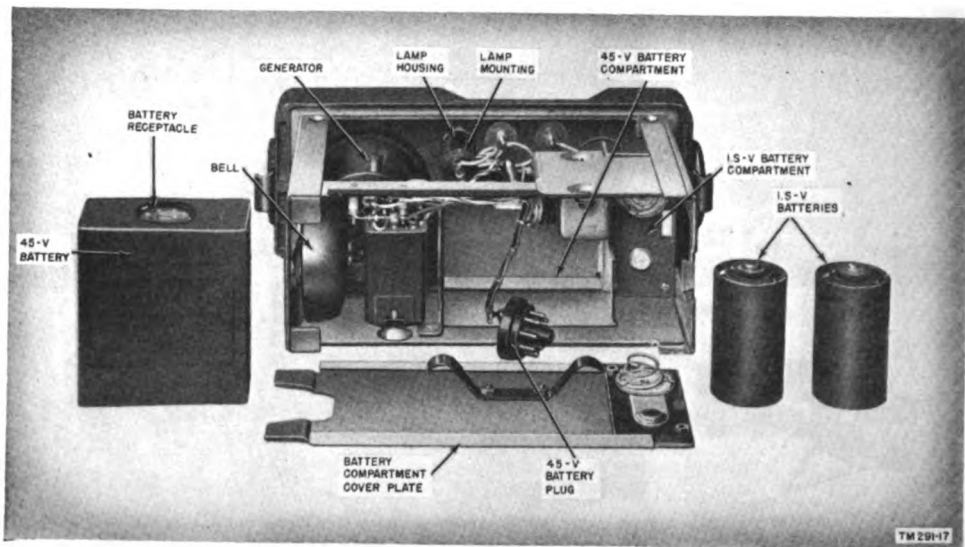


Figure 33. Remote Control C-433/GRC, batteries removed.

- (2) Strip the insulation off the wires approximately $\frac{1}{4}$ inch from the ends, and tin the bared wires before clamping them in the binding posts (designated LINE L1 and L2) on each of the units.

d. **TESTING AND SECURING.** On completion of the above steps, continue as follows:

- (1) Perform the preliminary starting procedure (par. 54) and steps 31 through 45 of the equipment performance checklist (par. 81).
- (2) When satisfactory performance has been obtained, turn the power switch on the mounting to OFF and remove the local control unit from the mounting.
- (3) Replace the protective cover on the plug at the rear of the local control unit and connect the unit to Set 1 by means of the cable and plug in the compartment at the rear of the unit. Audio connector P-1 (fig. 30) connects to the AUDIO connector on Set 1.
- (4) Return the power switch on the mounting to ON and perform step 38 of the equipment performance checklist (par. 81).
- (5) After operation has been checked, disconnect the local control unit and remove the batteries from both the local and remote units. Never leave the batteries installed unless the units will be used in a relatively short period of time.

38. Storage of Equipment Not in Use

Equipment not immediately required for operation, such as running spares, audio accessories, or Control Group AN/GRA-6, should be packed in the containers provided and stored in a convenient location within the vehicle.

a. **RUNNING SPARES.** All spare mast sections should be placed in Bag CW-206/GR in the pockets. Case CY-684/GR should be filled with spare

parts from the stock of running spares supplied with each unit, and it too should be stored in Bag CW-206/GR. Since Case CY-684/GR will not hold all the spare parts provided, a judicious selection should be made from the spares available. It is suggested that the following list be used as a guide in selecting the spares for packaging in Case CY-684/GR.

Spare part	Quantity
Vibrator (6- or 24-volt for 12- and 24-volt systems, respectively).	1
Relay, Ratheon CK-118.....	1
Ballast tube, 800 ma (milliamperes).....	1
Ballast tube, 600 ma.....	1
Tube type 0A2.....	1
Tube type 0B2.....	1
Tube type 2E24.....	1
Tube type 6AK6.....	1
Tube type 6AK5.....	2
Tube type 3A5.....	2
Tube type 3Q4.....	2
Tube type 3A4.....	1
Tube type 3B4.....	1
Tube type 1Z4.....	2
Tube type 185.....	1
Tube type 1A3.....	2
Tube type 1U4.....	3
Tube type 1R5.....	3
Tube type 1AE4.....	1
Tube type 12AU7.....	1
Tube type CK-1007.....	1
Lamp NE-51.....	1
Lamp, Masda 331.....	2
Fuse (10- or 4-ampere for 12- and 24-volt systems, respectively).	3

b. **AUDIO ACCESSORIES AND TECHNICAL MANUALS.** Audio accessories not required for operation can be stored in Bag CW-206/GR. Technical manuals can also be stored in the same bag.

c. **CONTROL GROUP AN/GRA-6.** When Control Group AN/GRA-6 is not required for operation, it should be stored in Bag CW-189/GR.

CHAPTER 3

OPERATING INSTRUCTIONS

Section I. MODES OF OPERATION

39. Monitoring

Listening to received signals with no attempt to communicate with the sending station constitutes monitoring. The receiver section of the receiver-transmitter in the radio set can be operated strictly as a monitor if so desired. The receiver can be monitored at the interphone box, local or remote control units, and also it is possible to monitor it by means of a speaker or headset directly connected to the unit audio connector.

40. Push-to-Talk Operation

a. Push-to-talk operation utilizes one-way reversible communication facilities. Receiving facilities are available provided that power is supplied to the equipment, but transmission requires closure of one or more switches (generally the push-to-talk switch of a chest set, handset, or microphone). Communication is possible in only one direction at a time and it is impossible for the receiving part to *break-in* on the sending party.

b. Push-to-talk operation of Set 1 may be selected at the interphone box, the local control unit, and the remote control unit (pars. 58 and 59, respectively). A chestset at the interphone box is most commonly used. It is also possible to

operate the receiver-transmitter individually by means of a chest set or handset connected directly to the unit audio connector.

41. Interphone Facilities

Interphone facilities are available to the operators at each interphone box and at the panel of the interphone amplifier. Normally, the panel of the interphone amplifier will not be used as an interphone station, but it is a convenient point for checking the operation of the amplifier (par. 85).

42. Remote Control Facilities

The use of Control Group AN/GRA-6 makes it possible to control application of power for the radio sets and/or push-to-talk operation of Set 1 from a control station 2 miles removed from the major installation. Refer to paragraph 59 for operating details.

43. Duplex Telephone Facilities

When Control Group AN/GRA-6 is used for remote control of the radio sets, duplex telephone facilities are available for communication between local and remote control units whether or not the local control unit is plugged into the mounting.

Section II. CONTROLS AND INSTRUMENTS

44. Introduction

The following paragraphs (45 through 51) indicate the functions of operational controls and instruments on the panels of the various units. Although ordinary operating procedures are confined mainly to control units and audio accessories, and understanding of the controls and instruments

on the individual units is essential to efficient operation and maintenance of the radio sets.

45. Mounting

The main power switch for the radio sets and a clear pilot lamp are mounted on the junction-box portion of Mounting MT-297/GR (fig. 7).

Control or instrument	Function
OFF-REMOTE-ON switch (S-1).	Controls battery power to the radio sets. OFF: Opens battery circuit in the mounting. REMOTE: Places power control in hands of operator at Remote Control C-433/GRC. ON: Connects battery power to the input terminals of the interphone amplifier and Set 1 power supply.
POWER lamp (E-7).....	Indicates (when lit) that power has been made available at the input terminals of the interphone amplifier and Set 1 power supply. Dimmer control provides for masking the glow of the lamp.

Control	Function
OFF-INT-RT-70 switch*.....	Controls power for the interphone amplifier or for the Set 2 receiver-transmitter and the interphone amplifier. OFF: Breaks battery circuit at input terminals of the amplifier. INT: Completes power circuits for interphone amplifier. RT-70: Completes power circuits for interphone amplifier and Set 2 receiver-transmitter (Not used).*
VOLUME control (R-20).....	Controls output level from Set 1+Set 2+ Interphone channel to C-434 and panel-mounted AUDIO connector.
AUDIO connector (J-1).....	Provides means for connecting a chest set (with microphone-headset) for monitoring and interphone operation over the Set 1+Set 2+ Interphone channel. <i>Note.</i> If chest set is used in this manner, both the RADIO and push-to-talk switches must be depressed for interphone operation.

46. Interphone Amplifier

The controls of the interphone amplifier are shown in figure 34 and their functions are listed in the following chart.

*Do not turn the OFF-INT-RT-70 switch to the RT-70 position unless a Receiver-Transmitter RT-70/GRC, or its equivalent load is used across the output terminals which supply the receiver-transmitter.

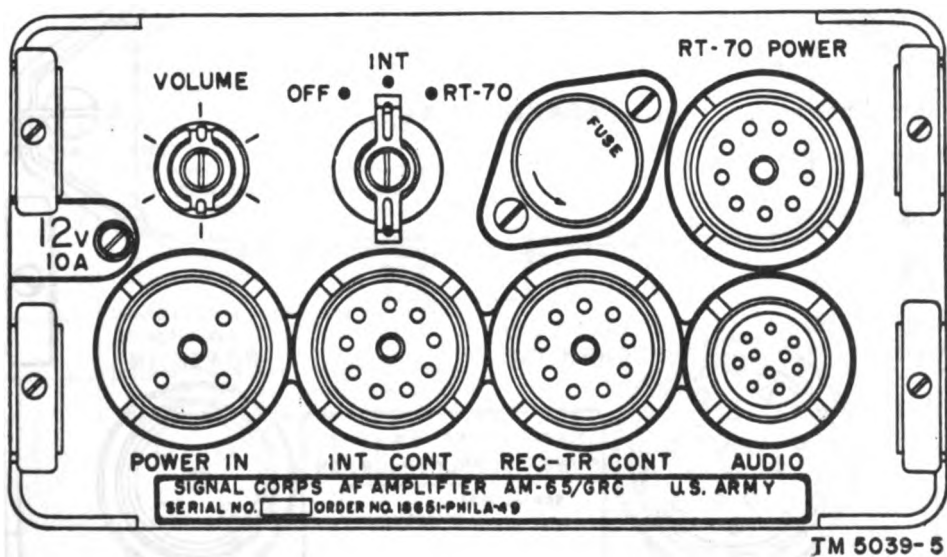



Figure 34. Interphone amplifier panel.

47. Set 1 Power Supply

The controls for both the 12-volt and 24-volt Set 1 power supply (Power Supplies PP-109/GR and PP-112/GR, respectively) are the same. Figure 35 illustrates the panel layout of controls. The following chart lists the control functions.

Control	Function
OPERATE switch (S-1).....	Controls power to Set 1 receiver-transmitter power supply. OFF: Opens battery circuit at input terminals of the power supply.

Control	Function
OPERATE switch (S-1)— Continued	RECEIVE: Completes battery circuit to receiver-power supply circuits and to receiver-transmitter relay-supply circuit. TRANS & RECEIVE: Completes battery circuit to transmitter power-supply circuits, in addition to those circuits listed under the RECEIVE position.
TRANS POWER switch (S-2).	Provides for HIGH or LOW r-f power operation of the transmitter in the HIGH and LOW positions, respectively.

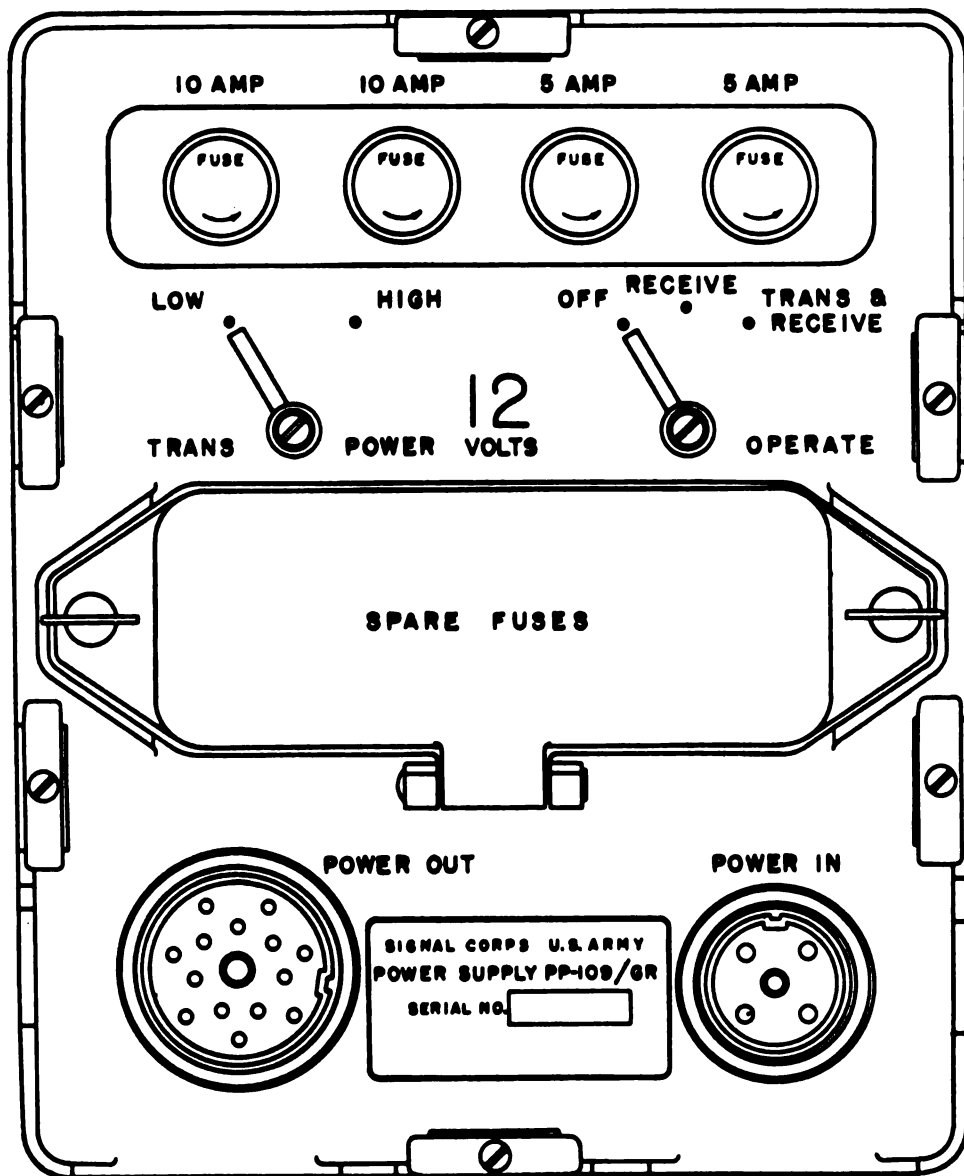

TM5036-7

Figure 35. Set 1 power supply panel.

18. Set 1 Receiver-Transmitter

The controls for the Set 1 receiver-transmitter Receiver-Transmitter RT-66/GRC, RT-67/GRC, or RT-68/GRC) are illustrated in figure 36. The functions are listed in the following chart.

Control or instrument	Function
Dial LAMP (E-313).....	Illuminates tuning dials except when RING DIAL LIGHT (OFF-ON) switch is OFF.
RING-DIAL LIGHT (OFF-ON) switch (S-302).	Controls dial LAMP, microphone, and ringing oscillator circuits. OFF: Completes microphone circuit and turns dial LAMP off. ON: Completes microphone circuit and turns dial LAMP on. RING: Spring return; breaks microphone circuit, turns on ringing oscillator, turns on dial LAMP, and turns on transmitter.
VOLUME control (R-303)....	Adjusts the audio output level to speaker and phone terminals of the panel-mounted AUDIO connectors.
SQUELCH-OFF control (R-302 and S-303).	Controls the noise suppression circuits of the receiver and determines what minimum level of input signal will be required for operation of the receiver. In OFF position, provides no noise suppression and allows receiver to operate at maximum sensitivity.
MCS and TENTH MCS tuning controls and dials.	Selects and indicates the operating frequency. MCS: Selects and indicates each integral mc of the tuning range in 1-mc steps. TENTH MCS: Selects and indicates the decimal portion of the operating frequency in either 100-ke steps or in a continuous sequence.
PRESET levers.....	Provides means of presetting one or two detented channels (par. 57).
METER (M-301).....	Indicates transmitter r-f power output, filament continuity, and availability of d-c (85-volt) operating potential.

Control or instrument	Function
METER selector switch (S-301).	Connects METER to test points as indicated below: RF position: Connects meter to transmitter r-f output circuit. Positions 2 through 11: Connects meter to various filament circuits (par. 84). 90V position: Connects meter to 85-volt d-c supply circuit.
TR-ANT TUNE control (C-74).	Adjusts transmitter-antenna-circuit tuning. (This is an installation adjustment only.)
TRANS-ANT COUPLING control (L-23).	Adjusts coupling between transmitter output stage and antenna. (This is an installation adjustment only.)
REC-ANT TUNE control (C-1A).	Adjusts receiver-antenna-circuit tuning. (This is an installation adjustment only.)
AUDIO connectors (J-310 and J-311).	Provide means of connecting chest set (with headset-microphone), microphone, headset, handset, or speaker, for separate local monitoring or push-to-talk operation of the receiver-transmitter.
REC-TR CONTROL.....	A 9-pin multiconnector which serves to make connection between the control circuits in the receiver-transmitter to external components, such as control boxes, junction boxes, etc., as required by a particular installation.
POWER IN connector.....	A 14-pin multiconnector which serves to connect external plate, screen, bias, filament, and relay voltages to the receiver-transmitter circuits.
ANT connector.....	A small pin-type coaxial connector which routes the common transmitter and receiver antenna to contacts on the antenna switch-over relay in the set.
AUX REC-ANT connector...	A binding post used to connect an auxiliary receiver, if used, with the antenna circuit of the receiver.

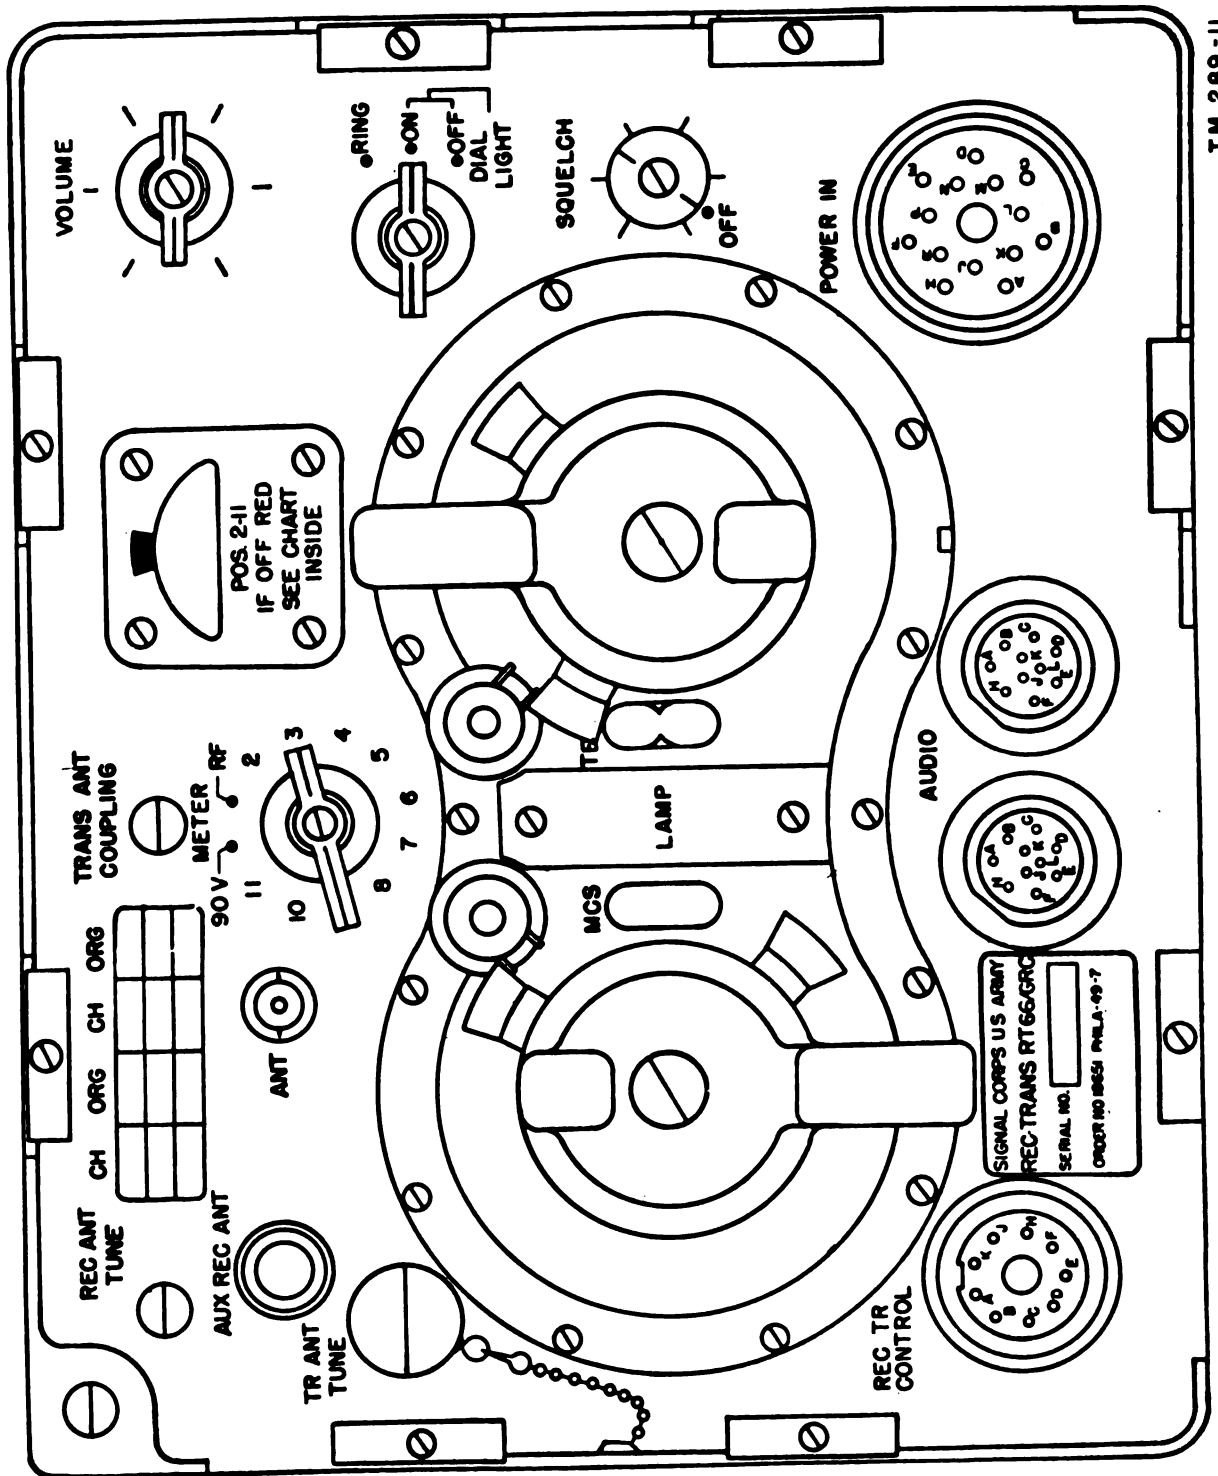


Figure 30. Set 1 panel.

49. Interphone Box

The controls on the interphone boxes (Control Box C-375/VRC) are illustrated in figure 37. Functions are listed in the following chart.

Note. Set 2 is not used in this system.

Control	Function
Selector switch (S-1).....	Interphone operation is always possible (independent of selector switch). Selects input and output of receiver-transmitter, and interphone amplifier for transmission, intercommunication, and monitoring, dependent upon RADIO TRANS switch settings. Counterclockwise position: Selects the output of Set 1 and the interphone amplifier for monitoring; selects the input of Set 1 for transmission if the RADIO TRANS switch is also operated. Center position: Selects the output of both Sets 1 and 2 and the interphone amplifier for monitoring; selects the input of the interphone amplifier for intercommunication. Clockwise position: Selects the output of Set 2 and the interphone amplifier for monitoring; selects the input of Set 2 for transmission if the RADIO TRANS switch also is operated.
RADIO TRANS switch (S-2).	When a chest set is used and switch is in RADIO TRANS position, the chest set switches control interphone and push-to-talk operation.

Control	Function
RADIO TRANS switch (S-2)— Continued	Provides for either intercommunication or radio transmission. Center position: Selects the interphone amplifier for intercommunication. RADIO TRANS positions: Completes the Set 1 or Set 2 transmitting circuit as determined by the setting of the selector switch (above).
VOL. controls (R-1 and R-2)...	Determine signal levels at PHONE jacks and audio connectors. (Level at each PHONE jack and audio connector is affected by the VOL. control nearest the jack or connector.)
Audio connectors (J-1 and J-2).	Provide for connection of Chest Set Group AN/GSA-6 (with Headset-Microphone H-63/U) for operation of the receiver-transmitters and interphone amplifier.
MIC. jacks (J-3 and J-4).....	Provide for connection of Microphone T-17 for operation of receiver-transmitters and interphone amplifier. (Efficiency of operation will be affected by such usage and is not normally advisable if the standard audio accessories are available.)
PHONE jacks (J-5 and J-6)...	Provide for connection of Headset H-16/U or Headset HS-30 in combination with Cord CD-933 for monitoring the receiver-transmitters and interphone amplifier. (Efficiency of operation will be effected by such usage and normally is not advisable if the standard audio accessories are available.)

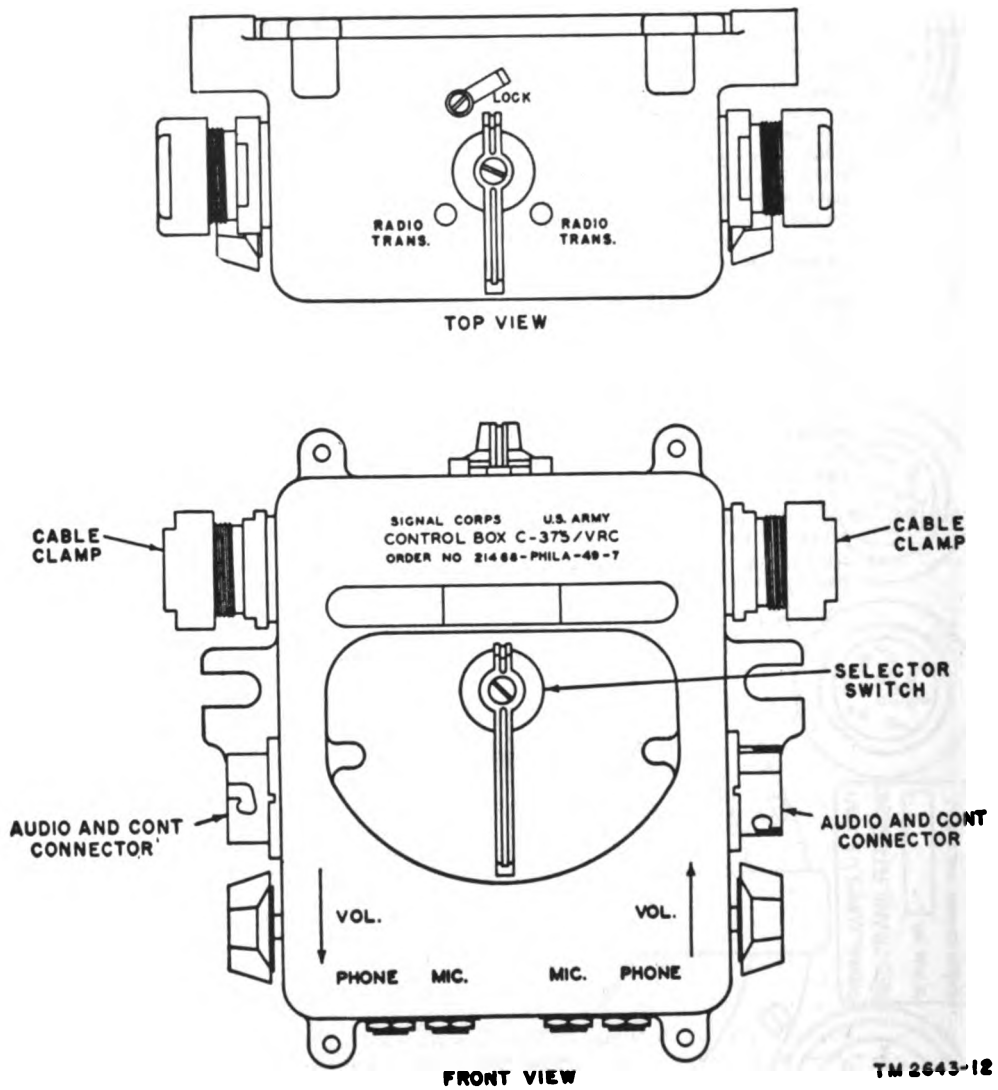


Figure 37. Panel views of interphone box.

50. Local Control C-434/GRC

Figure 38 illustrates the layout of controls and instruments on Local Control C-434/GRC. The following chart lists the functions of controls and instruments.

Note. Set 2 is not used in this system.

Control or instrument	Function
LOCAL switch (S-3).....	Provides for push-to-talk operation of either Set 1 or Set 2 and for duplex telephone operation with the remote unit. SET 1: Allows push-to-talk operation of Set 1. SET 2: Allows push-to-talk operation of Set 2. TEL: Allows telephone operation with remote unit.
REMOTE switch (S-1).....	In conjunction with controls at remote unit and at mounting, provides for remote control of power for the radio set and/or remote control of push-to-talk operation of Sets 1 and 2. Also provides means of limiting operation (at the remote unit) to telephone communication.

Control or instrument	Function
REMOTE switch (S-1)—Con.	TEL ONLY: Allows for telephone communication between local and remote control units, and breaks power and push-to-talk remote control circuits. SET 1 and 2: Provides for remote control of push-to-talk operation of Sets 1 and 2. SET 1: Provides for remote control of power for the radio set and push-to-talk operation of Set 1. SET 2: Provides for remote control of power for the radio set and push-to-talk operation of Set 2.
LINE L1 and L2.....	Provide telephone-line connections.
Ringing generator.....	Provides means of sending a ringing signal to the remote unit.
CALL LIGHT (E-3).....	Indicates (when lit) that a ringing signal is being received from the remote unit. (CALL LIGHT indication can be replaced by a bell, by means of an internal switch.) Dimmer control provides for masking glow of the lamp.
AUDIO connector (J-1).....	Provides means of connecting a handset or chest set (with headset and microphone) for telephone communication and push-to-talk operation of the radio set.

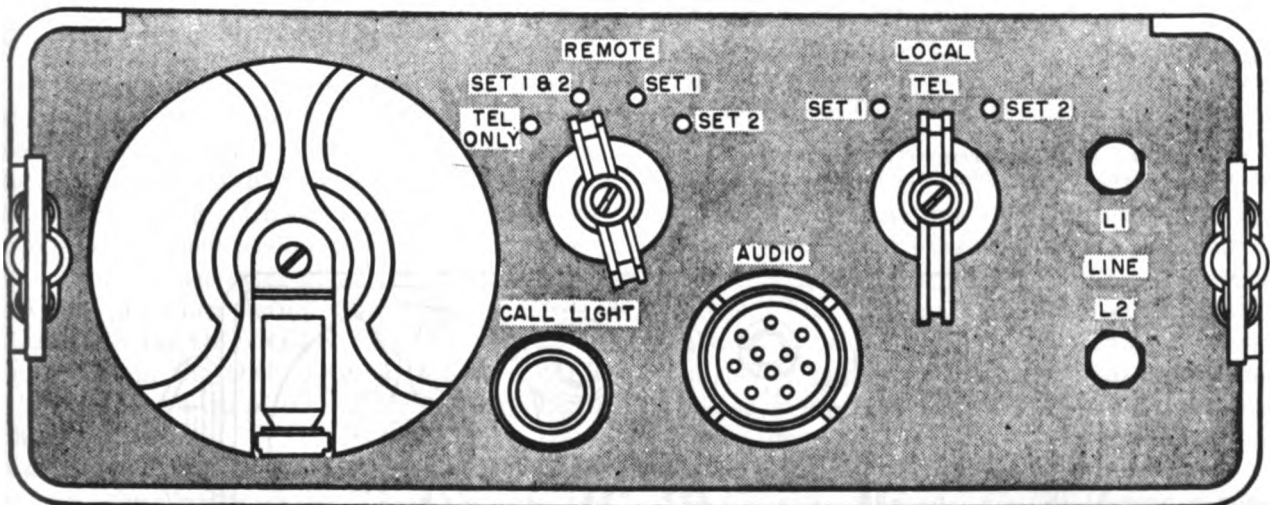


Figure 38. Panel view of local control unit.

TM 284-61

51. Remote Control C-433/GRC

Figure 39 illustrates the controls and instruments on Remote Control C-433/GRC. The following chart lists the functions of controls and instruments.

Note. Set 2 is not used in this system.


Control or instrument	Function
SELECTOR switch (S-2).....	In conjunction with controls at local units, and the mounting switch provide for remote control of power for the radio set and/or push-to-talk operation of Sets 1 and 2; also provides means of limiting operating to telephone communication. Right write-in position: A power-off position or Set 2 remote control position depending upon setting of REMOTE switch in local control unit.* Left write-in position: A power-on position, or a remote control position for Set 1, depending upon setting of REMOTE switch in local control unit.* TEL position: limits operation to telephone communication between local and remote units.
LINE L1 and L2.....	Provide telephone-line connections.
Ringing generator.....	Provide means of sending a ringing signal to the local control unit.
CALL LIGHT (E-3).....	Indicates (when lit) that a ringing signal is being received from the local unit. (CALL LIGHT indication can be replaced by a bell by means of an internal switch.) Dimmer control provides for masking glow of the lamp.
AUDIO connector (J-1).....	Provides means of connecting a handset for telephone communication and operation of the radio set.

*The functions of the write-in positions will be reversed by the reversal of the telephone-line connections at either the local or remote control unit.

52. Chest Set Group AN/GSA-6

The controls on the Chest Set Group AN/GSA-6 are shown in figure 11. The following chart lists the functions of the controls.

Control	Function
RADIO switch (S-1).....	In conjunction with the controls at the mounting and the local control box, and the HOLD ON switch (below), provides for push-to-talk control of SET 1 or interphone operation. Normally in the interphone position, depressed for radio operation. Incorporates locking features which are described in paragraph 18.
HOLD ON switch (S-2).....	In conjunction with the controls at the mounting and local control box, and the RADIO switch (above), provides for interphone or push-to-talk operation of Set 1. This switch is of the momentary contact type.
LOCK ON switch.....	Performs the same function as the HOLD ON switch but locks into position after it has been initially depressed. HOLD ON switch must be depressed to release this. A locking feature, described in paragraph 18, permits disabling this switch.

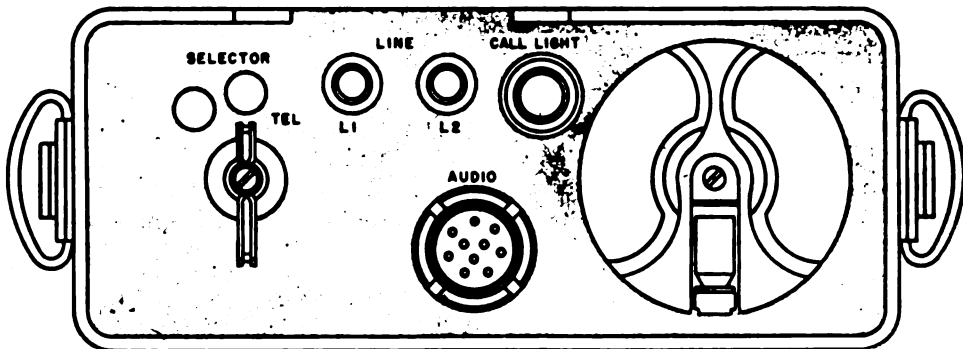

TM 284-60

Figure 39. Panel view of remote control unit.

Section III. OPERATION

53. Operational Procedures

a. Operation of the radio sets involves the following basic procedures:

- (1) Start-stop operations.
- (2) Squelch adjustments.
- (3) Volume-level adjustments.
- (4) Tuning.
- (5) Transmit-control operations.

b. The first four of the above listed procedures generally are local operations (performed at the panels of the various major units) and are not necessarily repeated during a normal operating period. This is with the possible exception of remote control. (It may be necessary to repeat tuning and squelch adjustments as the occasion demands.) The transmit-control operations are performed at one or the other of the control units and are continually repeated during normal operating periods.

c. To facilitate ready reference, the local operations and the transmit-control operations are discussed under separate headings in paragraphs 54 through 59.

54. Preliminary Starting Procedure

The preliminary starting procedure prepares the equipment for routine operation by setting controls so that routine starting and stopping may be limited to use of the OFF-REMOTE-ON switch on the mounting. Unless control settings are disturbed subsequent to shut-down of the equipment, it will not be necessary to repeat the preliminary starting procedure during routine operation.

a. With the OFF-REMOTE-ON switch of the mounting in the OFF position, place the OFF-INT-RT-70 switch of the interphone amplifier in the INT position.

Caution: Do not use the RT-70 position of this switch, since without the Receiver-Transmitter RT-70/GRC in the system, thermal relay D/K-1 in the amplifier may be damaged.

b. Turn the OPERATE switch of the Set 1 power supply to the TRANS & RECEIVE position.

c. Turn the TRANS POWER switch of the Set 1 power supply to the HIGH position.

d. Turn the SQUELCH control of Set 1 to the maximum clockwise position.

55. Routine Starting Procedure

When the controls have been set (or left set) as outlined in the preliminary starting procedure, apply power to the radio set by placing the OFF-REMOTE-ON switch of the mounting in the ON position.

56. Squelch and Volume-level Adjustments

The SQUELCH control of Set 1 should be set as soon as the equipment is placed in operation. The set should be checked periodically to insure operation at maximum sensitivity for the particular noise conditions present. Set the controls as outlined below.

a. Provide a monitor for the receivers. The monitor may be a chest set (with headset and microphone) connected to the AUDIO connector on the local control unit or interphone box. If an interphone box is used, turn the selector switch of the box to the left position (SET 1+INT).

b. Turn the Set 1 SQUELCH control counterclockwise until noise is audible in the headset. Note the approximate noise level present in the headset. Then advance the control in a clockwise direction to the point at which the receiver quiets.

Note. When the tuning of the set is changed, it may be necessary to reset the SQUELCH control.

57. Tuning Set 1

Once the antenna circuits have been properly tuned (par. 35), Set 1 can be tuned to any desired channel frequency by merely turning the MCS and TENTH MCS controls to the proper detent positions (*a* below). Continuous tuning between channels is possible by means of the procedure outlined in *b* below. Any two detented channels may be preset for rapid selection by means of the procedure outlined in *c* below.

a. CHANNEL TUNING. Channel tuning is possible at every 100-kc interval between the lower and upper ends of the tuning range.

- (1) To obtain detent operation of the tuning mechanism, if the unit was previously set up for continuous tuning, rotate the TENTH MCS control to the extreme clockwise position. The control should snap into position indicating that the mechanism is set up for detent operation.

- (2) Turn the MCS control until the MCS dial indicates the integral portion of the desired frequency, for example, until the dial indicates 24 when the desired frequency is 24.8 mc.
- (3) Turn the TENTH MCS control until the TENTH MCS dial indicates the decimal portion of the desired frequency, for example, until the dial indicates 8 when the desired frequency is 24.8 mc.

Note. When turning the TENTH MCS control, do not hold the MCS control. Holding the MCS control will affect the calibration of the tuning controls.

b. CONTINUOUS TUNING. Continuous tuning throughout the range of Set 1 is possible by releasing the channel-detent mechanism of the TENTH MCS dial.

- (1) Turn the MCS control (as for channel tuning) until the MCS dial indicates the integral portion of the desired frequency.
- (2) Turn the TENTH MCS control to the extreme counterclockwise position to release the detent mechanism.
- (3) Turn the TENTH MCS control clockwise until the TENTH MCS dial indicates the decimal portion of the desired frequency. (Calibration marks between the major 100-kc (.1-mc) divisions represent 25-kc (.025-mc) intervals; when the MCS dial indicates 24, a frequency of 24.85 mc is selected by turning the TENTH MCS control until the second calibration mark between 8 and 9 appears opposite the indicator on the TENTH MCS dial.)

c. PRESETTING DETENTED CHANNELS. Presetting is obtained by means of stops which limit the rotation of the tuning knobs. The stops can be swung into place for presetting (or removed when the presetting feature is not desired) by means of adjusting knobs. When in place for presetting, the stops will engage the green and the red levers on the tuning controls as the controls are rotated. The positions of the red and green levers can be changed so that the stops will function for any desired frequency. To preset any two frequencies, perform the following steps.

- (1) Turn the MCS and TENTH MCS tuning controls until the higher of the desired frequencies is indicated on the tuning dials.

- (2) Pull on the stop adjusting-knobs (against the spring tension which holds them locked against the panel) and turn the knobs so that the stops are positioned to engage the green and the red preset levers. Make certain that the stops lock into position.
- (3) Loosen (but do not remove) the screw which secures the MCS tuning control.
- (4) Turn the green lever on the MCS control in a clockwise direction until it strikes against the stop. Hold the lever against the stop and tighten the screw on the tuning control.
- (5) Loosen (but do not remove) the screw which secures the TENTH MCS tuning control.
- (6) Compare the tenths portions of the two frequencies which are to be preset and set the green preset lever on the TENTH MCS control in one of the following ways:
 - (a) If the tenths portion of the higher preset frequency is higher than the tenths portion of the lower preset frequency, turn the green lever in a clockwise direction until it strikes the stop. Hold the lever against the stop and tighten the screw on the tuning control.
 - (b) If the tenths portion of the higher preset frequency is lower than the tenths portion of the lower preset frequency, turn the green lever in a counterclockwise direction until it strikes the stop. Hold the lever against the stop and tighten the screw on the tuning control.
- (7) Turn the MCS and TENTH MCS controls until the lower of the desired frequencies is indicated on the tuning dials.
- (8) While holding the green lever in place, loosen the screw on the MCS tuning control and turn the red lever in a counterclockwise direction until it strikes the stop. Tighten the screw on the tuning control.
- (9) The setting of the red lever on the TENTH MCS control depends upon the setting of the green lever ((6) above). If the green lever was set in a counterclockwise posi-

tion, set the red lever in a clockwise position and vice versa.

Note. In describing the presetting procedure, it was assumed that the green preset levers would be used for the higher frequency and the red levers for the lower frequency. The opposite convention is equally suitable, but consistency in either convention is desirable.

58. Operation From Interphone Box

a. MODES OF OPERATION. When power has been supplied to the radio sets, squelch adjustments have been made, and Set 1 has been tuned, the following modes of operation are possible at the interphone box.

- (1) Monitoring of Set 1.
- (2) Push-to-talk operation of Set 1.
- (3) Interphone facilities between interphone boxes.

b. CONNECTION OF AUDIO ACCESSORIES. For all modes of operation, connect Chest Set Group AN/GSA-6 to one of the audio connectors on the interphone box and connect Headset-Microphone H-63/U to the chest set. Lock the RADIO TRANS switch of the interphone box in the RADIO TRANS position. For additional monitoring facilities, a second chest set group may be connected to the other audio connector on the interphone box.

c. MONITORING. To monitor Set 1, turn the selector switch to the left-hand (counterclockwise) position. Adjust the volume level by means of the VOL. control next to the audio connector being used.

d. INTERPHONE OPERATION. Interphone reception is possible for any position of the selector switch. Transmission is possible in the SET 1+INT position. To communicate with an operator at any interphone box, press the push-to-talk switch on the chest set and talk into the microphone. The operator can *break-in* on a conversation at any time without waiting for the sending party to stop talking. *Do not press the RADIO push-button switch on the chest set. If the selector switch is in the left-hand position, the transmit-control circuits will be operated.*

e. PUSH-TO-TALK OPERATION. For push-to-talk operation of Set 1, turn the selector switch to the left-hand position, press the push-to-talk switch and the push-button RADIO switch on the chest set, and talk into the microphone. Release the chest set switches to listen. The internal wiring of the interphone box is arranged to allow

an operator to hear an interphone signal regardless of the position of the selector switch. In the SET 1+INT position of this switch, confusion may arise as to which signal is the interphone and which signal is the radio when both signals are present. When such a case arises, turn the selector switch to the center, SET 1+SET 2+INT, position and listen to the two signals. The louder of the two is the interphone signal. After an identification has been made, return the selector switch to the SET 1+INT position before attempting to transmit on Set 1.

59. Operation from Control Group AN/ GRA-6

a. MODES OF OPERATION. Although Control Group AN/GRA-6 is provided mainly to allow remote operation of the radio sets from points up to 2 miles away from the installation, local as well as remote operating facilities are available. The complete facilities are as follows:

- (1) Simultaneous monitoring of received signals at both local and remote units.
- (2) Local push-to-talk operation of Set 1.
- (3) Telephone communication, including ringing, between local and remote units.
- (4) Remote push-to-talk operation of Set 1.
- (5) Remote control of power for the radio set and remote push-to-talk operation of Set 1.

b. INSTALLATION. Turn the OFF-REMOTE-ON switch of the mounting to OFF and install Control Group AN/GRA-6 as outlined in paragraph 37. When the installation is completed, turn the OFF-REMOTE-ON switch to the REMOTE position.

c. MONITORING. It is possible to monitor the output of the receiver at either the local or remote control unit with the REMOTE switch set at any position but TEL ONLY. The setting of the LOCAL switch should be TEL.

d. LOCAL PUSH-TO-TALK OPERATION.

- (1) Set the REMOTE switch to SET 1 & 2.
- (2) For push-to-talk operation of Set 1, hold the LOCAL switch in the SET 1 position, press the push-to-talk and RADIO switches on the chest set, and talk into the microphone. Release the chest set switches to listen.

Note. The RADIO switch on the chest set may be locked in the RADIO position for convenience by means of the internal adjustment (par. 18). This switch is normally in the interphone position.

e. TELEPHONE COMMUNICATION. Telephone communication between local and remote units is possible for any setting of the REMOTE switch, but the selector switch at the remote unit must be in the TEL position. When the REMOTE switch is in the TEL ONLY position, only telephone operation is possible. When the SELECTOR switch at the remote unit is in the TEL position, telephone communication is the only operation possible from the remote unit; as long as the REMOTE switch is at the SET 1 & 2 position, however, local push-to-talk operation of the receiver-transmitter is possible. Telephone operation is as follows:

- (1) To send a ringing signal in either direction, turn the crank of the ringing generator at the sending unit (local or remote). Either a CALL LIGHT will glow or a bell will ring at the receiving end, depending upon the setting of internal switches in the local and remote units.

Note. Whenever a ringing signal is to be sent in either direction, the REMOTE switch on the local control unit should be in the TEL ONLY position. If this switch is set in the SET 1 or the SET 1 & SET 2 position when a ringing signal is sent, transmission of the ringing signal will occur. As a precautionary measure, always keep the REMOTE switch in the TEL ONLY position except when actually transmitting a signal.

- (2) To communicate, press the push-to-talk switch on the handset (at the remote unit) or the push-to-talk switch and RADIO switch on the chest set (at the local unit) and talk into the mouthpiece or microphone. Full duplex operation is possible; it is not necessary to release the push-to-talk switches to listen.

f. REMOTE PUSH-TO-TALK OPERATION. The operator at the remote unit can inform the local operator by telephone of the mode of operation desired.

- (1) Place the REMOTE switch of the local unit in the SET 1 & 2 position.
- (2) For remote push-to-talk operation of Set 1, place the SELECTOR switch of the remote unit in the left-hand write-in position, press the push-to-talk switch

on the handset, and talk into the mouthpiece. Release the push-to-talk switch to listen.

Note. If the telephone line connections at either unit are reversed, the right-hand write-in position will control Set 1, and the left-hand write-in position will be blank. Operation will be unaffected otherwise.

g. REMOTE POWER CONTROL AND PUSH-TO-TALK OPERATION OF SET 1. The operator at the remote control unit must set up the mode of operation prior to going to a remote position. If there are two operators available, the remote operator only need call in by the telephone system to the local operator for the setting of the mode of operation that is desired.

- (1) Turn the mounting switch to the REMOTE position.
- (2) Place the REMOTE switch on the local local control unit to the SET 1 position.
- (3) Place the SELECTOR switch at the remote unit in the left-hand write-in position. Press the push-to-talk switch on the handset momentarily. If power is not applied to the radio set (as determined by noise from set either momentary or extended, depending on squelch setting), the telephone line connections are reversed. Reverse and repeat action.
- (4) After power is applied, push-to-talk operation of Set 1 is possible by pressing the push-to-talk switch and talking into the microphone. To listen, release the switch.
- (5) To remove power from the radio set, turn the SELECTOR switch on the remote unit to the right-hand write-in position and press the push-to-talk switch on the handset momentarily.

Note. The use of the right-hand write-in position as a power off position, and the left-hand write-in position as a power on position is chosen for convenience. If the telephone line were reversed, the functions of these two switch positions are merely reversed.

60. Stopping Procedure

a. To remove power from the entire radio set, place the OFF-REMOTE-ON switch of the mounting in the OFF position. To remove power from a single unit, leave the OFF-REMOTE-ON

switch in the ON position and operate the appropriate unit switch as indicated in *b* through *d* below.

b. To make the Set 1 transmitter inoperative, place the OPERATE switch of the Set 1 power supply in the RECEIVE position.

c. To remove all power from Set 1, place the OPERATE switch of the Set 1 power supply in the OFF position.

d. To remove power from the interphone amplifier, place the OFF-INT-RT-70 switch in the OFF position.

Note. When the interphone amplifier is turned off, it will be impossible to monitor any of the sets at the interphone box, the local control unit, or the remote control unit.

61. Miscellaneous Applications

a. **LOW POWER OPERATION OF SET 1.** If it is desired to operate Set 1 for short range communication, the power output can be reduced by placing the TRANS POWER switch of the Set 1 power supply in the LOW position.

b. **PANEL OPERATION.** Set 1 can be operated locally by using a chest set (with headset and microphone) or a handset connected to an AUDIO connector on the front panel. In Set 1, which has two AUDIO connectors, a microphone and headset or microphone and loudspeaker may be used. The interphone amplifier can be used as another interphone station by using a chest set (with headset and microphone) at the panel-mounted AUDIO connector.

CHAPTER 4

THEORY OF OPERATION

Section I. INTRODUCTION

62. Scope

a. System theory is presented to provide an understanding of how the several units are interrelated in the various operations of the radio sets. Such an understanding should be an effective aid in trouble shooting the equipment to isolate a defective unit and, in some cases, to isolate a defective part within a unit.

b. Detailed circuit theory of individual units is not discussed, except as the units are interconnected in a common circuit. For example, the microphone circuits of Set 1 are described since they are interconnected with the control units through the mounting; details of the Set 1 i-f amplifier are not important for system understanding and therefore are not discussed. Most of the information presented in this chapter is concerned with system applications of the several units. Complete details on the individual units are published in separate technical manuals. To provide a general acquaintance with the individual units, block diagrams of the major units are supplied in section II of this chapter and schematic diagrams of all units are included at the end of the manual. It should be noted that units used in this system also are used in other systems and, as a consequence, some have switch positions, junction points, etc., which have no apparent application. If a switch position, junction point, etc., should appear in an illustration and the text carries no explanation, it should be assumed that it has no relation to the system under discussion.

63. Basic System

a. Basically, each of the radio sets consists of one receiver-transmitter and an interphone amplifier with speech-input and monitoring facilities. These basic units are the essentials of the systems and the power supplies, cables, mountings, and miscellaneous equipment are supplied to make the

basic units perform their function of transmitting, receiving, or monitoring.

b. In an actual system installation, microphone, and headset facilities are provided at each interphone box (Control Box C-375/VRC) and the switching provisions on the box allow selection of the mode of operation; namely, transmission on Set 1, interphone operation, or monitoring. The control facilities are extended from the individual units to the interphone box through Mounting MT-297/GR and interconnecting cables (fig. 28).

c. An adaptation of the basic system is the extension of the microphone and monitoring facilities to a remote point by means of telephone lines. Control Group AN/GRA-6 is provided to accomplish this function.

64. System Diagrams

a. Three diagrams (figs. 40, 41, and 42) are used to illustrate system interconnections and functioning. Complete power distribution circuits are shown on figure 40. Figure 41 illustrates the power distribution and control circuits within the local and remote control units. Indications have been made to show where these circuits connect into the system depicted in figure 40. When the local and the remote units are used, the complete circuits, as would be traced from the vehicle battery through the remote control, are partly in figure 40, and partly in figure 41. Figure 42 illustrates the monitoring facilities that are available.

b. In figure 40, the control unit used is Control Box C-375/VRC. This figure illustrates push-to-talk operation from the interphone box. Using figures 40 and 41, in conjunction with one another, will illustrate the operations that may be obtained from the local and the remote control units. Figure 41 illustrates telephone operation between the local and the remote units.

c. Figure 42 illustrates all of the monitoring facilities which are available in the radio sets and

the interconnections and switching which are necessary to utilize these facilities.

d. In paragraphs 65 through 74, the system diagrams are discussed in detail for each operational function. By following the discussion and the diagrams, it should be possible to determine what happens when each switch is thrown or pressed, what voltages are applied to what stage, how the microphone circuits are completed, the disposition of a received signal (from the output of the receiver), and other system functions. The passage of a signal through the transmitter (microphone to antenna) or the path of a received signal (antenna to receiver output circuit) is not discussed. Such detail is peculiar to the units (not the system) and, generally, is covered in section II of this chapter. Complete details are published in separate manuals.

65. Systems Legend

a. A system legend has been devised and used on the system diagrams (figs. 40, 41, and 42) to

facilitate circuit tracing from unit to unit. Because each circuit is completed, generally, through one or more units, and similar reference symbols are used within each unit, it is impossible to tell, without some form of legend, when a circuit leaves one unit and enters another.

b. As indicated on the legends, a letter has been used to identify each unit and the letter has been prefixed to the reference symbol of the part in a particular unit. Thus, in the reference symbol H/P-4B at the upper left-hand corner of figure 40, H indicates Mounting MT-297/GR, P-4 is the reference symbol for a plug on the mounting (the termination of one of the mounting cables), and B indicates terminal B of the plug. Interconnection of H/P-4B and D/J-6B indicates that the circuit is continued to terminal B of receptacle J-6 in AF Amplifier AM-65/GRC.

c. To correlate the electrical interconnections with the physical interconnections, the following chart indicates the cable and plug connections made between the mounting and other units.

Mounting cable	Cable termination*	Mating connector		
		Receptacle	Unit	Receptacle designation
W-1.....	P-1.....	J-1.....	Auxiliary receiver.....	POWER IN.
W-2.....	P-2.....	J-8.....	Auxiliary receiver.....	REC CONTROL.
W-3.....	P-3.....	J-312.....	Set 1.....	REC-TR CONTROL.
W-4.....	P-4.....	J-6.....	Interphone amplifier.....	POWER IN.
W-5.....	P-5.....	J-1.....	Set 1 power supply.....	POWER IN.
W-6.....	P-6.....	J-4.....	Interphone amplifier.....	REC-TR CONTINUED
W-7.....	P-7.....	J-2.....	Interphone amplifier.....	INT CONTINUED
W-8.....	E-8 & E-11.....	Battery.....	

*Refer to figures 21, 26, and 74.

Note.—Auxiliary receiver is not used in this system.

Section II. POWER DISTRIBUTION AND PUSH-TO-TALK CONTROL CIRCUITS

66. Primary Power Application

(fig. 40)

When the OFF-REMOTE-ON switch of the mounting is placed in the ON position, relay H/K-1 is connected across the battery in series with fuses H/F-1 and H/F-2, the switch contacts, and resistor H/R-3 (In 12-volt systems, R-3 must be short-circuited). Contacts of H/K-1 close to apply battery voltage to two supply buses (at the top of the drawing) which connect the battery circuit to the Set 1 power supply and the interphone amplifier. Closure of the relay contacts also completes a circuit for lamp H/E-7

(on the panel of the mounting) which indicates that power is available at the output terminals of the mounting.

67. Interphone Amplifier

(fig. 40)

a. POWER INPUT. When the OFF-INT-RT-70 switch (D/S-2) on the interphone amplifier is placed in the INT position, the battery circuit from the mounting is completed to the filaments of the amplifier, to a filament protection circuit, and to input connector U/X-1 of the plug-in power supply in the amplifier.

b. AMPLIFIER FILAMENTS. When the 6V-12V-24V switch (D/S-1) on the amplifier chassis is set at 12V, the amplifier filaments (V-1 through V-5) are connected directly across the battery through section 1B of the switch; the filament protection circuit (D/R-32, D/K-1, and associated resistors) is connected in parallel with the amplifier filaments by sections 1D and 1A of the same switch. For 24-volt operation, sections 1B and 1A connect the amplifier filaments in series with the filament protection circuit. Resistor D/R-36 parallels the filament protection circuit as a dummy load when the OFF-INT-RT-70 switch is in the INT position. Since Set 2 is not used in this system, the RT-70 position of the switch should not be used since the heating element D/K-1 may be damaged.

c. AMPLIFIER PLATE AND SCREEN SUPPLY. The vibrator power supply develops a 135-volt output which is used to furnish the plate and screen requirements of the amplifier tubes.

d. MONITORING. When filament, plate, and screen voltages have been made available as described above, the amplifier can monitor input signals from Set 1 (fig. 42). The amplifier cannot be used for interphone operation until the microphone and control circuits (*e* below) are completed. The signal path through the interphone amplifier may be traced through the block diagram (fig. 45). The output of the interphone amplifier is routed for monitoring to the audio connectors of the interphone boxes, the amplifier panel, and the AUDIO connector of the local unit. The signal supplied to the interphone boxes must be selected by the switch on the panel of the box (R/S-1 in fig. 42).

e. INTERPHONE MICROPHONE AND CONTROL CIRCUITS.

- (1) The battery voltage at terminal U/X-1 (3) of the plug-in power supply is routed through resistors D/R-28 and D/R-27 to the coil of relay D/O-1 (fig. 41). The relay circuit is not completed to ground, however, because of the open push-to-talk contacts of switch Y/S-2 on the chest set. In 12-volt circuits, resistor D/R-28 is short-circuited by a jumper on the plug-in power supply input connector.
- (2) The microphone input circuit parallels relay D/O-1 and consists of dropping resistor D/R-2, audio choke D/L-2, microphone transformer D/T-1, and the

microphone. Contacts of relay D/O-1 and a second set of push-to-talk contacts on Y/S-1 hold this circuit open during monitoring periods.

- (3) When the push-to-talk switch is pressed, relay D/O-1 is energized and the microphone circuit is completed through the relay contacts and the push-to-talk contacts. Microphone excitation current flows through the carbon element of the microphone and talking into the microphone develops voice signals across transformer D/T-1. The interphone signal is amplified and routed to the AUDIO connectors at control points, as described in *d* above.
- (4) The interphone circuits also can be completed through three paralleling circuits: through the center position of RADIO TRANS switch R/S-2, the RADIO contacts of Y/S-1, and the push-to-talk contacts of Y/S-2; through the center position of selector switch R/S-1, RADIO TRANS contacts of R/S-2, RADIO contacts of Y/S-1, and push-to-talk contacts of Y/S-2; or through an audio accessory connected to the panel-mounted AUDIO connector (D/J-1) on the amplifier.

68. Set 1 Receiving Circuits

(fig. 40)

a. POWER INPUT CIRCUITS. As soon as the OFF-REMOTE-ON switch (H/S-1) of the mounting is placed in the ON position, the battery circuit is completed to contacts of the 4-section OPERATE switch (E/S-1) in the Set 1 power supply. When the OPERATE switch is placed in either RECEIVE or TRANS & RECEIVE position, the Set 1 receiver-transmitter is ready for monitoring. As long as a push-to-talk switch or other transmit-control switch is not operated, operation is the same for either the RECEIVE or TRANS & RECEIVE position of the OPERATE switch. The RECEIVE position makes it impossible to transmit, even though transmit-control switches are operated.

b. RECEIVER FILAMENT CIRCUITS. In 24-volt systems, the battery voltage is applied through section 1D of the OPERATE switch and dropping resistor E/R-39 to the receiver filament protection circuit and the receiver filaments. Ballast tubes

E/R-40 and E/R-31 maintain a constant voltage for the filaments despite variations of battery voltage. In 12-volt systems, the dropping resistor and one of the ballast tubes (E/R-40) are not used. The filament protection circuit utilizes thermal relay E/K-2 whose normally closed contacts short-circuit resistor E/R-32. If an overvoltage occurs in the filament circuit, the thermal relay operates and its contacts open. Resistor E/R-32 is then placed in series with the filaments to absorb the overvoltage. The filament circuits completed are those of A/V-1 through A/V-4, A/V-101 through A/V-103, and A/V-107 through A/V-116. Complete circuit detail of the series-parallel filament arrangement is shown in figure 47. Dial LAMP A/E-313 is connected in parallel with the filaments of A/V-113 and A/V-114 in two positions of RING-DIAL LIGHT (ON-OFF) switch A/S-302. In the OFF position, dummy load A/R-304 is substituted for the lamp.

Note. For circuit details of the Set 1 power supply, refer to figures 76 and 77. A block diagram of the Set 1 power supply is shown in figure 43.

c. RECEIVER PLATE AND SCREEN SUPPLY.

- (1) The battery voltage is supplied through Section IC of the OPERATE switch to a 1-v (low voltage) vibrator supply. The 135-volt output from the vibrator is filtered by choke E/L-12 and supplied through dropping resistor E/R-17 to the second a-f amplifier of Set 1 (A/V-116). Dropping resistors E/R-21 and E/R-22 are connected in series with voltage regulator E/V-4 between the 135-volt potential and ground (Resistor E/R-22 is in the circuit for the HIGH position of TRANS POWER switch E/S-2A; it is shorted out for low power operation since an increased drain is placed on the 85 volt power supply for that type of operation).
- (2) The 85-volt potential at the plate of E/V-4 is used (during reception) as a source of screen and plate voltage for tubes A/V-1 through A/V-4, A/V-101 through A/V-103, A/V-107 through A/V-112, and A/V-115. Plate and screen voltages for A/V-1 and screen voltage for A/V-2 are applied through normally closed contacts (9-10) of relay A/O-101.

d. MONITORING.

- (1) When the filament, plate, and screen

potentials have been supplied as described above, the receiver of Set 1 is operative. Signals picked up by the receiver are routed from antenna to audio output circuits as indicated on the block diagram (fig. 45) and the schematic diagrams (figs. 79, 80, and 81) for Receiver-Transmitters RT-66/GRC, RT-67/GRC, and RT-68/GRC, respectively.

- (2) The outputs of the first and second a-f stages, A/V-115 and A/V-116, respectively (fig. 42), are supplied to the phone and speaker terminals of the panel-mounted AUDIO connectors, A/J-310 and A/J-311. A headset may be used to monitor these signals.
- (3) A fixed-level audio output from A/V-102 (fig. 42) is routed through normally closed contacts of H/O-1 in the mounting to the interphone amplifier. The output of the interphone amplifier is routed to the several control units for monitoring as indicated in figure 42 and explained in paragraph 67.

69. Set 1 Transmitting Circuits

(fig. 40)

a. POWER INPUT CIRCUITS. Until transmit-control circuits have been operated, the Set 1 power supply circuits for the Set 1 transmitting circuits remain unenergized. Battery voltage is supplied to Sections 1B and 1A of the OPERATE switch in the 150- and 300-volt vibrator circuits, but contacts of relay E/O-1, in the power supply, prevent the circuits from being completed. The circuit to relay E/O-1 in turn is broken by contacts of relay A/O-101 which is under control of the push-to-talk switch. The sequence of operation is described in the following subparagraphs.

b. OPERATIONAL CONTROLS. The following switches must be operated before the transmit-control circuits can be energized.

- (1) Selector switch R/S-1 on the interphone box must be placed in the Set 1 (left-hand) position.
- (2) Switch R/S-2 on the interphone box must be held or locked in the RADIO TRANS position.
- (3) Switches Y/S-1 (RADIO) and Y/S-2 (push-to-talk) on the chest set must be pressed.

c. RELAY A/O-301. Contacts of Relay A/O-301 switch the antenna from the receiver to the transmitter.

d. RELAY A/O-1.

- (1) Contacts 2-3 of relay A/O-1 close to shunt resistor A/R-109 across the squelch oscillator load resistor, A/R-110.
- (2) Contacts 6-7 of relay A/O-1 close in the B+ leads of A/V-9 and A/V-10 and contacts 4-5 close in the screen circuit of A/V-11.

e. RELAY A/O-101.

- (1) Contacts 9-10 open and contacts 9-8 close to switch the 85-volt supply from receiver tubes A/V-1 and A/V-2 to transmitter tubes A/V-104A, A/V-105, A/V-106, and A/V-5 through A/V-8. If the RING DIAL LIGHT (OFF-ON) switch is held in the RING position, voltage also is made available to A/V-104B.
- (2) Contacts 2-3 of relay A/O-101 open and contacts 2-1 close to switch the a-f input to A/V-115 from the normal receive tap on the discriminator output voltage divider to the lower voltage tap used for sidetone during transmission.
- (3) Contacts 4-5 of relay A/O-101 close in the microphone circuit, and the filament lead to transmitter tubes A/V-5 through A/V-11 and A/V-104 through A/V-106.
- (4) Contacts 6-7 of relay A/O-101 close to complete a circuit for relay E/O-1 in the power supply. Relay E/O-1 operates to complete the power input circuits for the transmitter filaments and the transmitter h-v (high-voltage) supplies.

f. RELAY E/O-1.

- (1) Contacts 2-3 of relay E/O-1 complete the battery circuit from Section ID of the OPERATE switch to the filaments and filament protection circuit for the transmitter. In 24-volt systems, dropping resistor E/R-36 and ballast tubes E/R-37, 38, 24, and 25 are included in the input circuit. In 12-volt systems, E/R-36 and ballast tubes E/R-37 and 38 are omitted. The filament protection circuit utilizes thermal relay E/K-1 which, when operated, causes resistor E/R-26 to be inserted in series with the transmit-

ter filaments. The filaments supplied are those listed in paragraph e above. Complete filament circuit details are shown in figure 45.

- (2) Contacts 4-5 of relay E/O-1 close to short-circuit resistor E/R-21 in the 85-volt supply circuit. This operation compensates for the increased drain on the 85-volt powersupply during transmission.
- (3) Contacts 7-8 and 9-10 of relay E/O-1 complete the battery input circuit from Sections 1B and 1A of the OPERATE switch to the 150-volt vibrator power supply and 300-volt vibrator power supply, respectively.


g. H-V CIRCUITS.

- (1) The output of the 150-volt supply furnishes operating voltage for tubes A/V-9 and A/V-10 during high-power operation (S-2A in HIGH position).
- (2) The 150-volt potential also is connected in series with the 300-volt supply to furnish a 450-volt potential for the power amplifier, A/V-11. A tap on the 450-volt supply provides approximately 250 volts for the screen of A/V-11.

h. HIGH POWER TRANSMISSION. When the transmitter circuits have been energized as described in the preceding subparagraphs, the transmitter generates a carrier signal which may be modulated by talking into the microphone or by holding the RING-DIAL LIGHT (OFF-ON) switch in the RING position. The transmitter-control circuits also can be energized by using a microphone at either of the panel-mounted AUDIO connectors A/J-310 or A/J-311.

i. LOW POWER TRANSMISSION. If the TRANS POWER switch (E/S-2) is placed in the LOW position, the following circuit changes are effected.

- (1) The input to the 300-volt vibrator supply is broken by E/S-2B.
- (2) Tube A/V-11 is switched from the 450-volt supply to the 150-volt supply by Section 1A of switch E/S-2A.
- (3) Tubes A/V-9 and A/V-10 are switched from the 150-volt supply to the 85-volt supply.
- (4) Resistor E/R-22, in the 85-volt supply lead, is short-circuited to compensate for the increased drain on the supply.

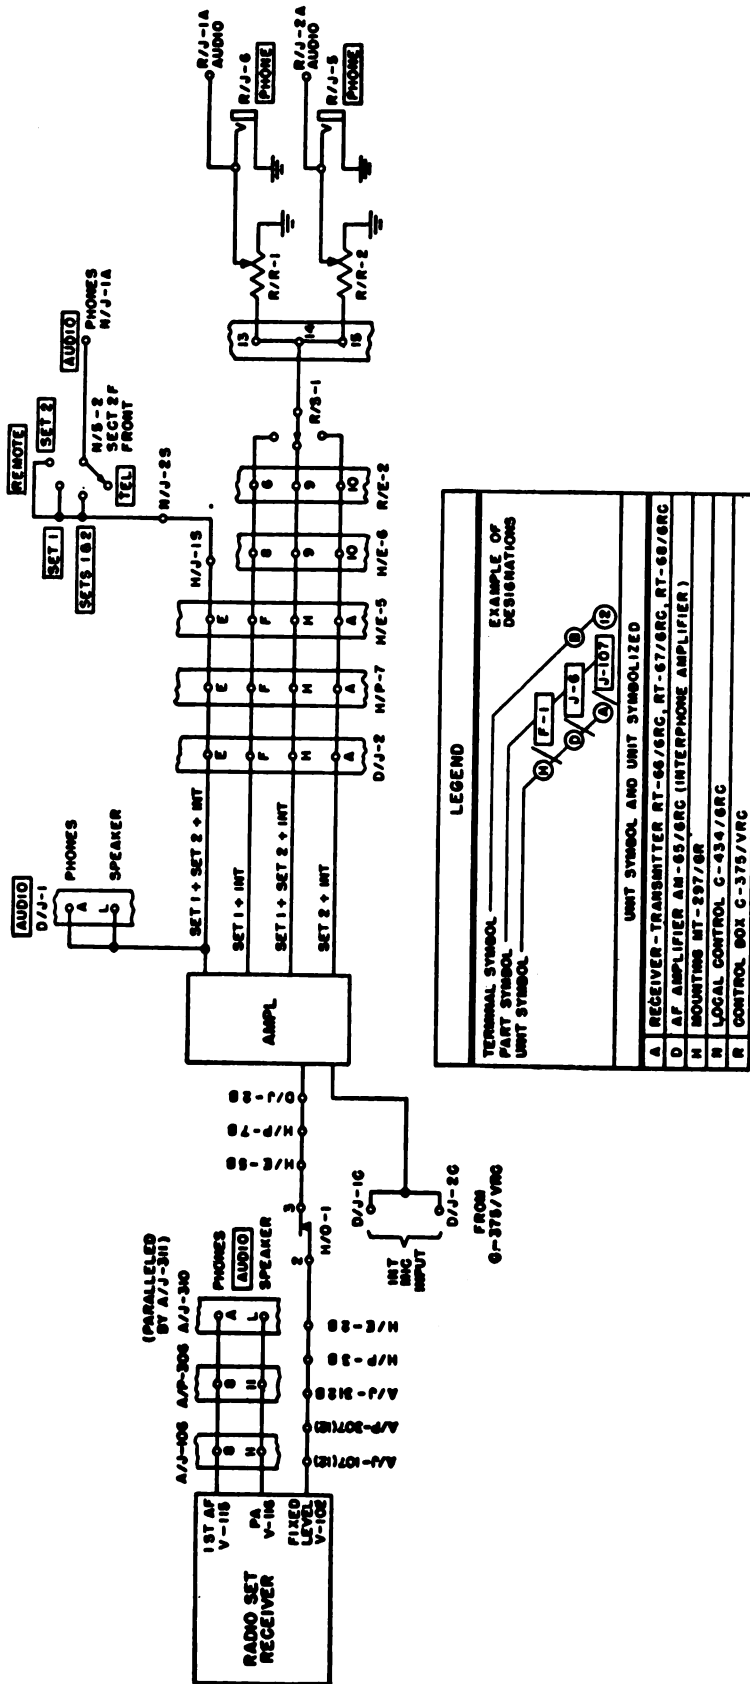

TMSM-6

Figure 48. Monitoring circuits.

Section III. OPERATION FROM CONTROL GROUP AN/GRA-6

70. Ringing Circuit

(fig. 41)

a. It is always possible to ring from the local control unit to the remote control unit, or vice versa, when the units are connected by a telephone pair as indicated in figure 41. The ringing circuit is independent of the radio sets.

b. The ringing signal is transmitted in either direction through transformers N/T-1 and M/T-1 and the telephone line, and operates either a CALL LIGHT on the panel of the receiving unit or a bell within the receiving unit. An internal switch (N/S-1 or M/S-1) selects the lamp or bell in the local and remote units, respectively.

71. Telephone Circuit

(fig. 41)

a. Duplex telephone operation is possible provided the LOCAL switch (N/S-3) is left in the TEL position. Local batteries (BT-1 and BT-2) are supplied in each unit in series with the microphones. If a push-to-talk switch on the handset at either unit is pressed, and the operator talks into the mouthpiece, the voice signals will be coupled through the transformers and telephone lines to the earpieces at the receiving end.

b. The TEL ONLY position of the REMOTE switch on the local unit and the TEL position of the SELECTOR switch on the remote unit provide for telephone operation only. Radio operation also is possible for other positions of these switches (pars. 72 through 74).

72. Monitoring and Local Push-to-talk Operations

(figs. 40 and 41)

a. Monitoring and local push-to-talk operations are described for a REMOTE setting of the OFF-REMOTE-ON switch on the mounting, and a SET 1 & 2 setting of the REMOTE switch on the local control unit. The REMOTE switch completes the circuit for relay H/K-1 in the mounting (lower left-hand side of figures 40 and 41), and power is distributed to the interphone amplifier and all receiving circuits, as previously described. The sets are in a receiving condition and any signals received may be monitored at the interphone boxes and the local control unit (fig. 42). Section 2F front of the REMOTE

switch (fig. 41) couples the signals from the interphone amplifier to the monitoring devices and the line transformer in the local unit. The signals also are coupled through the line transformers and telephone line to the earpiece at the remote unit (fig. 41).

b. If the LOCAL switch is turned to the SET 1 position, and the push-to-talk switch is pressed, sections 1C and 1B of the switch provide ground returns for the microphone and transmit-control lines, respectively, of Set 1. The Set 1 transmitting circuits are energized as described in paragraph 69c through i. Talking into the microphone at the local unit will cause modulation of the transmitted signal.

73. Remote Push-to-talk Operation

(figs. 40 and 41)

a. In remote push-to-talk operations, the ground returns for the transmitter audio-input and control lines are controlled by relays N/O-1 and N/O-2 which are in the local control unit, but whose control voltage is obtained from the remote unit through the telephone line. Relay N/O-2 is polarized, that is, it exerts either an attractive or a repelling force upon the contacts which it controls, depending on the polarity of the voltage impressed upon its coil. Relay N/O-1 is not polarized and exerts the same direction of force regardless of the polarity of the applied voltage. In the polarized relay the contacts, which operate in conjunction with the coil, remain in the position to which the action of the coil forces them until a voltage of opposite polarity is applied, whereupon they change position. This is by virtue of a magnetic latching mechanism. In the nonpolarized relay the contacts maintain the position into which they are forced by the magnetic action of the coil only as long as a voltage is impressed across the coil terminals. When the voltage is removed, they return to their normally open or normally closed position.

b. The polarity applied to relay N/O-2 is controlled by the REMOTE switch in the local unit and the SELECTOR switch in the remote unit. For remote push-to-talk operation (without power control), the REMOTE switch is left in the SET 1 & 2 position, so that the SELECTOR switch has complete control of the relay operation. For this system, the LOCAL switch setting is immaterial.

The functions performed by the left-hand and right-hand write-in positions of the SELECTOR switch at the remote unit are determined by the telephone line connections. If the line connections are reversed at either end, the functions of the positions became reversed. Since in this system only Set 1 is used, it should be determined by test which write-in position completes the Set 1 power and audio lines. This position then should be labeled Set 1, and the other write-in position should be labeled OFF.

c. In figure 41 the left-hand write-in position is the Set 1 position. When the SELECTOR switch at the remote unit is placed in this position, and the remote push-to-talk switch is pressed, a 45-volt battery is connected across the line so that line L2 is negative with respect to L1. Relay N/O-2, with this polarity applied to it, operates to close contacts 6-4 and open contacts 7-6. Relay N/O-1 is operated and its contacts function, that is, 7-6 close and 6-4 open. The ground return for the power line of Set 1 is now complete. In addition, the opening of contacts 6-4 of N/O-1 has made telephone communication between the local and remote units impossible by removing the ground return of the primary of N/T-1. Contacts 5-8 of relay N/O-1 also closes to complete the a-f circuit for the Set 1 microphone line. When the remote operator talks into the microphone, the voice signals are coupled through windings 5-6, and 1-2, and 3-4 of transformer M/T-1 to the telephone line. At the local end of the line, transformer N/T-1 couples the signal to the Set 1 microphone line.

d. When the remote push-to-talk switch is released N/O-2 and N/O-1 are de-energized. Contacts 6-7 of N/O-1 open, 6-4 close, and 5-8 open. This breaks the a-f microphone circuit and control ground return lines for Set 1. Contacts 6-4 of relay N/O-2 remain latched in the closed position but have no effect on the circuit since contacts 6-7 of N/O-1 have broken the ground return. When the remote push-to-talk switch is again depressed N/O-2 will not operate, but since its contacts are already in position for operation of Set 1, only the operation of the contacts associated with N/O-1 are required to

complete the ground returns for Set 1 control and microphone circuits. Placing the SELECTOR switch in the right-hand write-in position and pressing the remote push-to-talk switch will return the contacts of N/O-2 to the 6-7 position, and establish conditions necessary for the operation of a Set 2, but since no Set 2 is used in this system this position is not necessary for remote push-to-talk operation without power control.

74. Remote Power Control and Push-to-talk Operation (figs. 40 and 41).

a. A third relay (N/O-3), which is also polarized, is effective in the remote control of power for the radio sets. Relays N/O-1 and N/O-2 function as before for control of the push-to-talk operation, but the REMOTE switch as well as the SELECTOR switch are both involved in the switching of the remotely located battery.

b. For remote control of power and remote push-to-talk control of Set 1, the OFF-REMOTE-ON switch on the mounting is placed in the REMOTE position, and the REMOTE switch of the local control unit is placed in the SET 1 position. Under these conditions, relay H/K-1 (at the left-hand side of figure 41) is de-energized and all power is removed from the radio set until relay N/O-3 is energized. If the SELECTOR switch at the remote unit is placed in the left-hand write-in position, and the remote push-to-talk button is pressed, the battery is connected across the line so that line L1 is positive with respect to line L2. Under these conditions, relay N/O-3 is energized and power is applied to the radio set. Relays N/O-1 and N/O-2 also are energized and all conditions are established for the transmission of signals from the remote position.

c. Releasing the push-to-talk switch will not remove power from the radio set because the contacts of N/O-3 remain latched in position until a voltage of opposite polarity is applied to the coil. This is done by returning the SELECTOR switch to the right-hand write-in position, now labeled OFF, and pressing the push-to-talk switch.

Section IV. UNIT THEORY

75. Scope

The discussion of unit theory is limited to block diagram analyses of the major units. Although the maintenance information included in this manual is at an organizational level only, familiarity with the block diagrams of the units should be helpful in trouble shooting. A knowledge of which tubes are receiving tubes and which tubes are transmitting tubes, for example, will aid in the replacement of parts for which the operator has running spares. The block diagrams are shown in figures 43 through 45. Complete schematic diagrams for all units are also included as additional information for maintenance personnel (figs. 69 through 81).

76. Set 1 Power Supply (fig. 43)

a. Figure 43 is a functional block diagram of Power Supply PP-109/GR or Power Supply PP-112/GR. It shows the three h-v circuits and the three l-v circuits supplied from the storage battery input terminals. The h-v circuits are used to provide the plate, screen, and bias voltages for the receiver and transmitter circuits in Receiver-Transmitter RT-66/GRC, RT-67/GRC, or RT-68/GRC. The l-v circuits supply the receiver-transmitter filament and relay potentials.

b. The 85-volt circuit (E-3 and T-3) is energized whenever the OPERATE switch S-1 is in either the RECEIVE or TRANS & RECEIVE position. The other two h-v circuits, E-2 and T-2, E-1 and T-1, and the transmitter filament supply circuit, are energized when switch S-1 is in the TRANS & RECEIVE position and relay O-1 is energized. E-1 and T-1 are controlled also by TRANS POWER switch S-2, which must be in the HIGH position for E-1 and T-1 to operate.

c. The l-v circuits include: the receiver filament supply circuit with output at terminal L of J-2; the transmitter filament supply circuit with output at terminal N of J-2; and the relay supply circuit with output at terminal A of J-2.

d. Each of the h-v and l-v circuits is equipped with r-f noise suppression filters in both the input and output leads, and a-c ripple filters in the output of each circuit.


e. TRANS POWER switch S-2 consists of two sections, both of which are used in the h-v circuit. One section of S-2 is used to provide full or reduced

voltages as required for HIGH or LOW power operation, respectively. The other section of S-2 opens the input to the transmitter h-v and bias supply circuits when the TRANS POWER switch is in the LOW position.

77. Set 1 Transmitting Circuits (fig. 44)

The block diagram shown in figure 44 pertains equally to Receiver-Transmitters RT-66/GRC, RT-67/GRC, and RT-68/GRC. The transmitter circuits include a microphone input transformer, a reactance modulator (V-105 and V-106), a transmitter oscillator (V-104A), the common crystal oscillator-harmonic generator (V-3 and V-4), the transmitter harmonic amplifier (V-5), a mixer stage (V-6), an r-f stage (V-7 and V-8 in parallel), a driver stage (V-9 and V-10 in parallel), and the power amplifier stage (V-11), the transmitter antenna circuit, and the common receiver, transmitter antenna.

a. TRANSMITTER SIGNAL PATH. Voice signals from an external source are applied through a microphone transformer to the input of the transmitter reactance modulator. Under control of the audio signals, the reactance modulator causes the frequency generated by the transmitter oscillator (section A of V-104) to vary up or down in accordance with the amplitude and frequency of audio signals. Modulation is represented by a shift in the frequency generated by the transmitter oscillator, and ultimately by a corresponding shift of the over-all carrier frequency. The output of oscillator V-104A and the output of harmonic amplifier V-5 are combined in the transmitter mixer stage V-6. A tuned circuit, using one section of tuning capacitor C-1, selects the desired sum frequency at the output of the transmitter mixer and applies it to the transmitter r-f amplifier stage V-7 and V-8. The output of this stage is tuned to resonance at the carrier frequency by capacitor C-1. Further amplification is provided by transmitter-driver stages V-9 and V-10, using a section of the r-f tuning capacitor C-1, and by the transmitter power amplifier stage, V-11. The amplified output is then routed through a tuned circuit to the antenna. The output circuit of the power amplifier uses a section of the main tuning capacitor C1, while the antenna circuit is tuned to resonance by the TR-ANT TUNE capacitor.

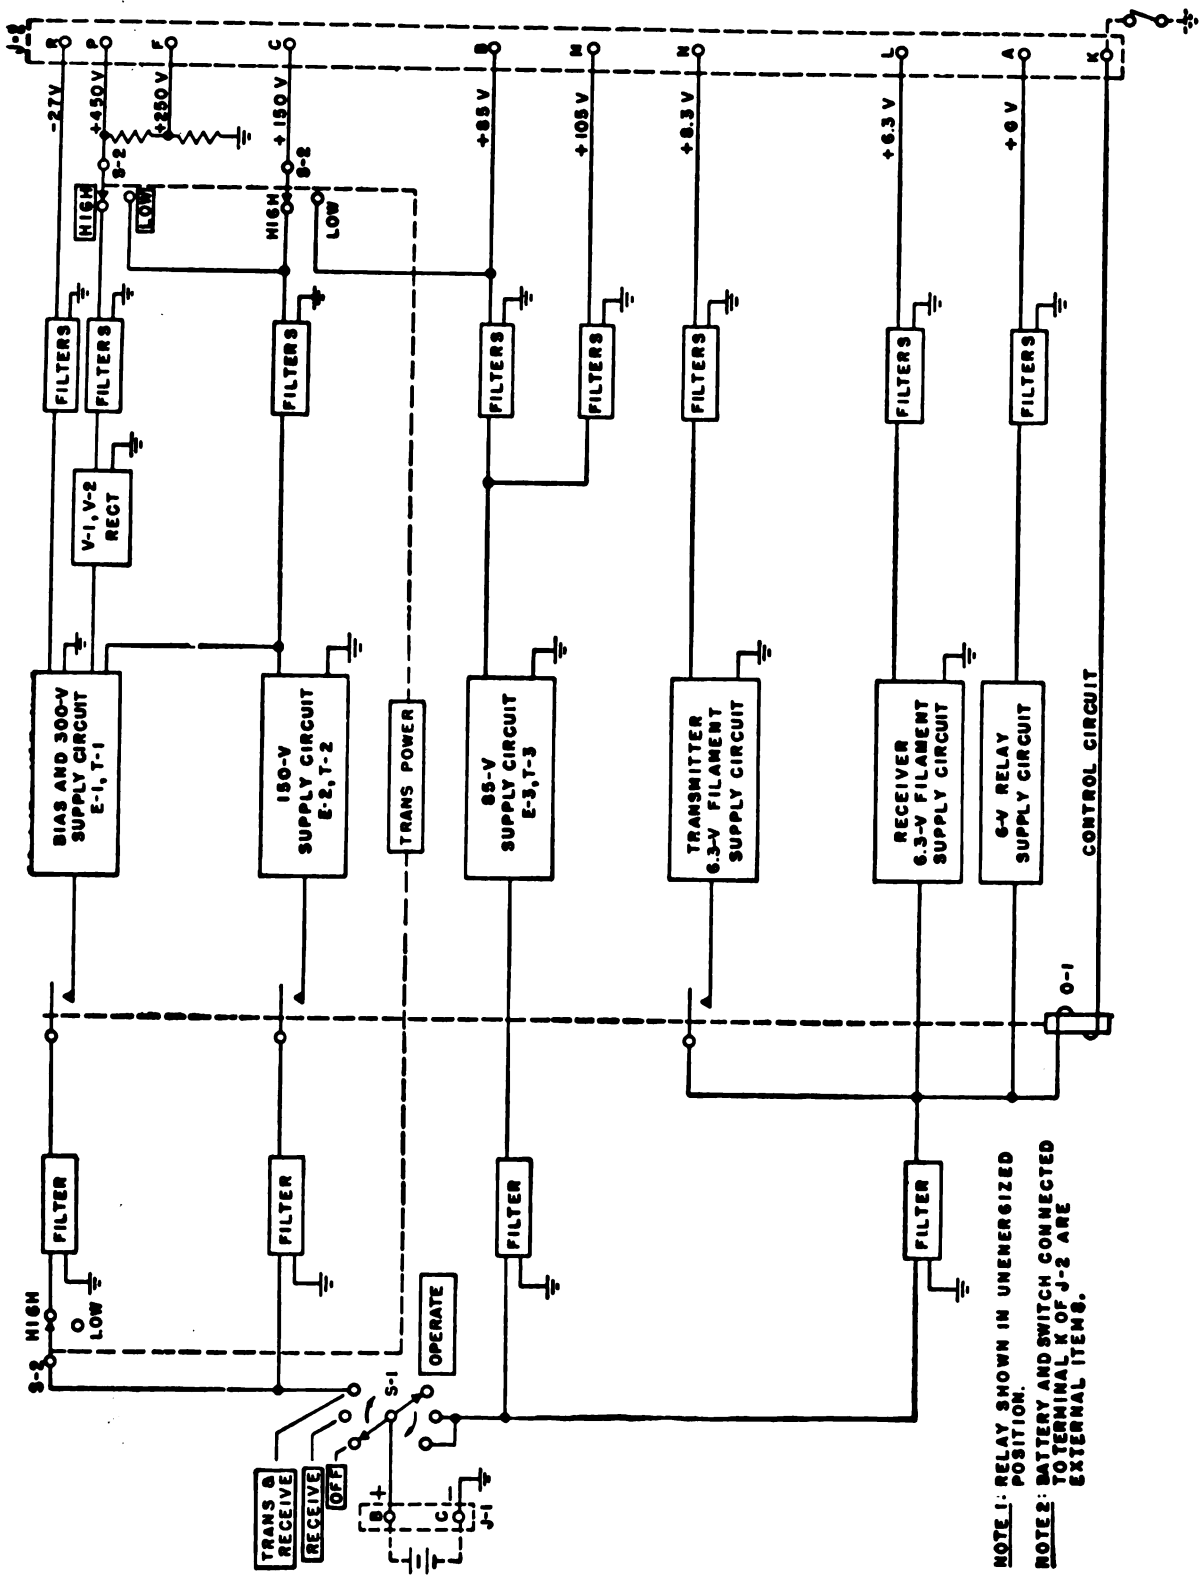

TM8036-8

Figure 43. Set 1 power supply, block diagram.

b. AUTOMATIC FREQUENCY CONTROL. The purpose of the a-f-c (automatic frequency control) circuit is to maintain a constant transmitter-oscillator carrier frequency. The output of the transmitter-oscillator V-104A is picked up by the variable i-f stages in the receiver through stray coupling and fed to the rest of the receiver circuit. If the difference between the receiver-oscillator frequency (used as the standard) and the transmitter-oscillator frequency varies from the fixed i-f frequency, a voltage is developed in the discriminator circuit. This voltage is used as the a-f-c voltage and is fed to the transmitter reactance tubes, V-105 and V-106. The transmitter reactance stage then corrects the transmitter-oscillator frequency. The time constant of the a-f-c coupling circuit from the discriminator is such that normal modulation of the i. f. does not appear in the a-f-c voltage.

c. SIDETONE. Sidetone voltage is obtained from the transmitter-oscillator, V-104A. This voltage is picked up by the variable i-f stages through stray coupling and is fed through the rest of the receiver circuit to the AUDIO output connector and fixed-level audio output terminals.

d. RINGER CIRCUIT. A ringer circuit associated with the transmitter is energized when the RING-DIAL LIGHT (OFF-ON) switch is in the RING position. This switch has the same function for the ringing circuit as the push-to-talk button of the microphone has for the transmitter, since it causes the control relays to be energized when it is in the RING position. In addition, it applies power to the 1,600-cycle ringer oscillator (section B of tube V-104). The output of the ringer oscillator is applied to the microphone transformer. Signal transmission is accomplished as described in *a* above for any other audio signal.

78. Set 1 Receiving Circuits

(fig. 44).

The receiver is of the double-conversion super-heterodyne type arranged to receive f-m signals. The term *double conversion* means that the incoming carrier signal beats with one local oscillator frequency to produce a first i. f. (between 4.45 and 5.45 mc); this frequency in turn beats with another oscillator frequency to produce a second i. f. (in this case 1.4 mc). The discriminator demodulates the second i-f signal and the a-f section of the receiver amplifies the audio output of the discriminator. The amplified output is supplied

to headphones, loudspeaker, retransmission circuits, and to monitoring circuits (fig. 42).

a. INPUT CIRCUIT. When the control relays are in the normal or unenergized position, the antenna is connected to the receiver circuits. Carrier signals from the antenna are developed in the antenna circuit, which is tuned by a section of the receiver-transmitter r-f tuning capacitor, C-1. The signals selected are applied to the r-f amplifier stage, V-1, the output of which is tuned by a section of the receiver-transmitter r-f tuning capacitor, C-1. The amplified output of this stage is routed to the receiver first mixer stage. When the SQUELCH control is turned clockwise from the OFF position, the gain of the r-f amplifier stage is controlled by the squelch circuit.

b. FIRST MIXER STAGE V-2. This stage combines the output of the harmonic amplifier, V-4, with the amplified output of the first r-f amplifier stage, V-1, to produce the first i. f. in the range of 4.45 to 5.45 mc. The frequency produced depends on the setting of the TENTH MCS control. The crystal oscillator-harmonic generator and first harmonic amplifier serve both the transmitter and the receiver. Since the output frequency of the first harmonic amplifier is below the frequency to which the receiver-transmitter is tuned (between 4.45 and 5.45 mc, depending on the setting of the tuning controls), the first i-f band resulting from the mixing of the incoming signal with the output of the frequency harmonic amplifier is a band centered about the difference frequency. The plate circuit of mixer stage V-2, located on the r-f chassis, is tuned by a section of the variable i-f tuning capacitor, C-101.

c. AMPLIFICATION OF FIRST I-F SIGNAL. The difference frequency band at the output of the mixer stage, V-2, is amplified in a two-stage, tuned, variable i-f amplifier, V-107 and V-108. The variable i-f amplifier stages are tuned by sections of the variable tuning capacitor, C-101.

d. RECEIVER-OSCILLATOR V-101. The free-running, self-excited oscillator, V-101, generates a frequency between 3.05 and 4.05 mc, depending on the setting of a section of the variable i-f tuning capacitor, C-101. The frequency to which the oscillator is tuned is always 1.4 mc below the frequency to which the variable i-f amplifier is tuned. Thus, if the variable i-f amplifier is tuned to 5 mc, the receiver-oscillator is tuned to 5 minus 1.4, or 3.6 mc.

e. RECEIVER SECOND MIXER V-109. The output of the variable i-f amplifier (a frequency

between 4.45 and 5.45 mc), together with the output of receiver oscillator V-101 is combined in the receiver second mixer, V-109. The frequency generated by the oscillator subtracts from the first (variable) i-f signals to produce a second i. f. of 1.4 mc.

f. FIXED SECOND I-F AMPLIFIER AND LIMITER. The i. f. of 1.4 mc is amplified again by a three-stage fixed-tuned amplifier. The first stage, V-110, is a conventional i-f amplifier; the second and third stages, V-111 and V-112, are also designed to function as limiters to eliminate any amplitude variations of the signal. Such amplitude variations represent noise and are undesirable. Proper functioning of the discriminator, which follows the second limiter, requires that the level of the applied signal be fairly uniform for variations in the level of the incoming signal. A portion of the output of the first limiter is fed to the squelch circuit to provide silencing action.

g. DISCRIMINATOR. The output of the final limiter stage, V-112, is applied to the discriminator and V-114. This discriminator is a tuned circuit which uses two type 1A3 diode tubes as rectifiers. The term "discriminator" is typical for f-m receivers and signifies a circuit which corresponds to the detector in a-m (amplitude-modulated) receivers. The discriminator performs a function analogous to that of the a-m detector since it extracts the intelligence or audio modulation from the incoming and carrier signal. Since in frequency modulation the intelligence to be *detected* appears as frequency variations (that is, shifts of the carrier from a center frequency) instead of amplitude variations, the discriminator is a frequency sensitive but not an amplitude sensitive device. Thus, the discriminator converts the variations from the center frequency of the incoming signal into audio signals.

h. AUDIO AMPLIFICATION. The a-f signals which appear at the output of the discriminator are amplified in two separate audio amplifier circuits.

- (1) One circuit is a two-stage audio amplifier, V-115 and V-116, with gain adjustable by means of the panel-mounted VOLUME control. The output of the first stage, V-115, is connected to pins A of each of the AUDIO connectors, and is used to provide enough volume to operate a headphone or the earpiece of a handset. The output of the final audio power amplifier stage, V-116, is connected to pins L of each of the AUDIO connectors

and has sufficient output to drive a loudspeaker.

- (2) The other circuit, a one-stage amplifier, V-102, serves to provide an audio output signal for monitoring (fig. 43). No panel adjustment of volume is provided. However, an internal potentiometer provides screw-driver adjustment of the gain of the amplifier to obtain the required level. The output of this stage is connected to pin B of the REC-TR CONTROL connector (J-312 in figure 42).

i. SQUELCH OSCILLATOR V-103. A characteristic of very sensitive receivers is that in the absence of signals, a rushing noise is heard in the receiver phones or loudspeaker. The noise is the result of thermal agitation in the vacuum tubes and receiver components, and of external electrical disturbances. A *squelch* circuit is used to suppress this noise during no-signal intervals. In Set 1, the squelch circuit consists of a carrier-switched, 20-kc (approximately) oscillator and a diode rectifier, V-103. Squelch action is adjustable by means of the panel-mounted SQUELCH control. The squelch circuit can be disabled for test purposes or for reception of very weak or fading signals by turning the squelch control to the OFF position.

79. Interphone Amplifier (fig. 45)

Figure 45 is a functional block diagram of AF Amplifier AM-65/GRC. The diagram shows the signal and power supply circuits which are provided by the amplifier.

a. GENERAL. The signal circuits consist of three input channels, a common amplifier, and three amplifying paths. In some systems the outputs of two receivers occupy two of the input channels, while the third or interphone channel will accept signals from a microphone. In the systems discussed in this manual only one receiver is used, therefore only two of the amplifier input channels are utilized. One channel contains the output of the Set 1 receiver, while the other contains the interphone output originating at any Control Box C-375/VRC which may be included with the radio set or the panel of the amplifier.

b. COMMON CHANNEL AMPLIFIER. Signals from Set 1 are routed to the common channel amplifier, which is divided into two sections. The signals are amplified there and appear across one section of the output. The other section ordinarily accom-

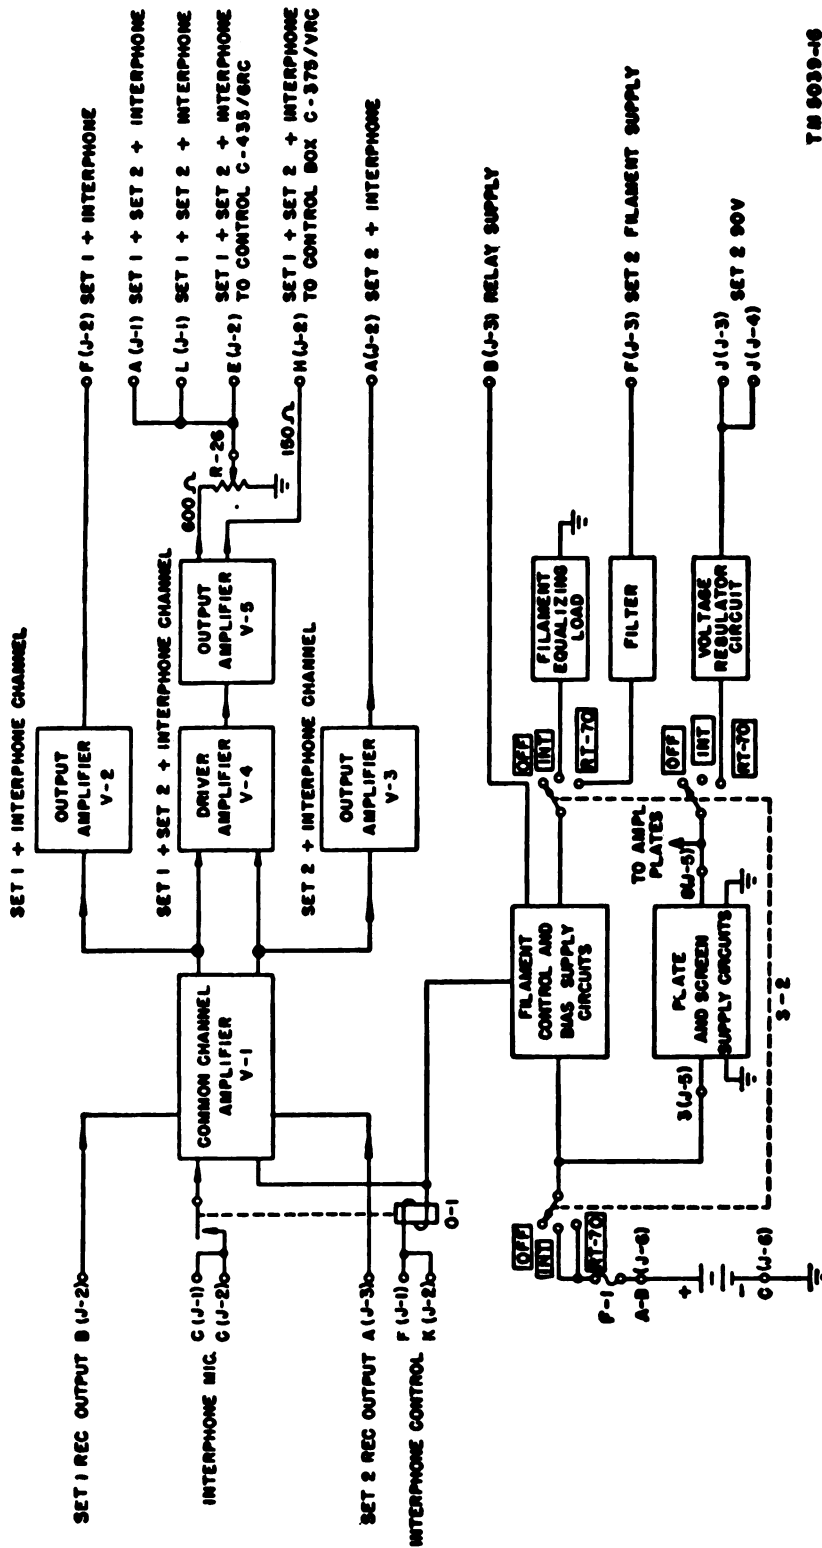


Figure 46. Interphone amplifier, block diagram.

YM 9039-16

modates signals from a Set 2 which is not used in this system. Signals from an interphone-connected microphone appear in push-pull across both sections of the common channel amplifier. They appear in the circuit when relay D/O-1 is energized. This relay is energized when an operator at one of the control boxes or the front panel of the amplifier presses the push-to-talk button on an interphone-connected microphone. Contacts of the relay close to complete the circuit to the external microphone and apply energizing potential to the microphone from the internal power supply circuits. Speech signals from the microphone enter the amplifier through the closed contacts of relay D/O-1, are amplified by V-1, and appear in the output circuits of that stage. An audio mixing arrangement in the common amplifier stage distributes the signals appearing at its output to the three output channels in use, as described in *c* below.

c. SIGNAL DISTRIBUTION. The Set 1 and interphone signals are applied at the required levels to Set 1 + Interphone and Set 1 + Set 2 + Interphone channels. Signals from Set 1 do not enter the third channel which is the Set 2 + Interphone channel. However, the microphone signal, appearing at the output of the common channel amplifier, is permitted to enter the Set 2 + Interphone channel, is amplified there, and is made available at the output terminals of that channel. The signals appearing at the output terminals of the three channels may be monitored at any one of the control stations associated with the installation. Switch R/S-1 in figure 42 illustrates how the channels are selected at a control box. Only the channel containing the Set 1 + Set 2 + Interphone signals may be monitored from the front panel of the amplifier.

d. OUTPUT CIRCUITS. Signals passing through

the Set 1 + Interphone channel are amplified in amplifier V-2 and appear at the output terminal for that channel. Similarly, signals passing through the Set 2 + Interphone channel are amplified in output amplifier V-3 and appear at the output terminals for that stage. Signals passing through the Set 1 + Set 2 + Interphone channel are amplified by driver amplifier V-4 and output amplifier V-5 and are applied through a VOLUME control to a 600-ohm output connector for application to Local Control C-434/GRC and to the AUDIO connector J-1 (fig. 42). These signals also are applied to a 150-ohm output connection for application to Control Box C-375/VRC (fig. 42).

e. POWER SUPPLY CIRCUITS. The battery input is connected through a panel-mounted connector (J-6), through a fuse, and through contacts of the panel-mounted OFF-INT-RT-70 switch (S-2) to an h-v and an l-v supply circuit. The switch serves as the power on-off switch for the amplifier and for Receiver-Transmitter RT-70/GRC, when used. The h-v supply circuit includes a plug-in vibrator type power supply unit which converts the battery voltage into the required plate and screen voltages for the amplifier. The plate and screen voltages for the amplifier are taken directly from the output of the power supply unit. The l-v supply circuit provides the filament, relay, microphone, and bias voltages for the amplifier. The filament supply circuit includes contacts of switch S-2, in the RT-70 position, and an a-f filter. When Receiver-Transmitter RT-70/GRC is not used, as in this system, a filament equalizing load is substituted across the filament supply circuit by placing switch S-2 in the INT position. This prevents overloading the filament supply circuit.

CHAPTER 5

ORGANIZATIONAL MAINTENANCE

Section I. TROUBLE SHOOTING

80. Scope

Trouble shooting at an organizational level is limited to the sectionalizing of defective units which must be replaced as a unit, or to the localization of defective parts within the units for which running spares are available. An equipment performance checklist (par. 81) is included primarily as a sectionalization aid; localizing procedures for the various units are outlined in paragraphs 82 through 87.

81. Equipment Performance Checklist

a. PURPOSE. The equipment performance checklist provides a detailed logical procedure for checking the operation of the radio sets. It should be practiced after the initial installation of the equipment before the equipment is placed in service, periodically thereafter, and as an aid to trouble shooting.

b. USE OF CHECKLIST FOR TROUBLE SHOOTING.

(1) The checklist is arranged in the same sequence the operator would follow when

initially applying power to the equipment. The simplest procedure, when using the checklist, is to perform the various items on the list in sequence until an abnormal indication is observed. When the operator has become familiar with the operation of the equipment, he can adapt the list to his own advantage, skipping those steps which do not pertain to the particular unit he wishes to check.

(2) The first five columns of the checklist list the items to be checked, the units which are involved, the action to take, and the normal indication to be expected. When an abnormal indication is obtained, the operator is referred (in the sixth column) to a paragraph or paragraphs which outline localizing procedures for particular units.

c. CHECKLIST. The items comprising the equipment performance checklist are listed in the following chart.

Item No.	Unit	Item	Action or condition	Normal indications	Possible defective units
1	Mounting.....	OFF-REMOTE-ON switch.	Set at OFF.....		
2	Cabling.....	All connections properly made (fig. 28).		
3	Local control unit.....	Installation.....	Unit plugged into mounting and locked.		
4	Local control.....	REMOTE switch.....	Set at TEL ONLY.....		
5	Interphone amplifier.....	OFF-INT-RT-70 switch.	Set at OFF.....		
6	Interphone amplifier.....	VOLUME control.....	Turn to approximate midpoint of range.		
7	Set 1 power supply.....	OPERATE switch.....	Set at OFF.....		
8	Set 1 power supply.....	TRANS POWER switch.	Set at HIGH.....		
9	Set 1 receiver-transmitter.	SQUELCH control.....	Turn completely clockwise for maximum squelch operation.		
10	Set 1 receiver-transmitter.	RING-DIAL LIGHT (OFF-ON) switch.	Set at DIAL LIGHT ON.....		
11	Set 1 receiver-transmitter.	METER switch.....	Set at 90 V.....		
12	Interphone box.....	Chest set and head-set-microphone.	Connect chest set to audio connector; plug head-set-microphone into chest set.		

Item No.	Unit	Item	Action or condition	Normal indications	Possible defective units
13	Interphone box.....	RADIO TRANS switch.	Lock in RADIO TRANS position.		
14	Interphone box.....	VOLUME control.....	Turn completely clockwise for maximum volume.		
15	Mounting.....	OFF-REMOTE-ON switch.	Turn to ON.....	POWER lamp glows if dimmer control is properly adjusted.	Battery, battery cable, or mounting (par. 84).
16	Interphone amplifier..	OFF-INT-RT-70 switch.	Turn to INT position.		
17	Interphone box.....	Push-to-talk switch on chest set.	Press switch and talk into microphone.	Hear output in chest set.....	Interphone box (par. 80), mounting (par. 84), interphone amplifier (par. 85), or cables (par. 86).
18	Interphone box.....	Selector switch.....	Turn to Set 1 Interphone.		
19	Set 1 power supply...	OPERATE switch.....	Turn to TRANS RECEIVE...	LAMP on Set 1 panel glows. METER on Set 1 panel reads approximately center-scale (in shaded area).	Interphone box (par. 80), mounting (par. 84), Set 1 power supply (par. 83) or Set 1 (par. 83).
20	Set 1.....	METER switch.....	Turn successively to positions 7 through 11.	METER on Set 1 panel reads approximately center-scale.	Set 1 (par. 83).
21	Set 1.....	SQUELCH control.....	Turn counterclockwise. Adjust VOLUME control on interphone box for comfortable noise level.	Rushing noise (or signal) is heard in headset.	Interphone box (par. 80), mounting (par. 84), Set 1 (par. 83), or cables (par. 86). Also Set 1 fixed level VOLUME setting.
22	Set 1.....	Tuning control.....	Tune in signal (par. 57).....	Signal heard in headset.....	Set 1 tuning circuit.
23	Set 1.....	SQUELCH control.....	Turn clockwise until receiver just squeiches.	No signal heard in headset.....	Set 1 squelch circuit.
24	Chest set.....	RADIO and push-to-talk switches on chest set.	Press and hold for items 25 and 26.		
25	Set 1.....	METER switch.....	Turn successively to positions 2 through 6.	METER on Set 1 panel reads approximately center-scale.	Set 1 (par. 83).
26	Set 1.....	METER switch.....	Turn to RF position.....	Meter shows some deflection.	Set 1 (par. 83).
27	Set 1.....	DIAL LIGHT-OFF-ON-RING switch.	Hold at RING position for this item.	Ringling signal is heard in headset. Meter deflects.	Set 1 (par. 83).
28	Interphone box.....	Chest set and headset microphone.	Press switches and talk into microphone.	METER on Set 1 panel deflects and sidetone is heard in headset.	Audio accessory.
29	Chest set (with headset and microphone).	Connect in turn to each audio connector at each interphone box.	Repeat step 28.....	Output heard in headset. METER on Set 1 deflects.	Interphone box (par. 84) or cables (par. 86).
30	Mounting.....	POWER switch.....	Turn to OFF.....		
31	Local control.....	LINE terminals.....	Connect to remote control unit (par. 37). Connect a chest set (with headset-microphone) to the local control unit; place REMOTE switch of local unit in TEL ONLY position. Connect a handset to the remote control unit; turn POWER switch on mounting to REMOTE.		
32	Local control unit...	Ringling generator.....	Crank generator.....	Ringling signal should be heard or CALL light should glow at remote control unit.	Local control unit (par. 84), remote control unit (par. 84), or telephone line.
33	Remote control unit...	SELECTOR switch.....	Turn to TEL Press push-to-talk switch on handset. Talk into mouthpiece and acknowledge call.	Full-duplex conversation possible between local and remote units.	Local or remote control unit (par. 84).
34	Remote control unit...	Ringling generator.....	Crank generator.....	Ringling signal should be heard or CALL LIGHT should glow at local control unit.	Local or remote control unit (par. 84).
35	Local and remote control units.	Ringling generator.....	Repeat steps 32 and 34 with the internal CALL and RING switches set in their alternate position.	Ringling signals should be heard or CALL LIGHTS should glow.	Local or remote control unit (par. 84).
36	Local control unit...	REMOTE switch.....	Turn to Sets 1 and 2.....	Panel lamp on mounting, Set 1, light.	Local control unit (par. 84).
37	Local control unit...	LOCAL switch.....	Turn to Set 1. Press RADIO and push-to-talk switches. Talk into microphone. Release switch to TEL when finished.	Sidetone should be heard at chest set on interphone box.	Local control unit (par. 84) or mounting (par. 84).
38	Remote control unit...	SELECTOR switch and handset.	Turn to left write-in position; press push-to-talk switch, and talk into mouthpiece.	Set 1 panel meter reads, sidetone heard at both chest sets.	Local or remote control unit (par. 84).

Item No.	Unit	Item	Action or condition	Normal indications	Possible defective units
39	Local control unit...	REMOTE switch.....	Turn to Set 1 position.....	Panel lamps remain lighted since contacts 4-6 of N/O-3 were closed by step 38.	Local or remote control unit (par. 84).
40	Remote control unit..	SELECTOR switch and handset.	Turn to left write-in position. Press push-to-talk switch.	POWER lamp on mounting glows. METER on Set 1 panel reads as long as push-to-talk switch is pressed.	Local or remote control unit or mounting (par. 84).
41	Remote control unit..	SELECTOR switch and handset.	Turn to right write in position. Press push-to-talk switch.	Power to Set 1 removed. Panel lamps extinguished.	
42	Local control unit....	REMOTE switch.....	Turn to SET 2.....	No indication.....	
43	Remote control.....	SELECTOR switch.....	Turn to left write-in position. Press push-to-talk switch.	Panel lamps glow.....	Local and remote control units (par. 84).
44	Remote control unit..	SELECTOR switch....	Turn to right write-in position. Press push-to-talk switch.	Panel lamps extinguish.....	
45	Mounting.....	POWER switch.....	Turn to OFF.....		

82. Localizing Procedures

a. The following paragraphs include localizing procedures which are designed to isolate troubles to a particular unit, or to a particular part for which a running spare is available. These are the paragraphs which are referred to in the equipment performance checklist (par. 81); they are used best in conjunction with the checklist but can be used individually.

b. Whenever the procedure calls for checking a part, substitute an identical part which is known to be good for the part being checked. If no part is available for such use, a visual and/or continuity check may disclose the troubles.

83. Set 1 and Set 1 Power Supply

a. EQUIPMENT SET-UP. Operational checks of Set 1 and the Set 1 power supply are best performed at the panels of the units themselves. Set up the equipment as follows:

- (1) Turn the OPERATE switch to TRANS & RECEIVE.
- (2) With the mounting switch in the OFF position, disconnect the REC-TR-CONTROL cable from the panel of Set 1. Connect terminals H and J of the receptacle, using the prefabricated plug-in jumper provided with the Allen wrenches within Set 1. Turn the mounting switch to the ON position (The jumper makes Set 1 independent of interconnections normally made through the mounting). When all checks have been completed, remove the jumper and replace the cable.
- (3) Connect a handset to one of the AUDIO connectors on the Set 1 panel.

b. LAMP CHECK. If the dial LAMP on Set 1 does not light, with the RING-DIAL LIGHT (OFF-ON) switch in the ON position, turn the


METER switch to position 7 and interpret the meter indications as follows:

- (1) If the meter reading is normal or slightly higher than normal, the lamp is probably bad.
- (2) If the meter reading is higher than normal, check tubes V-113, V-3, and the lamp (fig. 54 and par. 87).
- (3) If the meter reading is zero, turn the METER switch to position 9. If the reading is normal at position 9, check tubes V-116 of Set 1 (fig. 53 and par. 87). If the tubes checked are good and reading is very low or zero, the trouble is probably in the power supply. Check fuse F-1, continuity of thermal relay K-2, and ballast tubes R-31 and R-40 in the power supply (figs. 49 and 50 and par. 91). (Ballast tube R-40 is included only in Power Supply PP-112/GR.)

c. VOLTAGE CHECK. Turn the METER switch to the 90V position and check for a normal reading. If no reading is obtained, make the following checks:

- (1) Check fuse F-2 in the power supply (par. 91).
- (2) If the fuse is good, check vibrator E-3 and voltage regulator V-4 (fig. 49 and par. 91).
- (3) If the above checks do not reveal a defective part, refer to paragraph 86 for additional check procedures.

d. RECEIVER FILAMENT CHECK. Turn the METER switch successively through positions 7, 8, 9, 10, and 11. If an abnormal meter reading is obtained in any of these positions, refer to the filament chart (par. 87) for the probable defective tube involved. Refer also to the filament schematic (fig. 46).

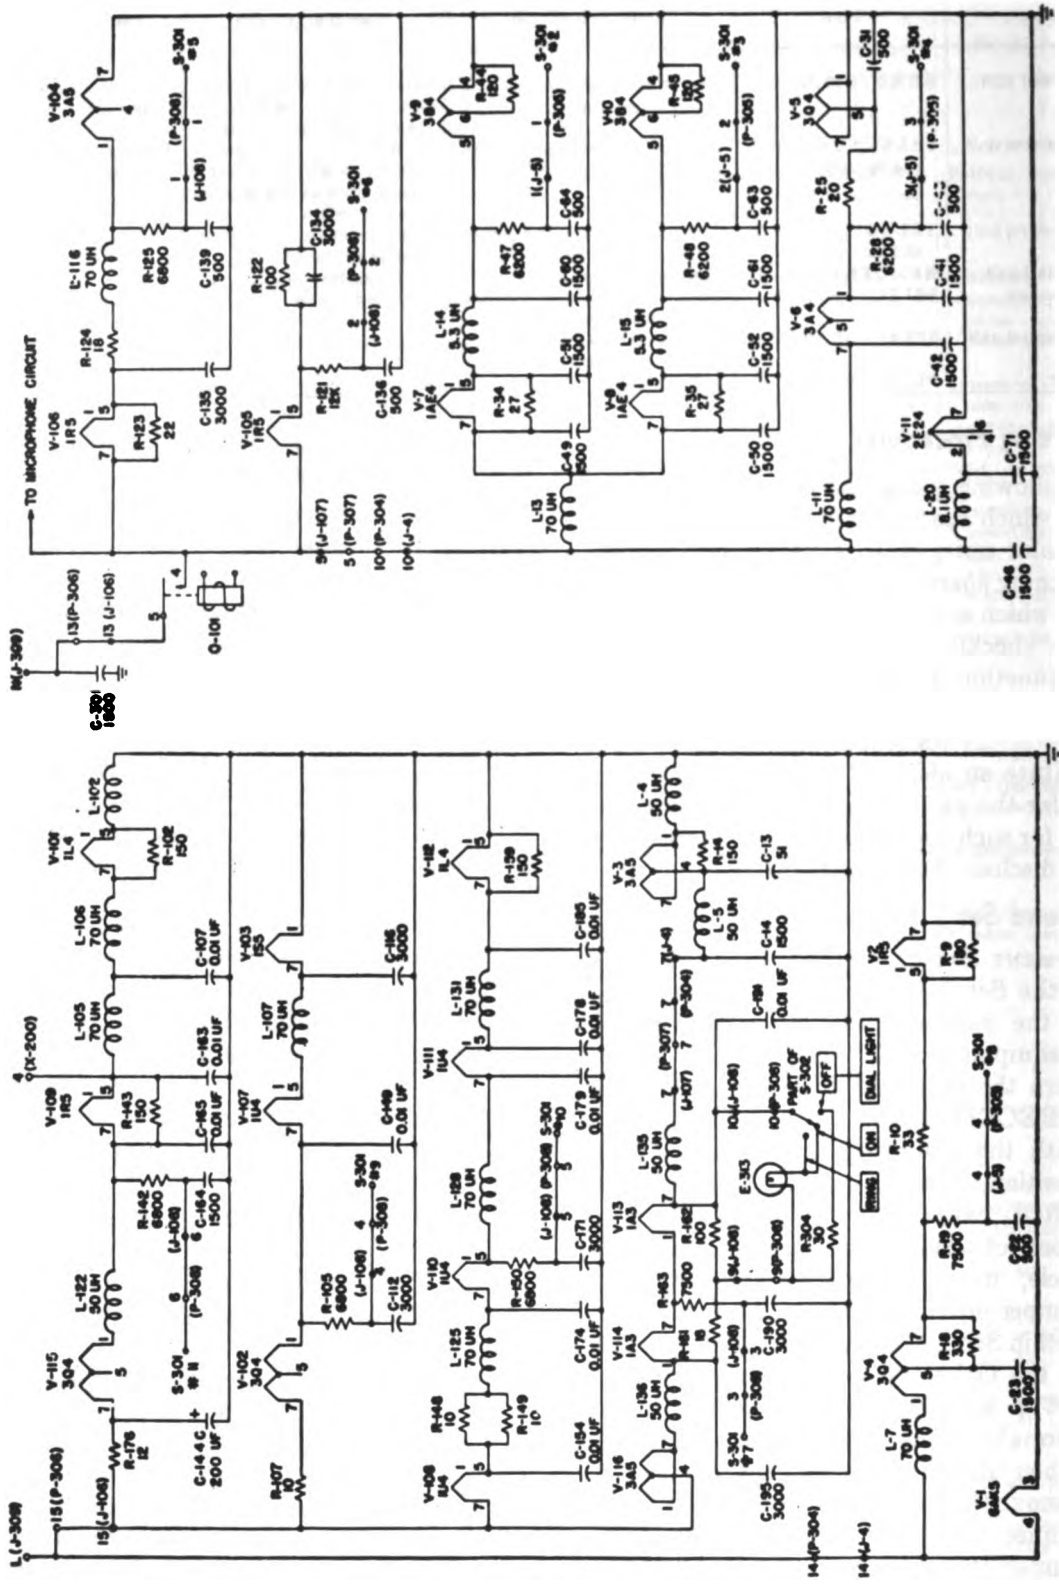

701 800-04

Figure 46. SA 1 filament circuit, schematic diagram.

e. RECEIVER CHECK. Turn the SQUELCH control counterclockwise and check for noise output in the earpiece of the handset. If no noise is heard, check tubes V-2 and V-107 through V-116 for filament continuity (par. 87). If the filaments are good, replace the tubes one at a time with identical type tubes which are known to be good until the defective tube is isolated.

f. TRANSMITTER FILAMENT CHECK. Press the push-to-talk button on the handset and turn the METER switch successively through positions 2, 3, 4, 5, and 6. If an abnormal meter reading is obtained, refer to the filament chart (par. 87) for the probable defective tube involved. Refer also to the filament schematic (fig. 46). If all of the readings are very low or zero, the trouble is probably in the power supply (par. 91). Check fuse F-1, thermal relay K-1, and ballast tubes R-24, R-25, R-37, and R-38 in the power supply (figs. 49 and 50). (Ballast tubes R-37 and R-38 are included in Power Supply PP-112/GR only.)

g. TRANSMITTER OUTPUT CHECK. Turn the METER switch to the RF position, press the push-to-talk switch on the handset, and talk into the mouthpiece. Interpret the indications as outlined below.

- (1) If an abnormally low deflection is obtained on the meter, check the antenna tuning (par. 35). If it is impossible to obtain any output, and the tubes have been checked as outlined in the preceding subparagraphs, the trouble may be due to misalignment.
- (2) If r-f output is obtained, sidetone should be audible in the earpiece. If no sidetone is heard, check tubes in the receiver section of Set 1 (figs. 53 and 54). Also check modulator tube V-105, 106 and oscillator tube V-104.

h. RINGING CHECK. Turn the RING-DIAL LIGHT (OFF-ON) switch to the RING position and check for r-f output on the meter and a ringing signal in the earpiece. If abnormal indications are obtained, check tube V-104 in Set 1 (fig. 54 and par. 92).

84. Miscellaneous Components

The mounting, retransmission unit, interphone boxes, local control unit, and remote control unit may prove defective with regard to lamp, switch, and relay operation. General trouble-shooting techniques are outlined below. Refer to figure 21 as an aid.

a. MOUNTING. If the mounting lamp lights, power should be available to all units. If the lamp is lit but all units do not have power, the trouble is probably caused by faulty wiring in the mounting. If the lamp is not lit but power is available to at least one unit, either the lamp is defective or the dimmer control is incorrectly adjusted. Continuity checks of the mounting should reveal any troubles which may arise within the mounting. A schematic diagram of the mounting is shown in figure 74. Before making continuity checks, check all fuses in individual units.

b. INTERPHONE BOX.

- (1) When normal indications are obtained at a panel AUDIO connector but not at an interphone box, the trouble must be in the cable interconnections or the interphone box.
- (2) If none of the interphone boxes is operative for a particular function, the trouble is in either the mounting-interphone box, interconnecting cable, or in the internal wiring within the rack-mounted unit which is being checked.
- (3) If any one interphone box is operative and others are inoperative, the trouble is probably in the cables which are used to connect the interphone boxes in parallel.
- (4) If trouble is isolated to a particular interphone box, continuity checks on the box should reveal the defect. The following chart lists the measurements which should be taken to check the continuity of all parts and wiring within the interphone box. A schematic diagram is shown in figure 72.

Points of measurement	Position of RADIO TRANS switch 8-2	Position of selector switch 8-1	Resistance reading
Terminal 1 of E-2 to tips of jacks J-3 and J-4 and to F contact of connectors J-1 and J-2.	Center.....	Infinity.
	RADIO TRANS....	Counterclockwise.....	0.
		Center.....	Infinity.
		Clockwise.....	Infinity.

Points of measurement	Position of RADIO TRANS switch S-2	Position of selector switch S-1	Resistance reading
Terminal 2 of E-2 to J contact of connectors J-1 and J-2.	-----	-----	0.
Terminal 2 of E-2 to tips of jacks J-3 and J-4 and to F contacts of connectors J-1 and J-2.	Center RADIO TRANS.....	Counterclockwise Center Clockwise.....	0. Infinity. 0. Infinity.
Terminal 3 of E-2 to tips of jacks J-3 and J-4 and to F contacts of connectors J-1 and J-2.	Center RADIO TRANS.....	Counterclockwise Center Clockwise.....	Infinity. Infinity. Infinity. Infinity. 0. 0.
Terminal 4 of E-2 to B, E, and H contacts of connectors J-1 and J-2.	-----	-----	0.
Terminal 5 of E-2 to rings of jacks J-3 and J-4 and to C contacts of connectors J-1 and J-2.	Center RADIO TRANS.....	Counterclockwise Center Clockwise.....	Infinity. 0. Infinity. Infinity.
Terminal 6 of E-2 to K contacts of connectors J-1 and J-2.	-----	-----	0.
Terminal 6 of E-2 to rings of jacks J-3 and J-4 and to C contacts of connectors J-1 and J-2.	Center RADIO TRANS.....	Counterclockwise Center Clockwise.....	0. Infinity. 0. Infinity.
Terminal 7 of E-2 to rings of jacks J-3 and J-4 and to C contacts of connectors J-1 and J-2.	Center RADIO TRANS.....	Counterclockwise Center Clockwise.....	Infinity. Infinity. Infinity. 0.
Terminal 8 of E-2 to tips of jacks J-5 and J-6 and to A contacts of connectors J-1 and J-2.	-----	Counterclockwise.....	0 to 10k depending on position of VOLUME controls R-1 and R-2.
Terminal 9 of E-2 to tips of jacks J-5 and J-6 and A contacts of connectors J-1 and J-2.	-----	Center.....	0 to 10k depending on position of VOLUME controls R-1 and R-2.
Terminal 10 of E-2 to tips of jacks J-5 and J-6 and to A contacts of connectors J-1 and J-2.	-----	Clockwise.....	0 to 10k depending on position of VOLUME controls R-1 and R-2.
Terminals 11 and 12 of E-2 to chassis	-----	-----	Infinity.
Terminal 13 of E-2 to terminals 14 and 15 of E-2.	-----	-----	0.

c. LOCAL AND REMOTE CONTROL UNITS. To check operation of the local and remote control units, perform the applicable items of the equipment performance checklist (par. 81) and check for normal indications as listed. If abnormal indications are obtained, refer to the schematic diagrams (figs. 72 and 73) and make continuity checks of the units.

85. Interphone Amplifier and Power Supply

Warning: Never turn the OFF-INT-RT-70 switch on the amplifier front panel to the RT-70 position, unless a suitable load is substituted for the Receiver-Transmitter RT-70/GRC, or the receiver-transmitter is used across the output terminals which supply power to this unit. With-

out the proper loading, thermal relay K-1 in the amplifier unit will be severely overloaded.

a. EQUIPMENT SET-UP. Operational checks of the interphone amplifier and its power supply may best be performed from the interphone box in conjunction with the front panel of the amplifier. To make these checks, it is necessary that the equipment be set up in the following manner:

- (1) Turn the mounting switch to the OFF position.
- (2) Turn the OFF-INT-RT-70 switch, on the amplifier panel, to the INT position.
- (3) Turn the VOLUME controls on the amplifier front panel and on the interphone box to their respective half-volume point.

- (4) Turn the RADIO TRANS switch to the center position, on the interphone box.
- (5) Connect a chest set group (including a headset and microphone), known to be good, to the AUDIO connector on the front panel of the amplifier.
- (6) Connect a chest set group (including a headset and microphone), known to be good, to an audio connector on the interphone box.
- (7) Turn the selector switch on the interphone to the SET 1+INT position.
- (8) Turn the mounting switch to the ON position.

b. NORMAL INDICATIONS. The following procedural checks indicate what should be expected from the amplifier and its power supply under normal operating conditions.

- (1) Using the chest set group connected to the interphone box, operate the switches and talk into the microphone. Note the volume of the voice signal that is heard in the headset.
- (2) Turn the selector switch on the interphone box to the center position, marked INT, and repeat step (1) above.
- (3) Turn the selector switch on the interphone box to the extreme clockwise position, unmarked, and repeat (1) above.
- (4) The volume of the voice signal that is heard when the selector switch is in the INT position should be louder than that which is heard in either of the other two positions of the selector switch. All three volumes should be fully perceptible.

c. ABNORMAL INDICATIONS. When the procedures which are outlined in *a* and *b* above have been performed and indications other than those noted occur, an abnormality or trouble exists somewhere within the system. The particular trouble that would be present is confined to one or more of the following units: the interphone box, the mounting, the interphone amplifier, the amplifier power supply, and the interconnecting cables. To determine which unit is faulty and what might be at fault within the unit, read through the following steps and perform those which are applicable.

- (1) When no output is obtained with the selector switch in any of its three positions, operate the chest set that is connected to the panel of the amplifier and

listen for a voice signal in the headset. If a voice signal is heard, check all cables for proper connections and check the wiring in the mounting and interphone box for continuity (pars. 84 and 86.) If no signal is heard at the panel, check V-1, thermal relay K-1, and ballast resistor R-32 in the amplifier (par. 85 and fig. 47). Should these components fail to disclose the trouble, check vibrator E-1 in the amplifier power supply (par. 85 and fig. 48).

- (2) When no output is obtained with the selector switch in the INT position, but outputs are noted in the other two positions of the selector switch, operate the chest set at the panel of the amplifier. Listen for a voice signal in the headset. The presence of a signal at this point indicates a fault in the interconnecting cables (par. 86), or in the wiring of either the mounting or the interphone box (par. 84). Should no signal be present at the panel of the amplifier, check amplifier tubes V-4 and V-5.
- (3) When no output is obtained with the selector switch in the first position (SET 1+INT), or in the third position, but is heard in the center position, check V-2 and V-3 in the amplifier, respectively. Should these checks fail to reveal the fault, refer to paragraphs 84 and 86.

86. Cables

When normal indications are obtained at a panel AUDIO connector but not at an interphone box, the trouble may be caused by a poor cable connection or an open lead within a cable. Continuity checks must be made to determine such faults. In some instances the cables are terminated by solder connections on a terminal board within the mounting, an interphone box, or intermediate junction boxes. To obtain access to these points it will be necessary to open the unit involved. Figures 19 and 28 show an open view of the mounting and the system cordage diagram, respectively. The interior of the interphone box is shown in figure 22. The above mentioned illustrations and the unit schematic diagrams should be used when making continuity checks.

87. Set 1 Filament-Circuit Trouble Localization Chart

The following chart lists the Set 1 tubes checked for each position of the METER switch on the Set 1 panel. A center-scale reading is the normal reading for all positions of the switch. If the

normal reading is not obtained, the probable defective tube is listed under the type of reading which is obtained. To obtain a reading in positions 2 through 6 of the METER switch, the push-to-talk button must be pressed. Observe the notes at the end of the chart.

METER switch position	Zero reading	Too low but not zero reading	Too high but not full-scale reading	Full-scale reading
2	V-7	V-7	V-9	V-9.
3	V-8	V-8	V-10	V-10.
4	V-6			V-5.
5	V-106	V-106		V-104.
6	V-105			
7	V-116, V-114		V-113, V-3	V-3.
8	V-4		V-2	V-2.
9	V-102			V-107, V-103.
10	V-108, V-110		V-112	V-111, V-112.
11	V-115		V-109, V-101	V-109, V-101

Note 1. The transmitter power amplifier tube, V-11, and the receiver first r-f amplifier tube, V-1, are not checked by the METER switch. These tubes must be checked by visual inspection. Observe whether (with power applied) the tube filaments are lit. The filament of V-11 is energized when the microphone push-to-talk button is operated.

Note 2. Because of the series-parallel arrangement of the tube filaments, a break in the filament of one tube in a series string of tubes will cause all the

other tubes in the string to go out and will produce indications of a faulty stage involving those tubes.

Note 3. A high reading for all filaments on positions 7 through 11 may be due to a faulty V-1. A high reading on positions 2 through 6 may be due to a faulty V-11. A low voltage for all tubes may be due to the operation of the overload relay in the power supply or trouble in the power supply.

Note 4. Turn off all power when replacing tubes.

Section II. REPLACEMENT OF PARTS

88. General

The following paragraphs list procedures for the replacement of parts for which running spares are provided. The running spares for each unit are listed in paragraph 19. The procedures described will be necessary as a result of sectionalizing a trouble to a particular unit and as an aid to localizing the trouble within the unit to a particular component part.

Note. Since no lubrication is required for Radio Sets AN/VRC-13, -14, and -15, there is no disassembly procedure to be followed concerning lubrication.

89. Removing Immersionproof Cases

Replacement of pluck-out parts (with the exception of fuses) necessitates the removal of the immersionproof cases which house the panel-chassis assemblies of the various units. To remove the case of Set 1, the Set 1 power supply, or the interphone amplifier, perform the following steps.

a. Remove all external connections from the unit involved.

b. Remove the unit from the mounting.

c. Loosen the DZUS fasteners located at the edges of the unit.

d. Slide the panel-chassis assembly out of the case. Take care not to damage any wiring or components while removing and handling the panel-chassis assembly.

90. Interphone Amplifier

The replacement of pluck-out parts for which spares are available is described below.

a. FUSE. The panel-mounted fuse may be removed by unscrewing the fuse cap which also serves as a fuse extractor. A spare fuse is located in a fuse clip on the amplifier chassis (fig. 47).

b. THERMAL RELAY AND BALLAST TUBE. Thermal relay K-1 and ballast tube R-32 are mounted in a horizontal position at the rear of the amplifier chassis (fig. 47). After removing the panel-chassis assembly from the case, remove the relay or ballast tube with a straight horizontal pull. Do not rock or jiggle the component in its socket; the socket prongs may be damaged.

c. TUBES. All tubes are accessible from the top of the chassis when the case has been removed

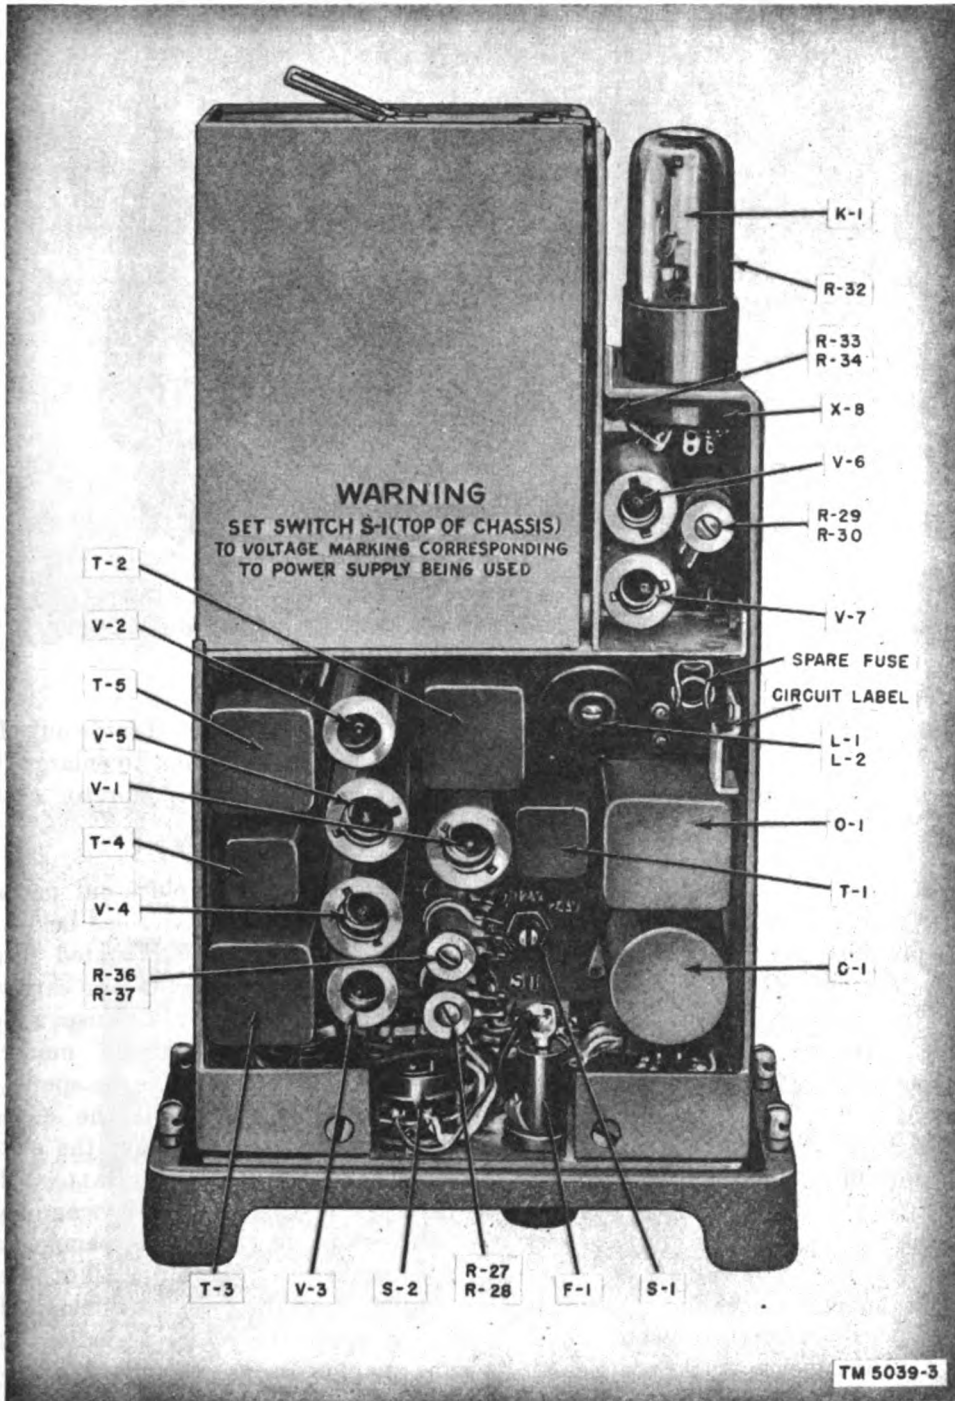


Figure 47. AF Amplifier AM-65/GRC, top view of chassis.

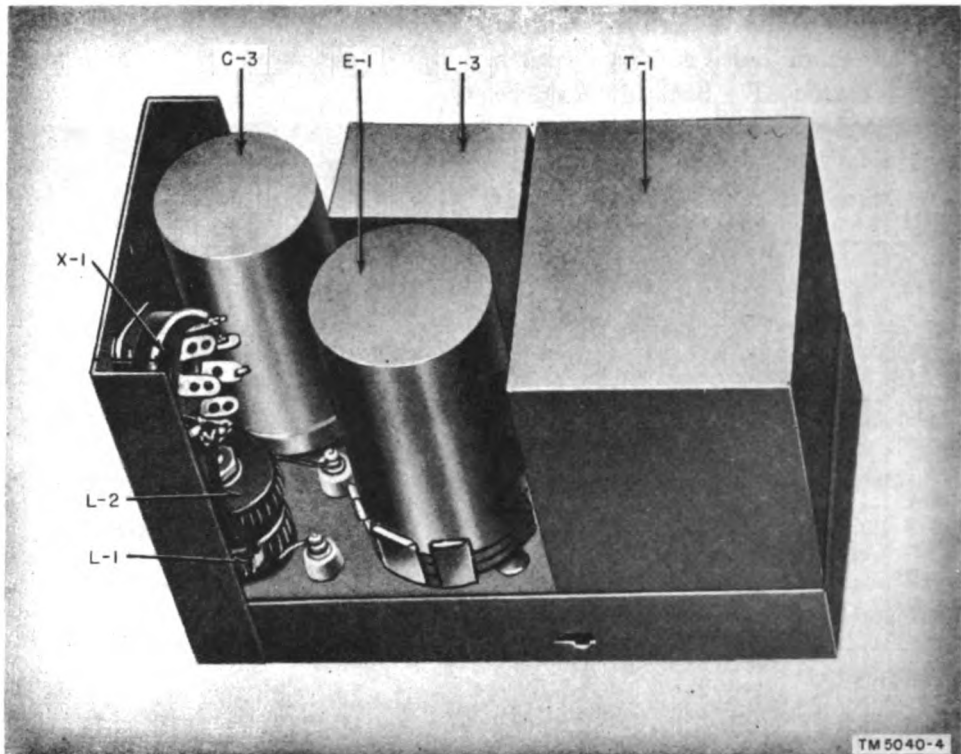


Figure 48. Power Supply PP-282/GRC, top view of chassis

(fig. 47). To remove any tube, first remove the tube shield and then use a tube puller. Do not rock or jiggle a tube in its socket; the tubes are easily damaged by careless handling.

d. **PLUG-IN POWER SUPPLY.** Although it can be replaced as a single unit, the plug-in power supply is not furnished as a running spare. However, a spare is provided for the vibrator within the power supply (fig. 48). Remove the amplifier case and replace the vibrator as follows:

- (1) Loosen the clamp at the rear of the power supply compartment and swing it out of the way.
- (2) Grasp the handle at the rear of the power supply unit and pull straight out.
- (3) Remove the three green screws which fasten the top cover on the power supply chassis.
- (4) Using the handle on the cover, lift the cover off with a straight upward movement. If the cover is stuck, use a small screw driver and gently pry the cover.
- (5) Pull the vibrator (fig. 48) out of its socket with a straight upward movement. Do not rock or jiggle the vibrator while attempting to remove it from its socket. If necessary, use a small screw driver to

gently pry the vibrator out of its socket, but take care not to enlarge the ring clip which holds the vibrator near the base.

91. Set 1 Power Supply

The replacement of pluck-out parts for which spares are available is described below.

a. **FUSES.** The panel-mounted fuses may be removed by unscrewing the fuse caps which serve also as fuse extractors. Spare fuses are provided in the front-panel compartment marked **SPARE FUSES**. To gain access to the spares, loosen the two wingnuts which hold the cover plate of the compartment and remove the plate.

b. **THERMAL RELAYS AND BALLAST TUBES.** To gain access to the thermal relays and ballast tubes, it is necessary to remove the panel-chassis assembly from the case (par. 89). All of these parts are accessible from the top of the chassis (figs. 49 and 50). Remove the relays or ballast tubes in the same manner as any standard octal-base tube; with a straight upward pull. Do not rock or jiggle the components in their sockets (note that similarly designated parts are located differently in the 12- and 24-volt supplies).

c. **TUBES.** The four-power supply tubes are also accessible from the top of the chassis. To

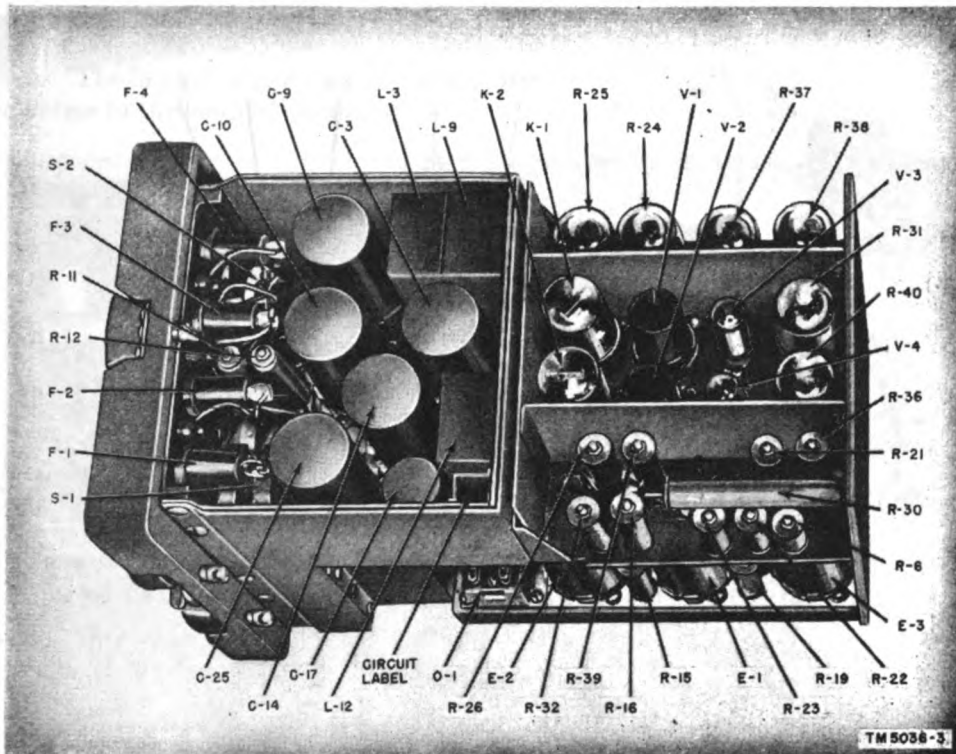


Figure 49. Power Supply PP-112/GR, top view of chassis.

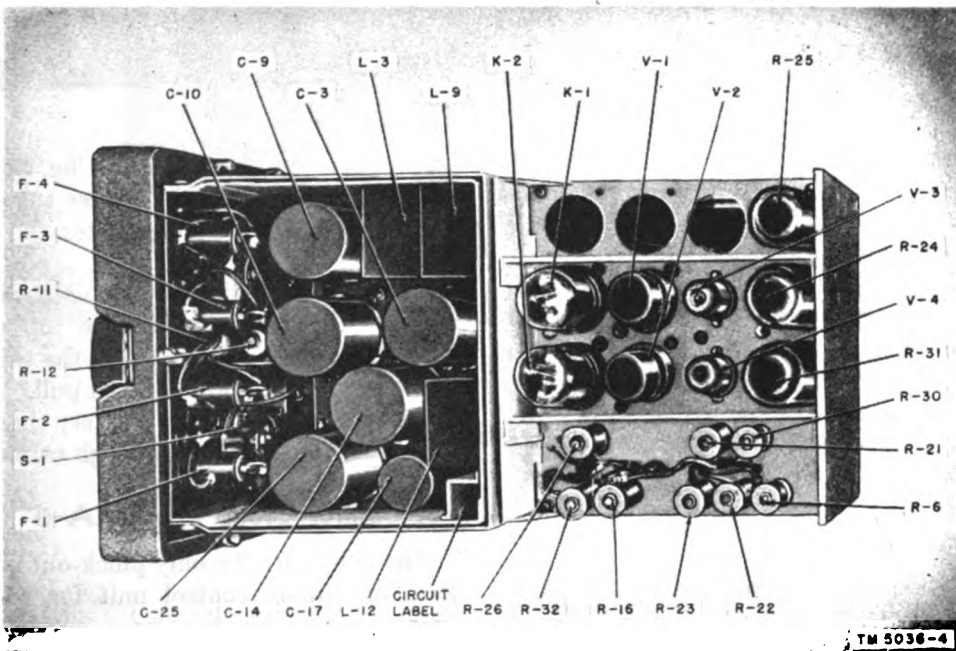


Figure 50. Power Supply PP-109/GR, top view of chassis.

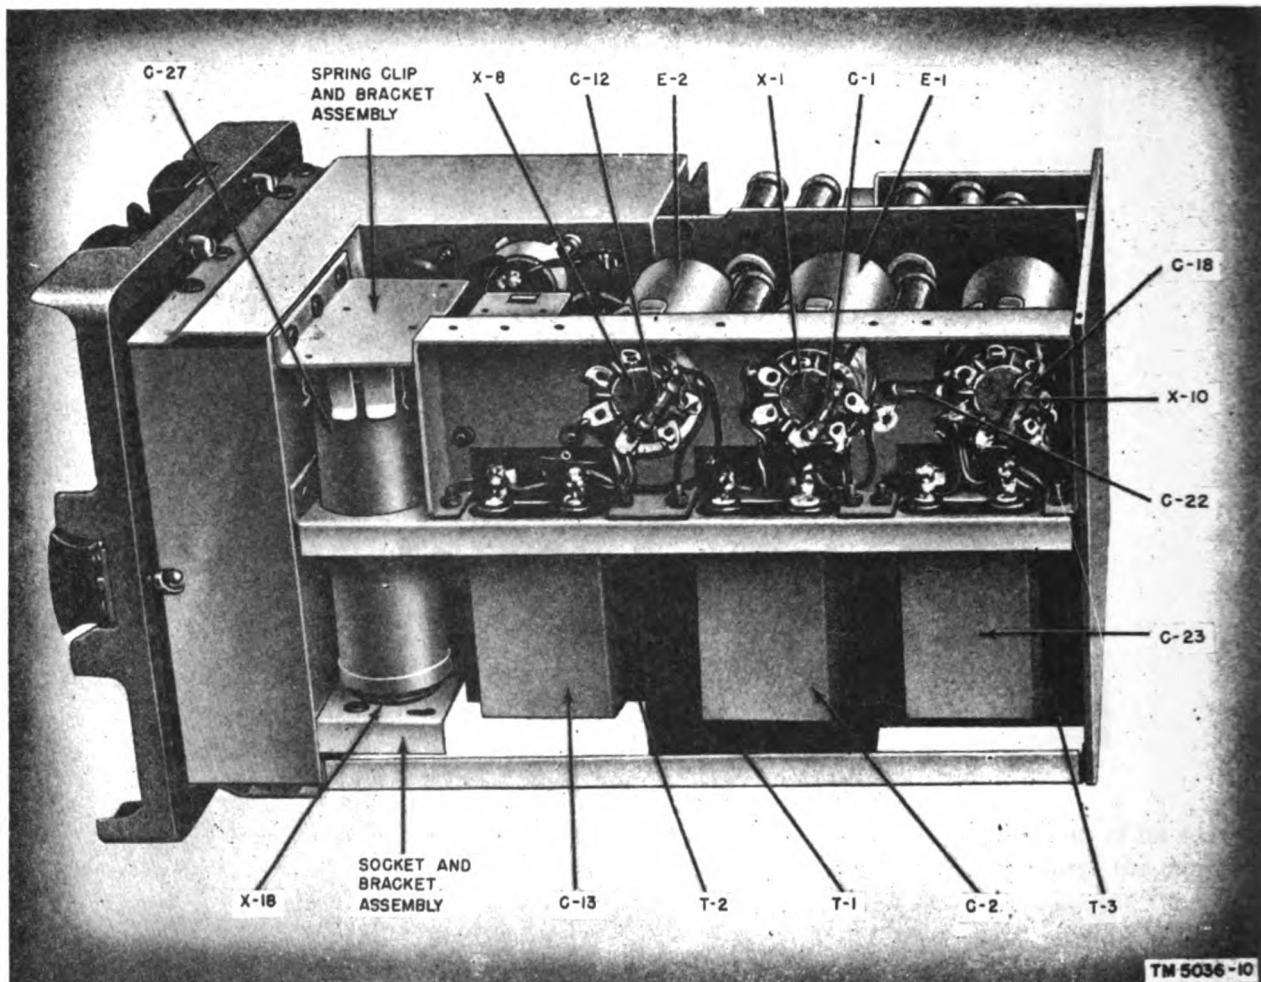


Figure 51. Power Supply PP-109/GR, bottom view of chassis.

remove V-1 or V-2, pull the tube straight upward. To remove V-3 or V-4, use a tube puller. Do not rock or jiggle the tubes in their sockets; the socket prongs and tubes may be damaged.

d. **VIBRATORS.** The three vibrators (E-1, E-2, and E-3) are located on the right-hand side of the power supply chassis (fig. 51). To remove a vibrator, pull straight upward without jiggling. If necessary, use a small screw driver to pry the vibrator out of its socket but take care not to spread the ring clip at the base of the vibrator.

92. Set 1

The tubes, which are the only replaceable parts in Set 1, are mounted on the vertical r-f and i-f chassis (fig. 52). To gain access to the tubes, the panel-chassis assembly must be removed from its case (par. 89).

a. Tubes V-1 through V-11 are mounted on the r-f chassis (fig. 53). Tubes V-101 through V-116

are mounted on the i-f chassis (fig. 54). With the exception of V-11, each of these tubes may be removed with a tube puller after the shield is removed.

b. Before removing V-11 it is necessary to disconnect the plate cap at the top of the tube. When the cap is disconnected, the tube can be removed with a straight upward pull. Do not rock or jiggle the tube in its socket; the sockets and tubes may be damaged through careless handling.

93. Control Group AN/GRA-6

The lamps are the only pluck-out parts in either local or remote control unit for which running spares are supplied. The lamps are accessible from the rear of the front panels after the panel-chassis assemblies have been removed from the cases (figs. 32 and 33).

a. To gain access to the lamp in the local control unit, unscrew the two wingnut fasteners at the

edge of the front panel and slide the unit out of its case. Slide the lamp socket (with lamp) out of the bakelite sleeve. The lamp may then be replaced.

b. To gain access to the lamp in the remote con-

trol unit, loosen the spring clips which secure the panel-chassis assembly in the case. Slide the unit out of its case and replace the lamp as directed for the local unit (a above).

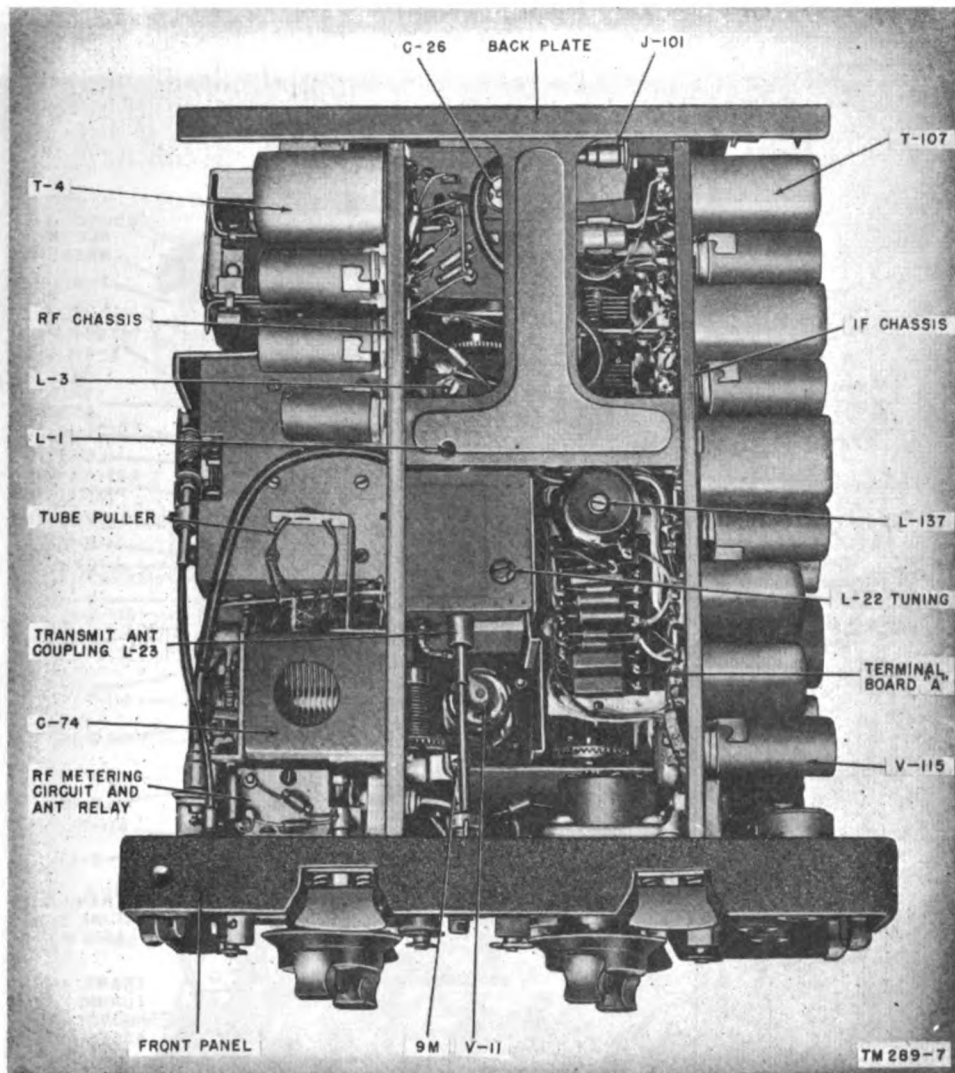


Figure 52. Set 1, top view of panel-chassis assembly.

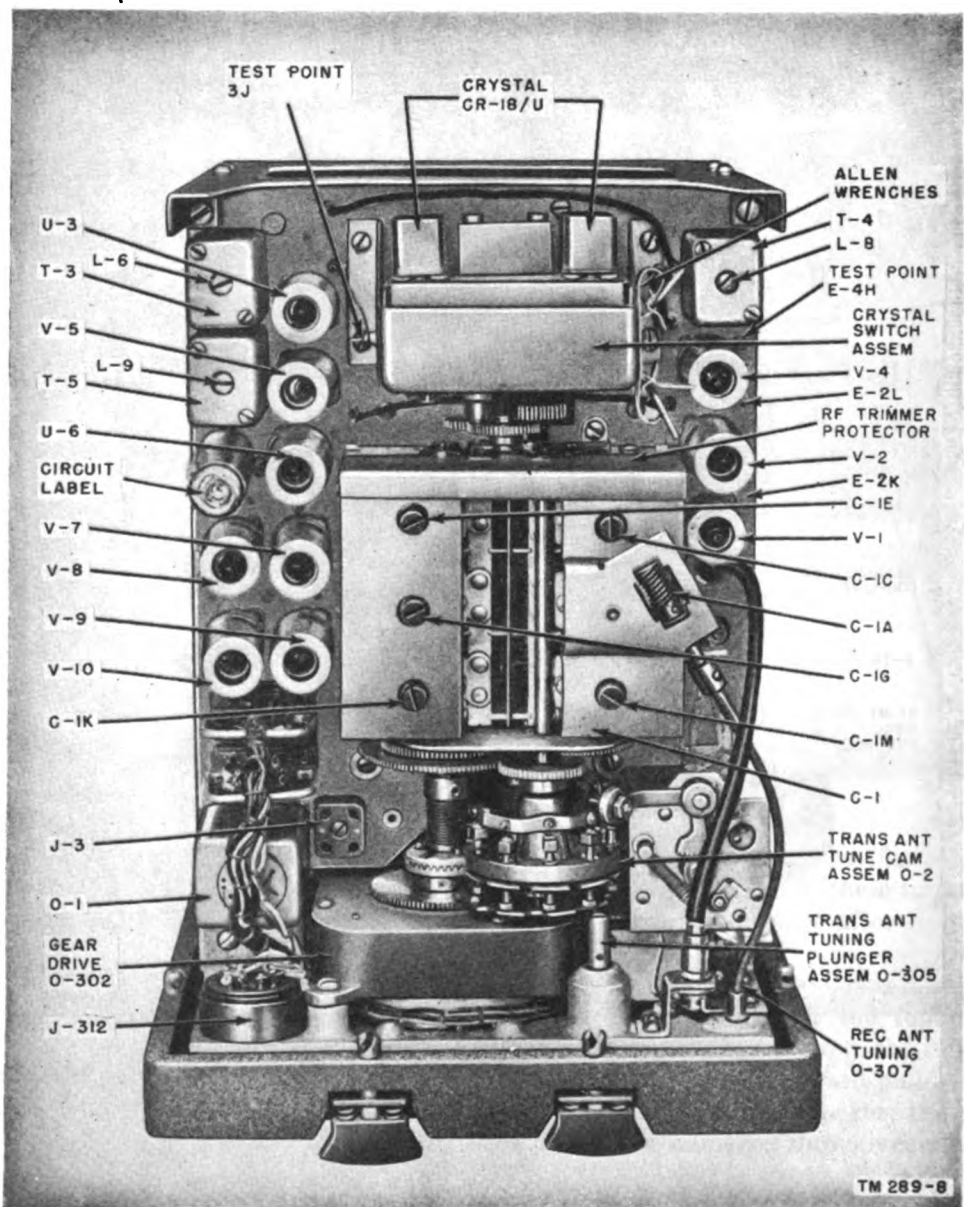


Figure 53. Set 1, view of r-f chassis.

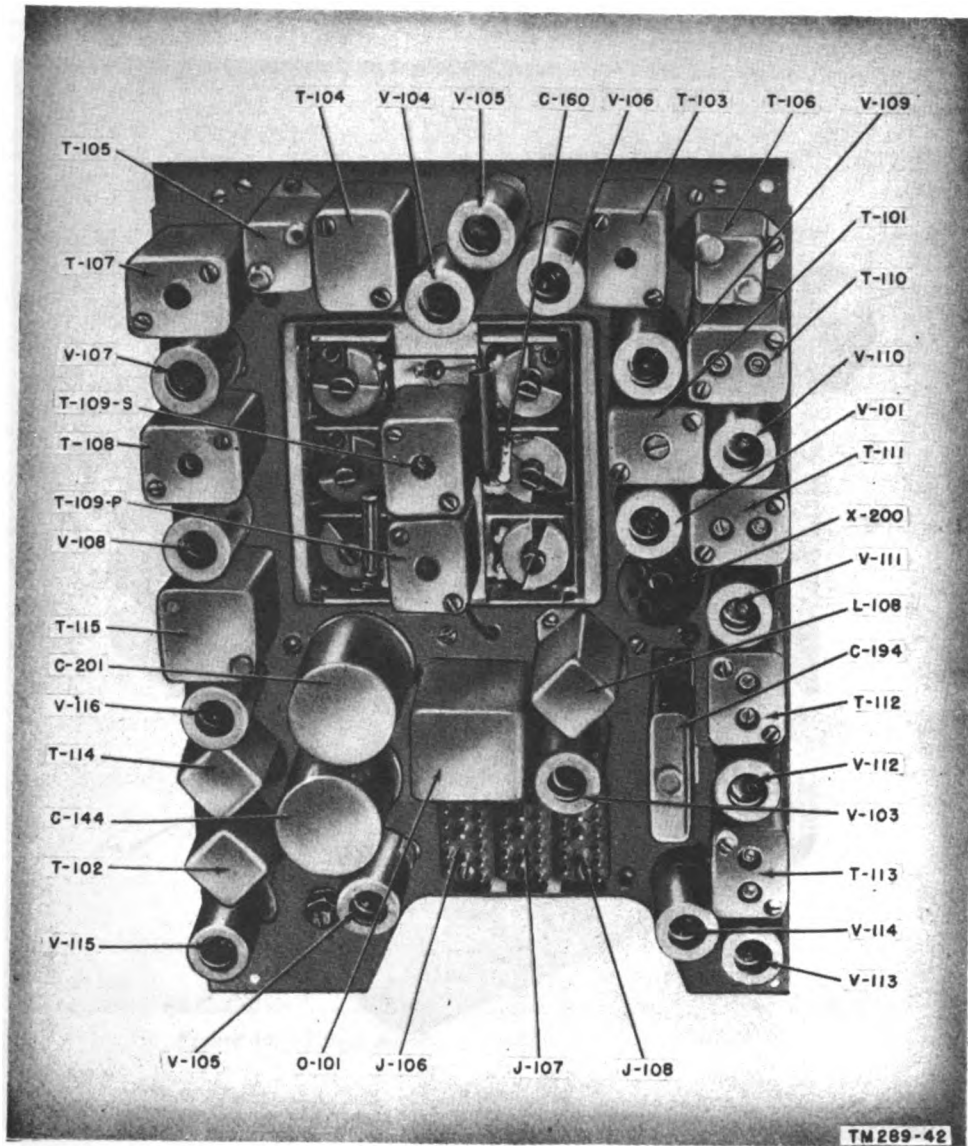


Figure 54. Set 1, view of i-f chassis.


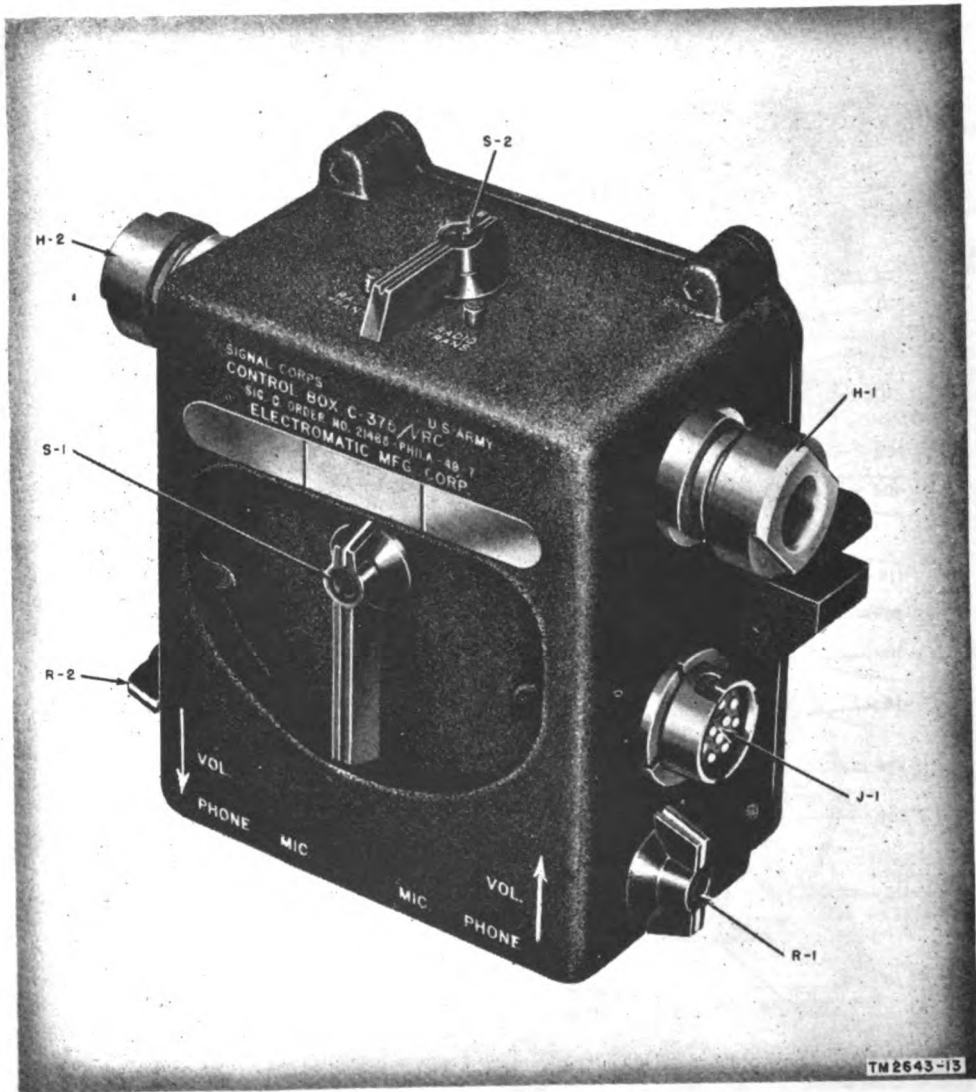


Figure 55. Control Box C-375/VRC, right oblique view.

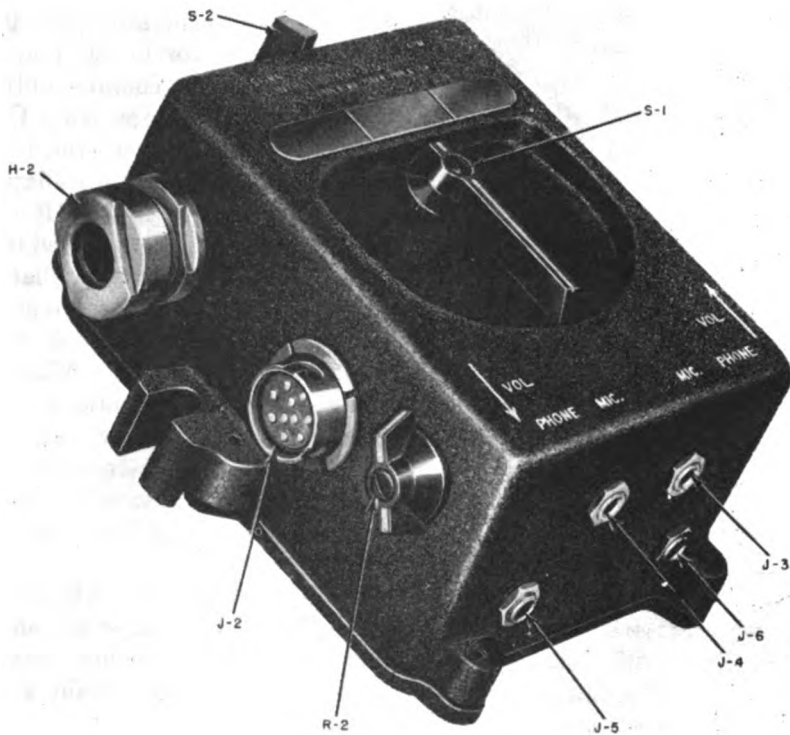

TM 2643-15

Figure 56. Control Box C-375/VRC, left oblique view.

CHAPTER 6

AUXILIARY EQUIPMENT

94. General

Auxiliary equipment is equipment which is not supplied as a part of the basic radio sets (par. 6) but which extends the application of the radio sets in some manner. The auxiliary equipment described in this chapter is Modification Kit MX-898/GR.

95. Purpose and Use of Modification Kit MX-898/GR

The modification kit is used to provide temporary field operation of the receiver-transmitter (Set 1) when it is removed from a vehicle.

96. Components of Modification Kit MX-898/GR

The components of Modification Kit MX-898/GR are listed and described below.

a. GENERATOR G-8/GRC (fig. 57). Generator G-8/GRC is a hand-powered power source. It consists of a generator unit with cranks and mounting legs (fig. 57). Complete details on the generator are published in a separate manual.

b. CASE CY-590/GRC (fig. 58).

(1) Case CY-590/GRC is a battery box which holds five series-connected 1.5-volt batteries (Battery BA-403/U) and one 90-volt battery (Battery BA-419/U).

(2) Two receptacles and a switch are mounted on the front panel of the battery case (fig. 59). The receptacles are used for interconnecting the battery case with the receiver-transmitter (Set 1) and the hand generator. The switch is used to complete or break the battery circuits to the receiver-transmitter with which the battery case is used. The REMOTE position of the switch does not apply to Radio Sets AN/VRC-13, -14, and -15.

c. POWER CABLE ASSEMBLY CX-1210/U. This

cable is used to connect the battery case to Set 1 in field installations of Set 1, utilizing both battery case and hand generator (par. 98), or to connect the hand generator to Set 1 in field installations utilizing the hand generator only.

d. POWER CABLE ASSEMBLY CX-1209/U. This cable is used to connect the battery case to the hand generator in field installations of Set 1.

e. MOUNTING MT-652/GR. Mounting MT-652/GR (figs. 62 or 64) is used to hold the antenna masts used in field installations. The overhanging flange of the receiver-transmitter front panel has a boss which will accept the base of Mounting MT-652/GR. When the mounting is secured, the mast sections supplied with the modification kit (*f* below) can be screwed into the mounting. A rubber-covered lead-in wire, which is part of the mounting, is used to connect the antennas to the ANT post on the receiver-transmitter.

f. MAST SECTIONS AB-22/GR, AB-23/GR, AND AB-24/GR. These are short mast sections, approximately 23 inches long, which can be screwed together to obtain a whip antenna of various lengths.

g. HANDSET H-33/PT (fig. 15). The same handset which is supplied with Control Group AN/GRA-6 is also supplied with the modification kit. A description of the handset is given in paragraph 18.

h. BAG CW-187/GR. Bag CW-187/GR is a canvas bag which will accommodate the handset, antenna mounting, mast sections, cables, generator legs, and the technical manuals supplied with the generator.

i. BAG CW-188/GR. Two of these canvas bags are supplied with each kit. One bag is to carry the battery case and hand generator; the other bag is to carry a receiver-transmitter. The bag for the receiver-transmitter normally is stored in the other bag of the same type, when the modification kit is stored away in the vehicle.

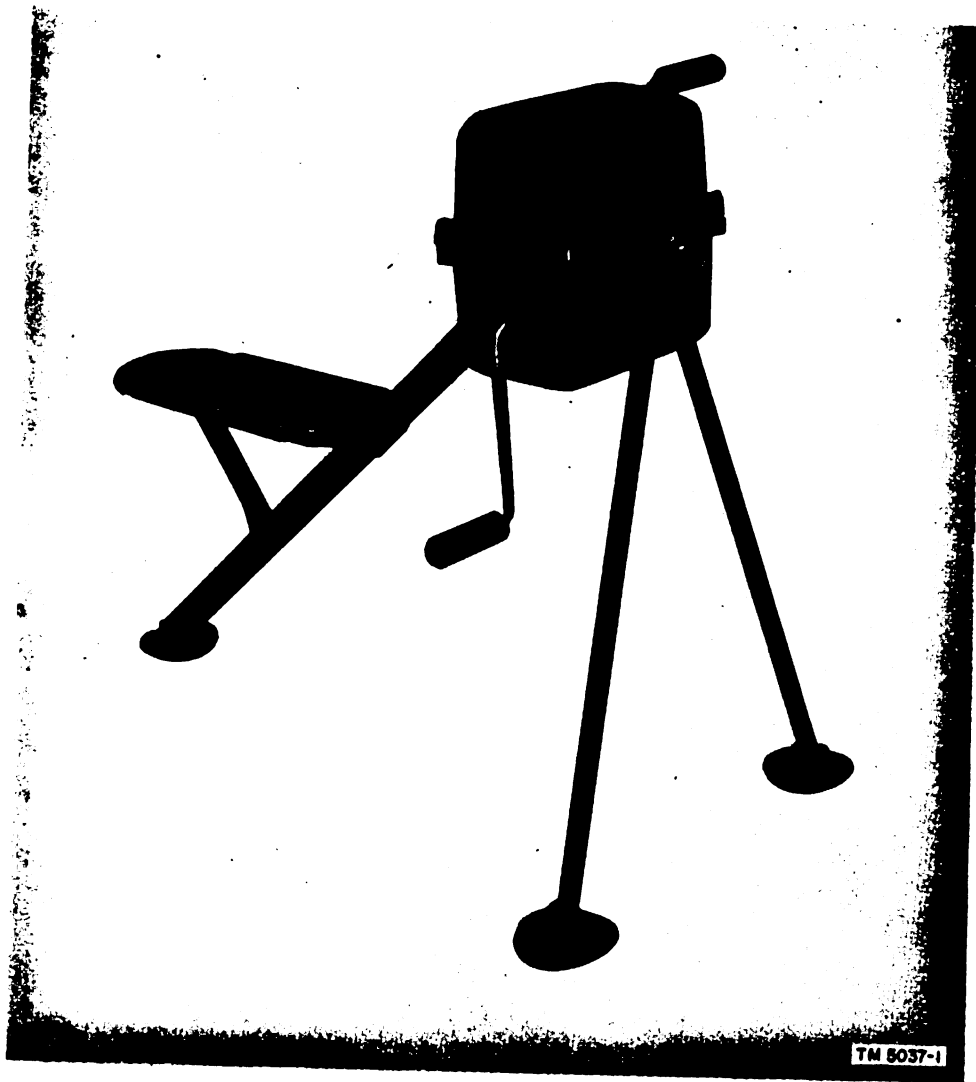


Figure 57. Generator G-8/GRC.

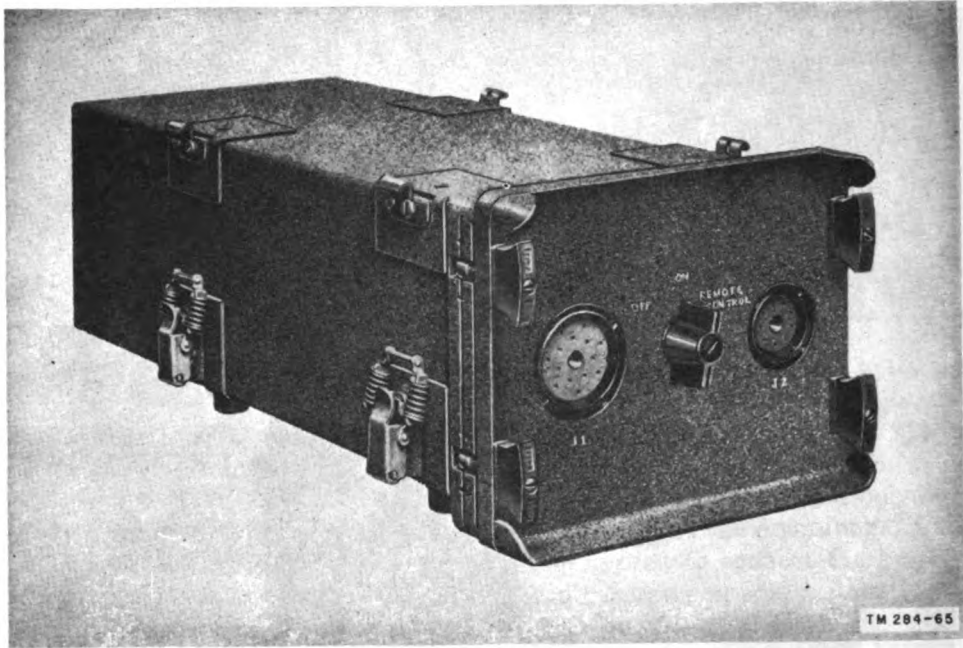


Figure 58. Case CY-590/GRC, front view.

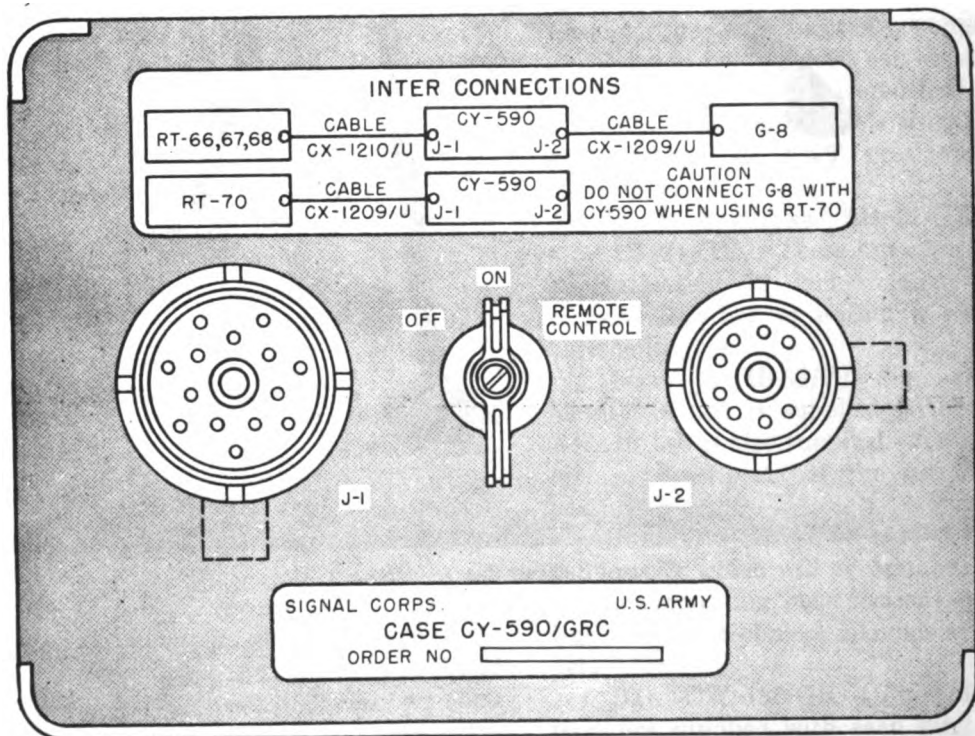


Figure 59. Case CY-590/GRC, front panel.

TM 284-59

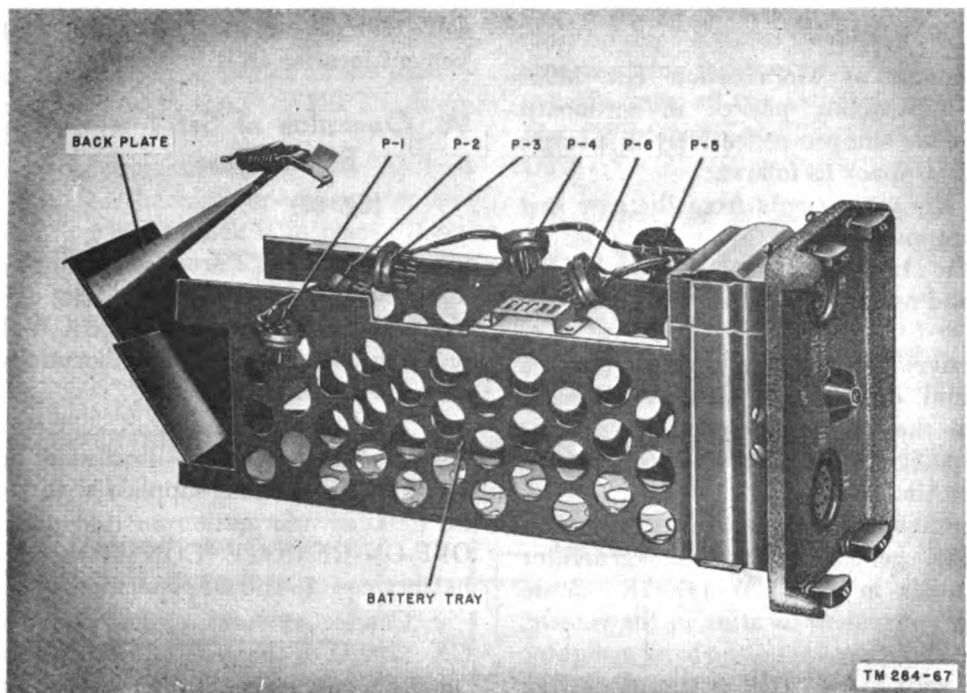


Figure 60. Case CY-590/GRC, case and batteries removed.

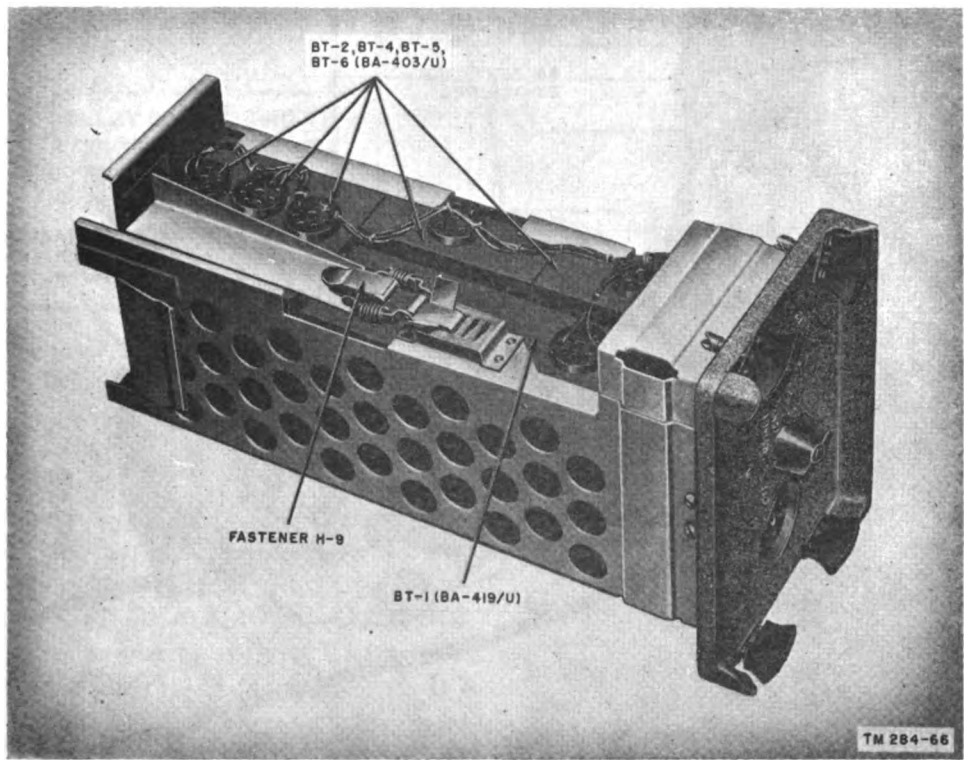


Figure 61. Case CY-590/GRC, case removed, batteries installed.

97. Packaging

The components of Modification Kit MX-898/GR are individually packed in cardboard containers but are shipped collectively in a single wooden case. Unpack as follows:

a. Remove the components from the case and remove the wrappings.

b. Loosen the Dzus fasteners on the panel of the battery case and remove the battery tray from the case (fig. 60).

c. Install five 1.5-volt batteries (Battery BA-403/U) and one 90-volt battery (Battery BA-419/U) in the case. Connect the batteries as indicated in figures 61 and 65. Replace the battery tray in the case.

d. Store the handset, antenna mounting, mast sections, cables, generator legs, and generator technical manuals in Bag CW-187/GR. Store the bag in any convenient location in the vehicle.

e. Store the battery case and the hand generator and one of Bags CW-188/GR in the other Bag

CW-188/GR. Store the packed bag in some convenient location in the vehicle.

98. Operation of Set 1 with Generator and Battery Case

(fig. 62)

a. Remove Set 1 from Mounting MT-297/GR and pack it in the unused Bag CW-188/GR. Carry the three bags (two Bags CW-188/GR and one Bag CW-187/GR) to the location selected for field operation of the set.

b. Set up the generator, battery case, and receiver-transmitter, as illustrated in figure 62. Refer to the manual supplied with the generator for detailed information on that unit. Turn the OFF-ON-REMOTE CONTROL switch of the battery case to the OFF position.

c. Connect one end of Power Cable Assembly CX-1209/U to the generator and the other end to the 9-pin connector on the battery case.

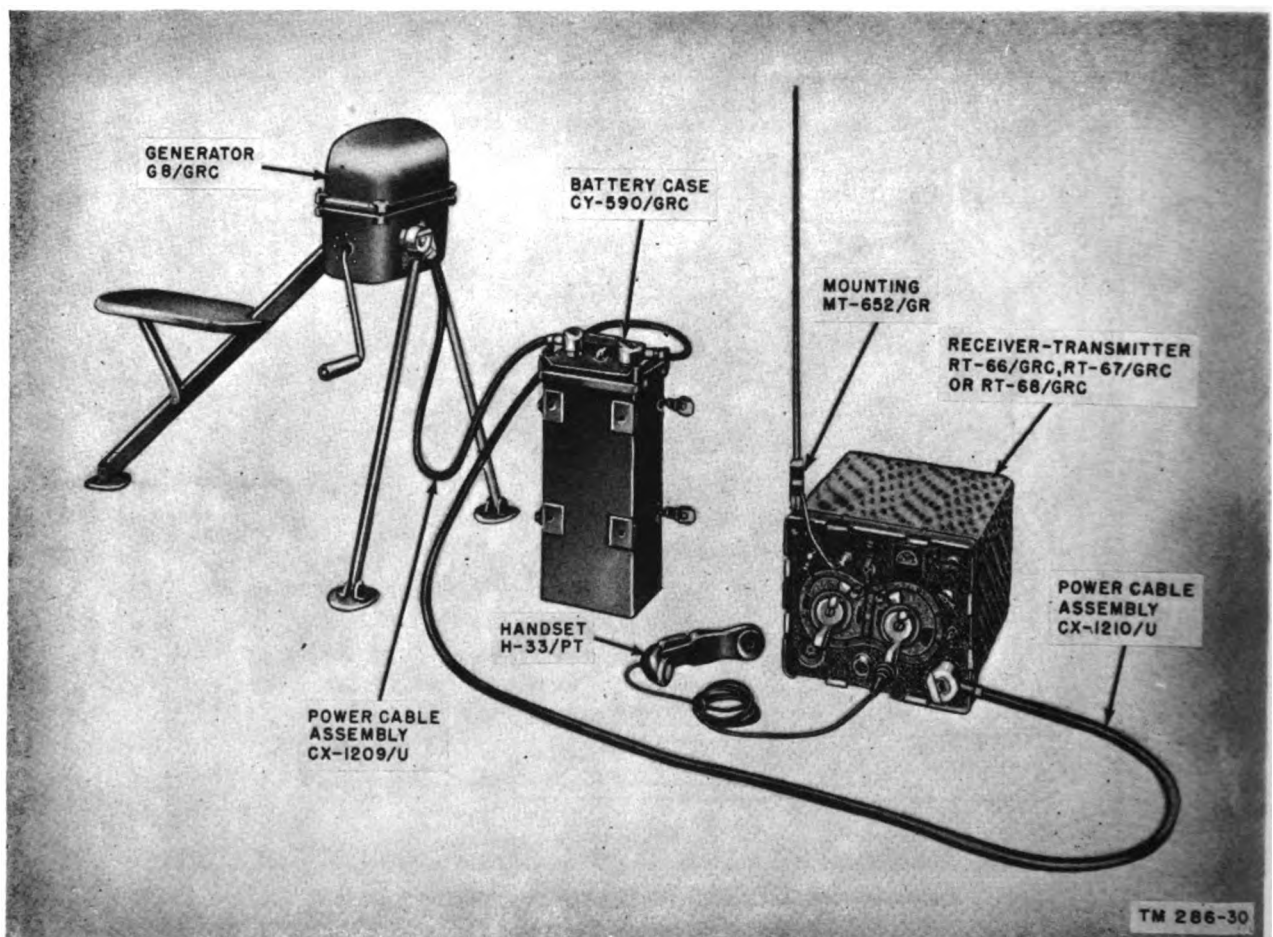


Figure 62. Field operation of Set 1 with Generator G-8/GRC and Case CY-590/GRC.

d. Connect one end of Power Cable Assembly CX-1210/U to the 14-pin connector on the battery case and the other end to the POWER IN receptacle on Set 1.

e. Insert the antenna mounting into the boss at the top front of the receiver-transmitter and turn the mounting 90° to lock it in place. Connect the lead-in wire to the ANT connector. For Receiver-Transmitters RT-66/GRC and RT-67/GRC, assemble the five mast sections and screw the assembly into the antenna mount. For Re-

mouthpiece. Release the push-to-talk button and stop cranking to listen.

i. To turn off the set, stop cranking and turn the OFF-ON-REMOTE CONTROL switch to OFF.

99. Operation of Set 1 with Generator G-8/GRC

(fig. 64)

a. Remove Set 1 from Mounting MT-297/GR and pack it in Bag CW-188/GR. If the battery

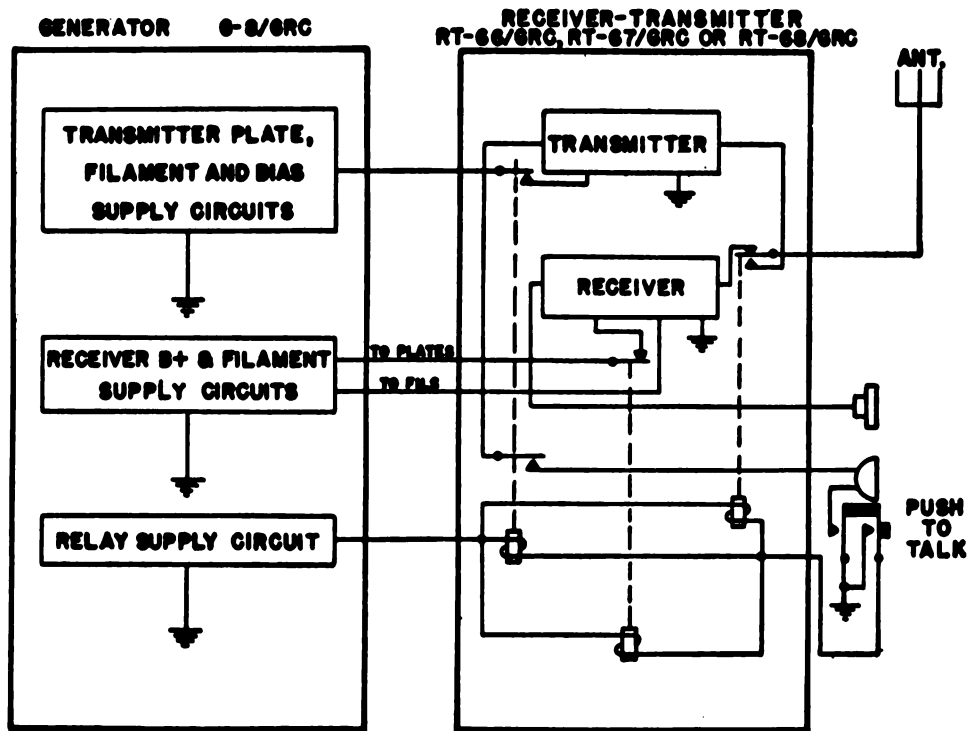


Figure 63. Auxiliary operation of Set 1, block diagram.

ceiver-Transmitter RT-68/GRC, assemble three of the mast sections and screw the assembly into the antenna mount.

f. Connect the handset to one of the AUDIO connectors on the front of the receiver-transmitter.

g. Set the OFF-ON-REMOTE CONTROL switch of the battery case to ON. The receiver section of Set 1 is then ready for operation. It is not necessary to crank the generator while monitoring.

h. To transmit, crank the generator at a steady speed of approximately one revolution per second, press the push-to-talk button, and talk into the

case is definitely not going to be used, it can be removed from the other Bag CW-188/GR to lighten the burden. Take the three bags to the location selected for field operation of the set.

b. Set up the generator and Set 1 as indicated in figure 64. Connect Power Cable Assembly CX-1210/U to the generator and the other end to the POWER IN connector on Set 1. (When Set 1 is used with Generator G-8/GRC alone, the generator supplies all the operating voltages for both the receiver and the transmitter. The block diagram (fig. 63) illustrates the function of the generator.

c. Connect the antenna mount and mast

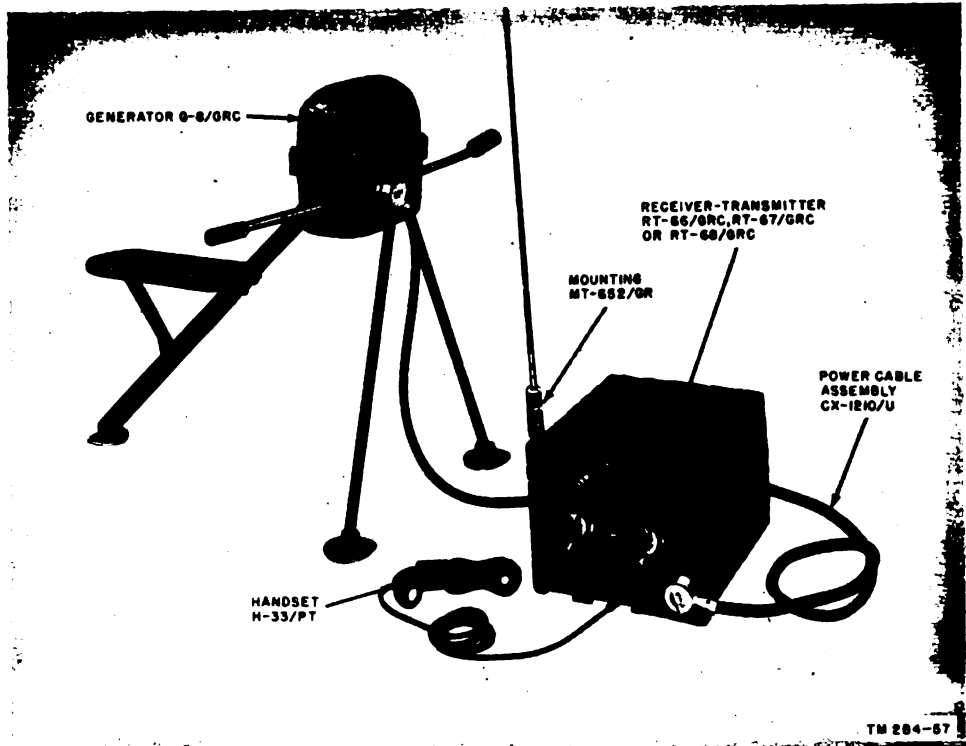


Figure 64. Field operation of Set 1 with Generator G-8/GRC.

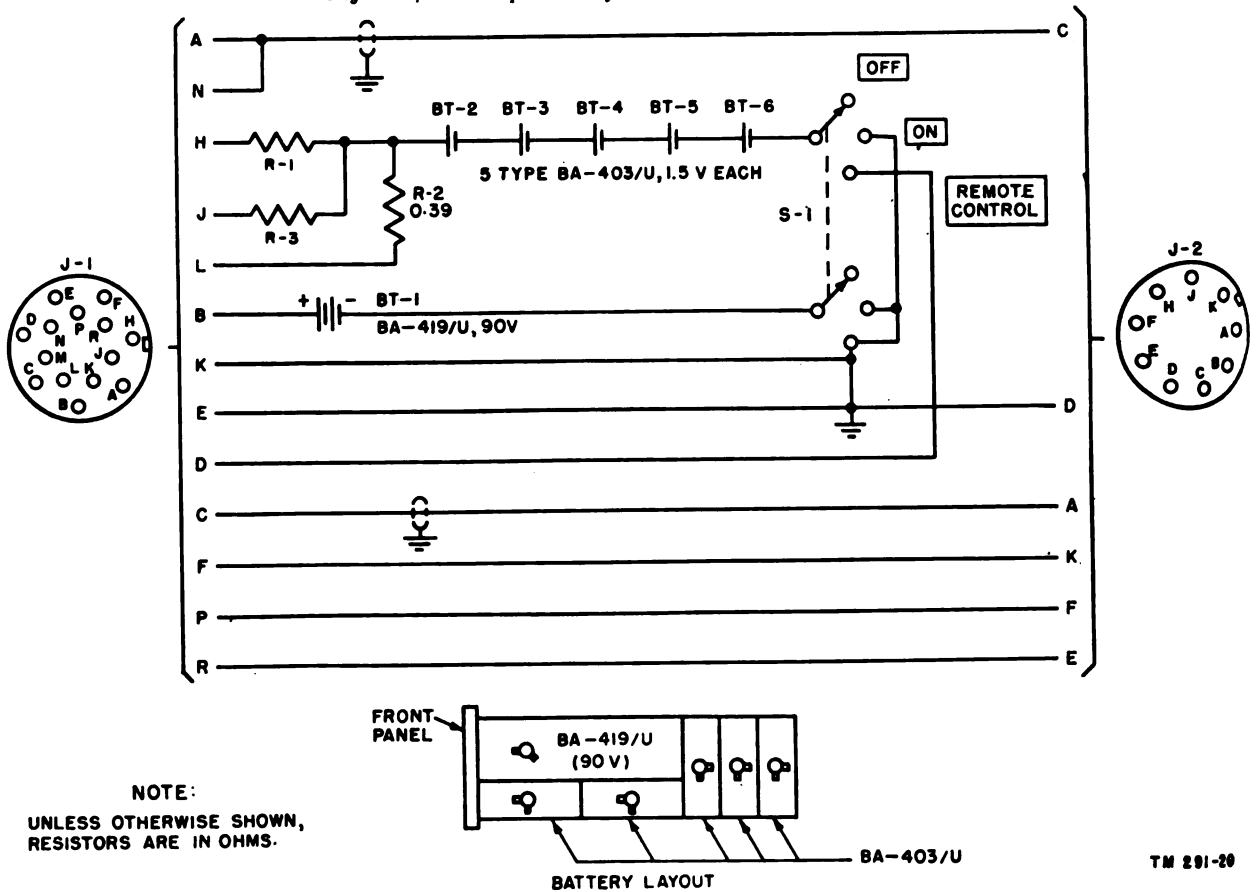



Figure 65. Case CY-590/GRC, schematic diagram.

sections as directed in paragraph 98e. Connect the handset to an AUDIO connector on the Set 1 panel.

d. To receive, crank the generator at a steady speed of approximately 1 revolution per second,

and listen with the handset. To transmit, crank the generator, press the push-to-talk button, and talk into the mouthpiece.

e. To stop the equipment, stop cranking the generator.

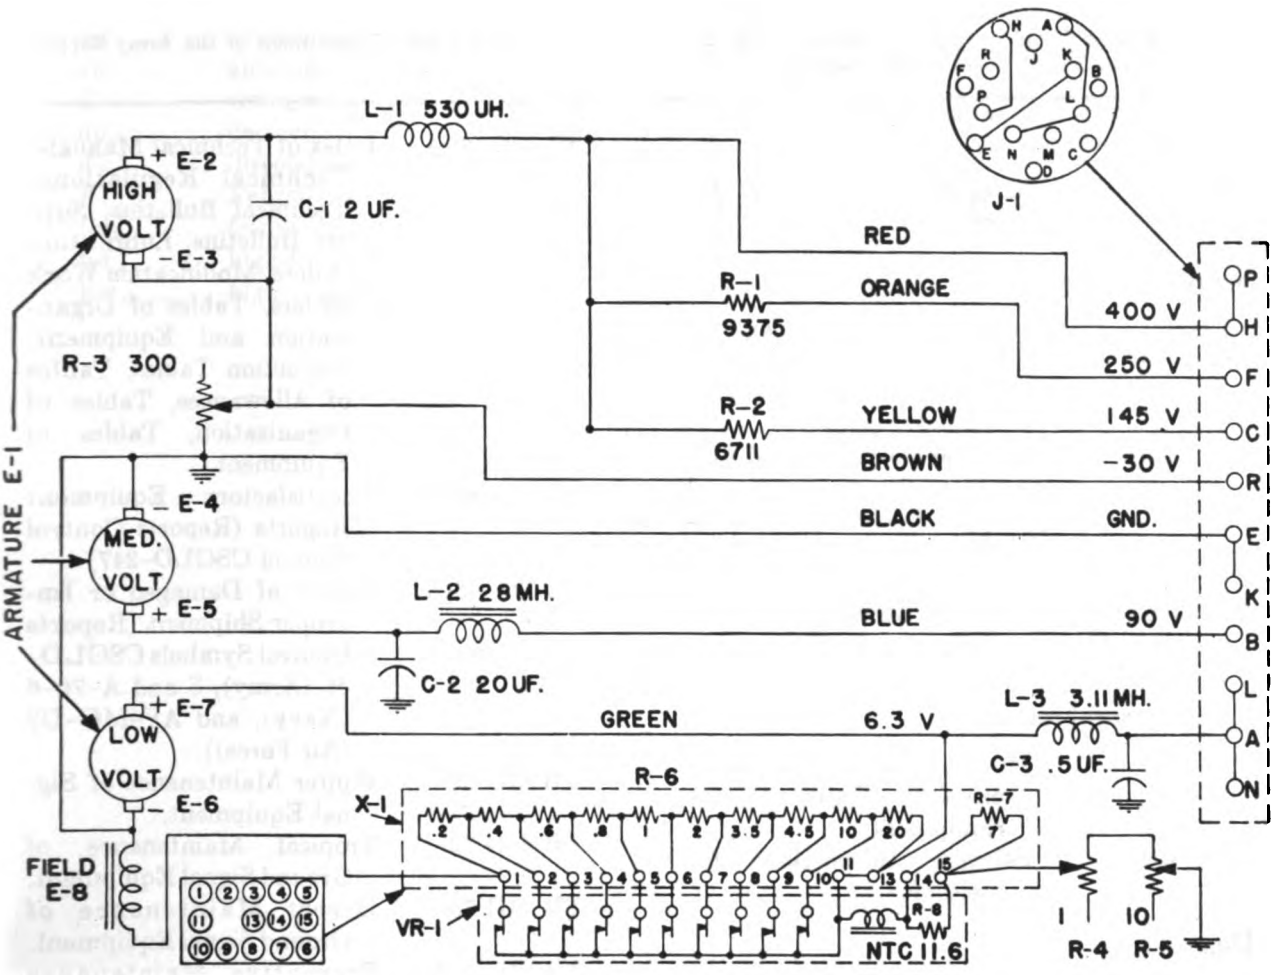

NOTE:

ALL RESISTOR VALUES IN OHMS

TM 5037-9

Figure 88. Generator G-8/GRC, schematic diagram.

APPENDIX I

REFERENCES

Note. For availability of items listed, check SR 310-20-3 and SR 310-20-4. Check Department of the Army Supply Catalog SIG 1 for Signal Corps supply catalogs.

1. Army Regulations

AR 380-5 Safeguarding Military Information.

2. Supply Publications

SIG 1 Introduction and Index.
 SB 11-47 Preparation and Submission of Requisitions for Signal Corps Supplies.
 SB 11-76 Signal Corps Kit and Materials for Moisture- and Fungi-Resistance Treatment.

3. Technical Manual on Test Equipment

TM 11-2627 Tube Tester I-177.

4. Painting and Preserving

TB SIG 13 Moistureproofing and Fungiproofing Signal Corps Equipment.
 TM 9-2851 Painting Instructions for Field Use.

5. Demolition

FM 5-25 Explosives and Demolitions.

6. Other Publications

FM 24-18 Field Radio Techniques.
 SR 310-20-3 Index of Training Publications (Field Manuals, Training Circulars, Firing Tables and Charts, Army Training Programs, Mobilization Training Programs, Graphic Training Aids, Joint Army-Navy-Air Force Publications, and Combined Communications Board Publications).

SR 310-20-4 Index of Technical Manuals, Technical Regulations, Technical Bulletins, Supply Bulletins, Lubrication Orders, Modification Work Orders, Tables of Organization and Equipment, Reduction Tables, Tables of Allowances, Tables of Organization, Tables of Equipment.
 SR 700-45-5 Unsatisfactory Equipment Reports (Reports Control Symbol CSGLD-247)
 SR 745-45-5 Report of Damaged or Improper Shipment (Reports Control Symbols CSGLD-66 (Army), S and A-70-6 (Navy), and AF-MC-U2 (Air Force)).
 TB SIG 66 Winter Maintenance of Signal Equipment.
 TB SIG 72 Tropical Maintenance of Ground Signal Equipment.
 TB SIG 75 Desert Maintenance of Ground Signal Equipment.
 TB SIG 123 Preventive Maintenance Practices for Ground Signal Equipment.
 TB SIG 178 Preventive Maintenance Guide for Radio Communication Equipment.
 TM 9-2857 Storage Batteries, Lead-Acid Type.
 TM 11-430 Batteries for Signal Communication except those pertaining to Aircraft.
 TM 11-453 Shop Work.
 TM 11-455 Radio Fundamentals.
 TM 11-483 Suppression of Radio Noises.
 TM 11-486 Electrical Communication Systems Engineering.
 TM 11-660 Introduction to Electronics.

TM 11-4000 Trouble Shooting and Repair
of Radio Equipment.

TM 38-850 Basic Maintenance Manual.

7. Abbreviations

a-c..... alternating-current
a-f..... audio-frequency
afc..... automatic frequency control
C..... centigrade
db..... decibel(s)
d-c..... direct-current
F..... Fahrenheit
f-m..... frequency-modulation
h-f..... high-frequency
h-v..... high-voltage

i-f..... intermediate-frequency
l-v..... low-voltage
kc..... kilocycle
ma..... milliampere
mc..... megacycle
mw..... milliwatt
r-f..... radio-frequency
rms..... root mean square
 μ a..... microampere
 μ f, $\mu\mu$ f..... microfarad, micromicrofarad
 μ v..... microvolt

8. Glossary

For explanation of terms used in this manual,
refer to TM 11-455.

APPENDIX II

IDENTIFICATION TABLE OF PARTS

Note. The fact that a part is listed in this table is not sufficient basis for requisitioning the item. Requisitions must cite an authorized basis, such as T/O & E, T/A, T/BA, SIG 7-8-10, SIG 10, list of allowances of expendable material, or another authorized supply basis. Department of the Army Supply Catalogs applicable to the equipment covered in this manual is SIG 7 & 8 C-375/VRC. For an index of available supply catalogs in the Signal portion of the Department of the Army Supply Catalog, see the latest issue of SIG 1, Introduction and Index.

1. Scope of Identification Table of Parts

Only those units that are not covered in separate technical manuals are covered in the following identification tables of parts. These units are Mounting MT-297/GR, Case CY-590/GRC, and Control Box C-375/VRC. For the other units refer to the individual technical manuals.

2. Identification Table of Parts for Mounting MT-297/GR

Ref symbol	Name of part and description	Function of part	Signal Corps stock No.
	ARMY-NAVY MOUNTING MT-297/GR: radio set mtg; p/o Army-Navy Radio Sets AN/VRC-13, AN/VRC-14, and AN/VRC-15; metal rack w/8 metal rack surface plates and 9 metal channels ea w/locking strip, mtd on 2 rectangular metal mtg bkt hinged at rear end, ea w/2 wing nut fasteners at front joint, ea mtg bkt supported by 4 shock mts mtd on metal hold-down plate U-shaped metal junction box mtd on under side of rack between mtg bkt, 8 cables w/connectors terminate in junction box; olive drab finish; main power ckt term 80 amp cap; rectangular box shape; 33 $\frac{1}{2}$ " lg x 13 $\frac{3}{4}$ " deep x 4 $\frac{1}{2}$ " h o/a; four .343" diam mtg holes in ea hold-down plate on 3 $\frac{1}{4}$ " x 4 $\frac{1}{8}$ " mtg/c; mp and fp, rails on inner part of U-shaped casting, and locking connector accom slide in type control unit; Fed Tele & Rad part/dwg #GA-1834-14; U. S. Army spec #71-3326.		
E-6.....	BOARD, terminal: wiring term board; 18 solder type term; $\frac{1}{4}$ " between ctr; molded plastic board segmented; 5 $\frac{1}{8}$ " lg x 2 $\frac{1}{16}$ " wd x 1 $\frac{1}{4}$ " h o/a; two .169" x .25" oval mtg holes on 4 $\frac{1}{8}$ " mtg/c; term marked from 1 to 18, mtg bkt on ea end; p/o Fed Tele & Rad #GA-1973.14 housing assem; Fed Tele & Rad part/dwg #GA-1451-2.	Cable terminating board..	3Z770-18.45.
E-2, E-5....	BOARD, terminal: wiring term board; 18 solder type term; $\frac{1}{4}$ " between ctr; molded segmented plastic board; 5 $\frac{1}{8}$ " lg x 2 $\frac{1}{16}$ " wd x 1 $\frac{1}{4}$ " h o/a; two .169" x .25" oval mtg holes on 4 $\frac{1}{8}$ " mtg/c; term marked from A to K and from A-1 to K-1, omitting G and I; mtg bkt on ea end; p/o Fed Tele & Rad #GA-1973-14 housing assem; Fed Tele & Rad part/dwg #GA-1452-2.	Cable terminating boards..	3Z770-18.46.
O-2, O-3....	BUSHING: shock absorber for mtg connector not in use; neoprene; 1 $\frac{1}{2}$ " lg x $\frac{1}{2}$ " OD x $\frac{3}{8}$ " ID; Fed Tele & Rad part/dwg #GR-2150-2.	Unused cable connectors..	2Z1409-191.

Ref symbol	Name of part and description	Function of part	Signal Corps stock No.
H-11-----	BUTTON, plug: rubber substitute; fits 1½" diam hole; .587" diam x 1¼" lg o/a; 70 to 80 durometer hardness; Fed Tele & Rad part/dwg #GR-2261-2-2; U. S. Army spec #71-4945.	Cable clamp plug-----	4Z3152.
W-8-----	CABLE ASSEMBLY, power: Sig C Cordage CO-212; 8' 6" lg excluding terminations; 2 Fed Tele & Rad #GH-2025-2 term lugs on 1 end, 1 on ea cond, other end terminates in 2 leads, 1 ins 4" lg w/end bared and tinned ¼" lg; other bare 2¼" lg; Fed Tele & Rad part/dwg #GA-2186-12-1; cordage covered by U. S. Army spec #71-1618A.	Battery cable-----	3E7350.1-1024.
W-1-----	CABLE ASSEMBLY, power: Sig C Cordage CO-212; 19½" lg excluding terminations; 1 end terminated in Fed Tele & Rad #GH-2200-12 plug, other end terminated in 2 leads, 1 bare 3" lg, other ins 2" lg w/end bared and tinned ¼" lg; Fed Tele & Rad part/dwg #GA-2190-14-1; cordage covered U. S. Army spec #71-1618A.	Power cable-----	3E7350.1-19.3.
W-4-----	CABLE ASSEMBLY, power: Sig C Cordage CO-212; 18½" lg excluding terminations; 1 end terminated in Fed Tele & Rad #GH-2200-12 plug, other end terminated in 2 leads, 1 ins and 1 bare ea 3½" lg, end bared and tinned ¼" lg; Fed Tele & Rad part/dwg #GA-2190-14-2; cordage covered by U. S. Army spec #71-1618A.	Power cable-----	3E7350.1-18.3.
W-5-----	CABLE ASSEMBLY, power: Sig C Cordage CO-212; 20" lg excluding terminations; 1 end terminated in Fed Tele & Rad #GH-2200-12 plug, other end terminated in 2 leads, 1 bare 3½" lg, other ins 1½" lg w/end bared and tinned ¼" lg; Fed Tele & Rad part/dwg #GA-2190-14-3; cordage covered by U. S. Army spec #71-1618A.	Power cable-----	3E7350.1-20.4.
W-3-----	CABLE ASSEMBLY, special purpose: Army-Navy Special Purpose Cable WM-46/U; 24½" lg excluding terminations; 1 end terminated in Fed Tele & Rad #GH-2196-2 plug, other end terminated in 11 leads, 10 ins 6" lg w/ends bared and tinned ½" lg, other bare 5" lg; Fed Tele & Rad part/dwg #GA-2085-14-3; cable covered by U. S. Army spec #71-3373.	Control cable-----	3E7350-1.24.3.
W-6-----	CABLE ASSEMBLY, special purpose: Army-Navy Special Purpose Cable WM-46/U; 21" lg excluding terminations; 1 end terminated in Fed Tele & Rad #GH-2196-12 plug, other end terminated in 11 leads, 10 ins 6" lg w/ends bared and tinned ½" lg, other bare 5" lg; Fed Tele & Rad part/dwg #GA-2085-2-7; cable covered by U. S. Army spec #72-3373.	Control cable-----	3E7350-1.21.
W-7-----	CABLE ASSEMBLY, special purpose: Army-Navy Special Purpose Cable WM-46/U; 23" lg excluding terminations; 1 end terminated in Fed Tele & Rad #GH-2196-12 plug, other end terminated in 11 lead, 10 ins 6" lg w/ends bared and tinned ½" lg, other bare 5" lg; Fed Tele & Rad part/dwg #GA-2085-14-8; cable covered by U. S. Army spec #71-3373.	Control cable-----	3E7350-1.23.1.
W-2-----	CABLE ASSEMBLY, special purpose: Army-Navy Special Purpose Cable WM-46/U; 23" lg excluding terminations; 1 end terminated in Fed Tele & Rad #GH-2196-12 plug, other end terminated in 11 leads, 10 ins 6" lg w/ends bared and tinned ½" lg, other bare 5" lg; Fed Tele & Rad part/dwg #GA-2085-14-9; cable covered by U. S. Army spec #71-3373.	Control cable-----	3E7350-1.23.1.

Ref symbol	Name of part and description	Function of part	Signal Corps stock No.
O-4 through O-12.	CAM: p/o Fed Tele & Rad #GA-1236-14 and #GA-1263-14 rack assem; brass; generally triangular shape w/ rounded corners and bottom side; approx 1 $\frac{1}{2}$ " lg x $\frac{3}{4}$ " wd x .475" thk; two ctb #6-32 NC-2 mtg holes on .562" mtg/c; slotted through approx ctr of thk; Fed Tele & Rad part/dwg #GC-1021-2.	Locking cams.....	4Z3185-1.
O-13.....	CAM: p/o Fed Tele & Rad #GA-1973-14 housing assem; passivated SS; tear drop shape; 3.7725" lg x 2.484" wd x 1.016" h o/a; mts by means of hole in round portion, hole 1.937" diam ctb 2.062" diam x .188" deep; 4 locking type slots in outer edge of round portion slot in arm portion .187" wd x 1.065" lg; Amphenol dwg #164-400; Fed Tele & Rad part/dwg #GB-1367-12.	Connector locking cam...	4Z3185-2.
H-1 through H-6.	CLAMP: steel; cad pl and olive drab iridited; 1 $\frac{1}{2}$ " lg x 1 $\frac{1}{4}$ " diam o/a; accom .61" diam cable; compression type clamp, has rubber gland to provide wp seal between cable and clamp, wp seal between clamp and mtg hole; Fed Tele & Rad part/dwg #GH-1966-2.	Cable clamps.....	2Z2642.305.
H-7 through H-10.	CLAMP: steel; cad pl and olive drab iridited; 1 $\frac{1}{2}$ " lg x 1 $\frac{1}{4}$ " diam o/a; accom .516" diam cable; compression type clamp has rubber gland to provide wp seal between cable and clamp, wp seal between clamp and mtg hole; Fed Tele & Rad part/dwg #GH-1965-2.	Cable clamps.....	2Z2642.300.
J-1.....	CONNECTOR, receptacle: 26 round female cont; straight; 2.047" diam excluding mtg nut and lockwasher x 1.719" lg excluding term; cylindrical, passivated SS body; molded phenolic insert; single hole mtg, 1 $\frac{1}{4}$ "-16NS-2 x .813" lg mtg bushing; has O ring wp seal on mtg bushing, supplied w/spanner type mtg nut and lockwasher; Amphenol dwg #164-10; Fed Tele & Rad part/dwg #GH-2385-12.	Receptacle, control unit connector.	2Z3082-84.
A-9, A-10...	COVER: p/o Fed Tele & Rad #GA-1973-14 housing assem; aluminum alloy, olive drab finish; rectangular plate shape w/rounded corners; 9 $\frac{1}{8}$ " lg x 2 $\frac{3}{8}$ " wd x $\frac{3}{8}$ " thk o/a; six #10-24 NC-2 tapped holes, 3 on ea longitudinal edge 3 $\frac{1}{4}$ " c to c; groove in bottom surface for O ring seal; Fed Tele & Rad part/dwg #GC-1706-12.	Junction box covers.....	2Z3351-209.
A-11.....	COVER: p/o Fed Tele & Rad #GA-1973-14 housing assem; aluminum alloy, olive drab finish; rectangular plate shape w/rounded corners; 15 $\frac{1}{4}$ " lg x 2 $\frac{3}{8}$ " wd x $\frac{3}{8}$ " thk o/a; eight #10-24 NC-2 tapped holes, 3 on ea longitudinal edge 4" c to c and 1 ctr on ea end; groove in bottom surface for O ring seal; Fed Tele & Rad part/dwg #GC-1707-14.	Junction box cover.....	2Z3351-210.
F-1.....	FUSE, cartridge: 50 amp; opens in 1 hr at 135% load, 2 min at 200% load rated continuous at 110% load; 32 v max; 1 time; glass body; ferrule term; 1 $\frac{1}{2}$ " lg x $\frac{1}{8}$ " diam o/a; term $\frac{1}{8}$ " diam x $\frac{1}{4}$ " lg; anti-vibration construction; Buss catalog #5AG50.	Overload protection, battery.	3Z2650.11.
F-2.....	FUSE, cartridge: 2 amp; opens in 1 hr at 135% load, 2 min at 200% load, rated continuous at 110% load; 250 v max; 1 time; glass body; ferrule term; 1 $\frac{1}{2}$ " lg x $\frac{1}{8}$ " diam o/a; term $\frac{1}{8}$ " diam x $\frac{1}{4}$ " lg; anti-vibration construction; Buss catalog #5AG2.	Circuit fuse.....	3Z2602.23.
O-28.....	GASKET: JW60 crude rubber compound; single hole, w/round cross sect; 10 $\frac{1}{4}$ " OD x 10" ID x $\frac{1}{4}$ " thk; p/o Fed Tele & Rad #GA-1973-14 housing assem, Linear Inc. #1866-52; Fed Tele & Rad part/dwg GS-1946-1-3.	Cover to junction box waterproof gasket.	2Z4868.785.

Ref symbol	Name of part and description	Function of part	Signal Corps stock No.
0-29, 0-30...	GASKET, JW60 crude rubber compound; single hole; cir w/round cross sect; 6 $\frac{1}{2}$ " OD x 6 $\frac{1}{2}$ " ID x $\frac{1}{8}$ " thk; p/o Fed Tele & Rad #GA-1973-14 housing assem; Linear Inc. #1866-38; Fed Tele & Rad part/dwg #GS-1946-1-2.	Covers to junction box waterproof gasket.	2Z4868.786.
H-12 through H-20.	HANDLE: steel, zinc pl and olive drab iridited; 2 $\frac{1}{16}$ " lg x 1 $\frac{1}{2}$ " wd x 7-16 h o/a; flanged grip 1 $\frac{1}{16}$ " lg x .059" wd x $\frac{1}{8}$ " h; two .154" diam mtg holes on .562" mtg/c; p/o Fed Tele & Rad #GA-1236-14 and #GA-1263-14 rack assem; Fed Tele & Rad part/dwg #GB-1029-2.	Mounting strip locking handles.	4Z4591.
E-9.....	HOLDER, fuse: block type; for single type 5AG cartridge fuse; phenolic base w/tinned brass term and fuse holder; 80 amp, 32 v DC max; 1 $\frac{1}{16}$ " lg x 1 $\frac{1}{16}$ " wd x 1 $\frac{1}{16}$ " h o/a; two .169" diam ctb mtg holes in base on 1" mtg/c; 2-slotted compression type binding post term, 1 post having solder lug term at base; phosphor bronze locking type spring fuse clips; Burndy #KF2517G1; Fed Tele & Rad part/dwg #GH-1645-2.	Fuse holder.....	3Z3282-1.1.
E-10.....	HOLDER, fuse: block type; for single type 5AG cartridge fuse; phenolic base w/silver pl beryllium copper fuse clips; 30 amp, 32 v DC max; 1 $\frac{1}{8}$ " lg x $\frac{1}{8}$ " wd x $\frac{1}{16}$ " h o/a; surface mtg, two .169" diam ctb mtg holes on .313" x .25" mtg/c; 2 solder lug term; p/o Fed Tele & Rad #GA-1973-14 housing assem; Fed Tele & Rad part/dwg #GH-1876-2.	Fuse holder.....	3Z3282-20.6.
E-13, E-14..	INSULATOR, plate: rectangular shape; type LTS-E-3 phenolic, natural; 1 $\frac{1}{2}$ " lg x $\frac{1}{16}$ " wd x .062" thk; two .169" diam mtg holes on 1" mtg/c; p/o Fed Tele & Rad #GA-1973-14 housing assem; Fed Tele & Rad part/dwg #GP-1974-2-1.	Terminal assembly mounting insulators.	3G320-165.
E-15.....	INSULATOR, plate: rectangular shape; type LTS-E-3 phenolic, natural; 1 $\frac{1}{16}$ " lg x 1 $\frac{1}{16}$ " wd x .062" thk; two .169" diam mtg holes on 1" mtg/c; p/o Fed Tele & Rad #GA-1973-14 housing assem; Fed Tele & Rad part/dwg #GP-1975-2.	Fuseholder mounting insulator.	3G320-166.
E-16.....	INSULATOR, plate: rectangular shape type LTS-E-3 phenolic, natural; 1 $\frac{1}{8}$ " lg x $\frac{5}{8}$ " wd x .062" thk; two .169" diam mtg holes on .313" x .25" mtg/c; p/o Fed Tele & Rad #GA-1973-14 housing assem; Fed Tele & Rad part/dwg #GP-1976-2.	Fuseholder mounting insulator.	3G320-167.
E-17.....	JUNCTION BOX: ten .828" diam outlet holes; aluminum alloy, olive drab finish; w/o covers; U-shaped, 15 $\frac{1}{8}$ " lg x 12 $\frac{1}{16}$ " wd x 3 $\frac{1}{8}$ " h o/a; 4 mtg bosses on top side ea/w $\frac{1}{4}$ "-20 NC-2 x $\frac{1}{16}$ " deep tapped hole on 7" x 11 $\frac{1}{4}$ " mtg/c; has slotted rails on ea side of inside of U to accommodate control unit and has provision for installing lever shaft and connector locking cam, and chassis connector; p/o Fed Tele & Rad #GA-1973-14 housing assem; Fed Tele & Rad part/dwg #GA-2099-12.	Cable terminating junction box.	2Z5687-35.
E-18.....	KNOB: round w/bar; olive drab zinc alloy; for $\frac{1}{4}$ " diam double flatted shaft; single #6-32 screw through hole in face of knob screws into axially tapped hole in end of shaft; 2 white luminous lines on bar portion; 1 $\frac{1}{16}$ " lg x $\frac{1}{8}$ " wd x 1 $\frac{1}{16}$ " h o/a; shaft hole .359" deep from bottom surface; luminous markings; Fed Tele & Rad part/dwg #GC-1690-2.	Switch knob.....	2Z5822-401.
N-1.....	LABEL: decalcomania; 1 $\frac{1}{16}$ " wd x 9 $\frac{1}{16}$ " lg x .007" thk; white print on black background; individually packed; Meyer cord type G; Fed Tele & Rad part/dwg #GD-1240-26; Sig C dwg #SC-D-40605-A.	Circuit label for Mounting MT-297/GR.	6D16777-9

Ref symbol	Name of part and description	Function of part	Signal Corps stock No.
E-7	LAMP, incandescent: Sig C Lamp IM-38; 28 v, .17-amp; bulb T-3¼ clear; 1¼" lg o/a; miniature bayonet base; C-2 fil; burn any position; Mazda catalog #313.	Pilot light	2Z5938.
W-9, W-10	LEAD, electrical: single #5 AWG, 36180 cir mil, braided cond, 360 #30 AWG strands, uninsulated, flat ribbon shape approx ⅜" wd x ¼" thk; 5½" lg excluding term; flattened tubing ends w/.257" diam hole, other w/.328" diam hole; p/o Army-Navy Mounting MT-297/GR; Fed Tele & Rad part/dwg #GB-1179-2-2.	Grounding straps	3E7998-5.9.
I-1	LIGHT, indicator: w/lens; ⅜" diam clear lens; for miniature bayonet base, T-3¼ bulb; 110 v, ¼ amp; encl shell; aluminum alloy olive drab; 2⅞" lg x 1⅜" diam o/a; ⅜" diam mtg hole required, ¼" max panel thk; vertical mtg socket, lamp replaceable from rear of panel; threaded jewel; 2 solder lug term located together on rear end of socket; built in mechanical dimmer, 2 clear up internal lenses, wp seal between bushing and panel; Dialco dwg #832210-XP4-721; Fed Tele & Rad part/dwg #GH-1964-2.	Pilot light socket	#2Z5991-184
A-1 through A-8.	MOUNT, vibration: Sig C Shock Mount M-449; sq mtg; load rating 17 to 30 lb; 2⅞" sq x 1.058" thk o/a; rubber shock cushion on either side of metal mtg plate 1½" diam x ⅜" thk; steel sleeve w/.251" diam hole, hole extends through sleeve untapped for ⅜" deep ea end, tapped on ctr ¼"-28 NF-2; four .199" diam mtg holes on 1.937" x 1.937" mtg/c; olive drab finish; marked w/M-449, load rating, and mfr name; Sig C dwg #SC-D-19169, Group 3, spec #12-121.	Shock mounts	2Z8415-449.
H-21	NUT, castellated; steel, cad pl and olive drab iridited; finished per dwg; ⅜"-32 NS-2; ⅜" thk, ⅜" OD; 4 slots ⅜" wd x ⅜" deep spaced 90 deg apart; p/o Fed Tele & Rad #GA-1973-14 housing assem; Fed Tele & Rad part/dwg #GB-1106-2.	Switch mounting nut	6L3006-325.
H-22, H-23	PIN, hinge: steel, zinc pl and olive drab iridited; .312" diam x 4½" lg; both ends chamfered ⅜" x 45 deg, one .076" diam hole through ea end of pin ⅜" from end; Fed Tele & Rad part/dwg #GB-1325-2.	Pins for hinges	6L3945-72-1.
E-4, E-12	POST, binding: compression screw type; 1½" lg x ⅜" wd x 1½" h; no mtg stud; two .169" diam ctb mtg holes on 1.062" mtg/c; brass tinned; slotted wire hole accom up to two #8 wires; hexagon compression nut w/wire cont insert, has solder lug term on side of base; Burndy #KFF17G1; Fed Tele & Rad part/dwg #GH-1647-2.	Ground terminals	3Z741-2.
E-1, E-3	POST, binding: compression screw type; 1½" lg x ⅜" wd x 1½" h; no mtg stud; two .169" diam ctb mtg holes on 1" mtg/c; brass stud, tinned; w/phenolic mtg base; slotted wire hole accom up to two #8 wires; hexagon compression nut w/wire cont insert, has solder lug term on side of base; Burndy #KF1S17G1; Fed Tele & Rad part/dwg #GH-1646-2.	Cable terminals	3Z741-2.1.
O-1	RELAY, armature: 3B; cont rated 100 ma at 150 v; palladium cont; single winding, 12.6 v DC nominal, pull in v 8 v DC, max oper v 16 v DC, 144 ohms, ins; solder lug term on coil and cont; 2⅞" lg x 1⅜" wd x 2⅞" h max o/a; two .221" diam holes on 1½" mtg/c; fast acting; Adv Elec #A8775-1Y, Dunco #181XXC100; Fed Tele & Rad part/dwg #GH1648-2.	Control relay	2Z7599A-251.

Ref symbol	Name of part and description	Function of part	Signal Corps stock No.
K-1.....	RELAY, solenoid: SPST, normally open; cont rated 50 amp DC at 28 v; silver cont; single winding, operates on 10 v DC, continuously withstands 16 v DC, 27.5 ohms resistance, ins, two #10-32 NF-2 stud term on cont; two #6-32 NC-2 stud term on coil; 3¼" lg x 1¼" wd x 2½" max h; 2 clearance holes for #10-24 screws on 2¼" mtg/c; fast acting; mp and fp; #101EXX107 or Adv Elec #B5-12Y, or Leach Relay #7064-91B; Fed Tele & Rad part/dwg #GH-1679-12.	Power relay.....	2Z7586-193.
R-3.....	RESISTOR, fixed: WW; 28 ohms ± 5%; 12 w; JAN type RW32G280.	Voltage-dropping resistor for K-1.	3RW15002.
R-1, R-2....	RESISTOR, fixed: WW; 140 ohms ± 5%; 8 w; JAN type RW29G141.	Voltage-dropping resistors for O-1.	3RW19216.
H-24 through H-27.	SCREW, cap: slotted hex head drive; hex head, finished per dwg; steel, normal hardness, cad pl and olive drab iridited; ¼"-20 NC-2; ¾" lg; thd entire lg; slot ⅛" wd x ⅜" deep; Fed Tele & Rad part/dwg #GB-1110-2-1.	Rack-to-bracket mounting screws.	6L4904-20-6.
H-28 through H-37.	SCREW, cap: slot drive; hex head semi-finished; steel, cad pl and olive drab iridited; ⅝"-24 NF-2; 1¼" lg; thd 1⅞" of lg; slot in head ⅛" wd x ⅜" deep; Fed Tele & Rad part/dwg #GB-2065-2-1.	Equipment installation screws.	6L4905-205.
H-38 through H-47.	SCREW, cap: slot drive; hex head, semifinished; steel, cad pl and olive drab iridited; ⅝"-24 NF-2; ¾" lg; thd ⅝" of lg; slot in head ⅛" wd x ⅜" deep; Fed Tele & Rad part/dwg #GB-2065-2-2.	Equipment installation screws.	6L4905-125.
H-48 through H-67.	SCREW, captive: slot drive; finished fillister Bind H per dwg; cold finished steel, cad pl and olive drab iridited; #10-24 NC-2; .937" lg; thd portion .281" lg; head ⅛" diam x ⅛" thk; p/o Fed Tele & Rad #GA-1973-14 housing assem; Fed Tele & Rad part/dwg #GB-1772-2.	Junction box cover mounting screws.	6L4770-15.196.
H-68 through H-76.	SCREW, dowel: p/o Fed Tele & Rad #GA-1236-14 and #GA-1263-14 rack assem; cold finished steel, zinc pl and olive drab iridited; .625" lg x .278" diam o/a; thd portion #6-32 NC-2 x ⅞" lg; slot drive, slot ⅜" wd x ⅛" deep; Fed Tele & Rad part/dwg #GB-2520-2-1.	Handle, cam, and locking strip assembly screws.	6L5014-10.
H-77 through H-85.	SCREW, dowel: p/o Fed Tele & Rad #GA-2136-14 and #GA-1263-14 rack assem; cold finished steel, zinc pl and olive drab iridited; .42" lg x .278" diam o/a; thd portion #6-32 NC-2 x ⅞" lg; slot drive, slot ⅜" wd x ⅛" deep; Fed Tele & Rad part/dwg #GB-2520-2-2.	Handle and cam assembly screws.	6L5014-6-1.
H-86 through H-89.	SCREW, thumb: wing head; steel, cad pl and olive drab iridited; ⅝"-18 NC-2; 1¼" lg; thd entire lg; flat point; head ⅞" wd x ⅞" h; hole through thd portion .076" diam, ⅜" from end; Fed Tele & Rad part/dwg #GH-1201-2.	Stand assembly (hinged) locking screws.	6L17504-4.
O-14.....	SHAFT ASSEMBLY: p/o Fed Tele & Rad GA-1973-14 housing assem; c/o 1 Fed Tele & Rad #GB-1773-2 shaft, 1 #GC-1316-2 handle, and 1 #GC-1796-2 arm; 10¼" lg x 1¼" wd x 2½" h approx o/a; mts by means of shaft; knob on 1 end of shaft, arm on other end, shaft flush at both ends; Fed Tele & Rad part/dwg #GA-1774-2.	Connector locking cam operating shaft.	2Z8201.69.
O-15 through O-18.	SLEEVE, spacer: p/o Fed Tele & Rad #GA-1236-14 and #GA-1263-14 rack assem; steel, zinc pl and olive drab iridited; tubr shape; ½" OD x .282" ID x .678" lg; mts by means of ID; Fed Tele & Rad part/dwg #GB-1232-2.	Rack-to-bracket mounting spacers.	2Z8552-71.

Ref symbol	Name of part and description	Function of part	Signal Corps stock No.
O-19 through O-27.	SPRING: helical extension type; .04" diam music wire, zinc pl and olive drab iridited; 1.86" lg x .375" diam; 27½ turns, close wound; parallel hook term; term bent on .1375" rad on 1.51125" mtg/c; heat treated after plating; p/o Fed Tele & Rad #GA-1236-14 and #GA-1263-14 rack assem; Fed Tele & Rad part/dwg #GB-1104-2.	Locking strip tension springs.	2Z8879-323.
S-1.....	SWITCH, rotary: 2 pole, 3 position; single sect; silver pl brass cont; ceramic wafer; 1½" lg x 1½" wd x 1" deep; locking action; solder lug term; single hole mtg, bushing ¾"-32 x ⅞" lg, shaft ¼" diam x ⅞" lg w/double flats and axially tapped hole #6-32 NC-2 x ¼" deep, flush mtg; wj seal in bushing and in mtg flange; Oak type FC or equal; Fed tele & Rad prt/dwg #GH-1641-2.	Control switch.....	3Z9825-62.516.
E-8, E-11....	TERMINAL, lug: ring type; copper, hot tin dipped; for #8 AWG wire; 1½" lg x ⅞" wd x ⅞" thk o/a w/⅞" diam stud hole; solder connects to wire; marked 70A; Atlas Products #W-70-A; Fed Tele & Rad part/dwg #GH-2025-2.	Battery cable terminals..	3Z12073-53.
H-90, H-91..	WASHER, flat: neoprene; round, 1½" OD x ⅞" ID x ⅞" thk; 50-60 durometer hardness; Fed Tele & Rad part/dwg GR-2149-2.	Unused cable connector mounting shock-absorbing washers.	6L54006-21.

3. Identification Table of Parts for Case CY-590/GRC

Ref symbol	Name of part and description	Function of part	Signal Corps stock No.
	ARMY-NAVY CASE CY-590/GRC: battery; aluminum, olive drab finish; 15½" lg x 7¼" wd x 5½" h o/a; removable front panel has metal battery holder which slides into case; immersion and fungus resistant; 2 lock strikes on upper, 2 spring catches on lower edge of ea side; 4 positioning studs on bottom side, 4 positioning holes on top side of case; p/o Army-Navy Radio Set AN/PRC-16; Fed Tele & Rad dwg #GA-2415-14; U. S. Army spec #71-3331. Technical Manual (TM 11-284)..... Technical Manual (TM 11-286)..... Technical Manual (TM 11-291).....		2Z1891-590. (Order through AGO channels.) (Order through AGO channels.) (Order through AGO channels.)
H-5 through H-9	CATCH, fastener: p/o Army-Navy AF Amplifier AM-65/GRC and Army-Navy Case CY- 590/ GRC; c/o back plate, lever, 2 ea outside and inside links, 2 pins, and 2 springs; steel, zinc pl and olive drab iridited; 2½" lg x 1½" wd x ¼" deep in locked position; two .144" diam mtg holes on back plate, .437" c to c; Fed Tele & Rad part/dwg #SC-D-20648; Sig C dwg #SC-D-20648.	H-5 through H-8: Mounting catches. H-9: Battery tray fastener catch.	6Z1747-36.

Ref symbol	Name of part and description	Function of part	Signal Corps stock No.
P-6.....	CONNECTOR, plug: 8 round male cont; straight; $\frac{5}{16}$ " lg x $1\frac{1}{2}$ " diam o/a; round black phenolic body; mts by means of keyed ctr locating pin and cont; 2 square keys on ctr locating pin 135 deg apart; Fed Tele & Rad part/dwg #ES-A-83778; Sig C dwg #ES-A-83778.	B battery connector.....	2Z3028-56.
P-1 through P-5	CONNECTOR, plug: 8 round male cont; straight; $\frac{5}{16}$ " lg x $1\frac{1}{2}$ " diam o/a; round black phenolic body; mts by means of keyed ctr locating pin and cont; 2 rounded keys on ctr locating pin 90 deg apart; Fed Tele & Rad part/dwg #ES-A-83777; Sig C dwg #ES-A-83777.	A battery connectors.....	2Z3028-57.
J-2.....	CONNECTOR, receptacle: 9 round female cont; cont rated 10 amp at 800 v AC; Amphenol dwg #164.3; Fed Tele & Rad part/dwg #GH-2082-12.	Generator input connector.....	2Z3070-49.
J-1.....	CONNECTOR, receptacle: 14 round female cont; cont rated 10 amp at 800 v AC; Amphenol dwg #164-5; Fed Tele & Rad part/dwg #GH-2083-12.	Output connector.....	2Z3075-26.
H-1 through H-4.	FASTENER, Dzus: die cast zinc and steel, olive drab finish; $1\frac{1}{2}$ " lg x $1\frac{1}{2}$ " wd x $\frac{1}{8}$ " thk o/a; mts by shaft through $\frac{1}{8}$ " diam clearance hole; preloaded spring pressure, unlocked approx 32 lb, locked 45 lb; Dzus dwg #X-486; Fed Tele & Rad part/dwg #GA-2178-2.	Panel-to-case fasteners.....	6Z3809-27.
O-5.....	GASKET: Buna N or neoprene; single hole; rectangular, 6.6" lg x 4.85" wd x .187" thk; hole 6.12" lg x 4.37" wd; Fed Tele & Rad part/dwg #GR-1443-12-5.	Panel-to-case waterproofed gasket...	2Z4867-691.
H-16 through H-19.	INSERT, threaded: steel, cad pl and olive drab iridited; generally rectangular w/2 rounded corners; $2\frac{1}{2}$ " lg x $1\frac{1}{2}$ " wd x .1196" thk; two #6-32 NC-2 tapped holes on .531" ctr; Fed Tele & Rad part/dwg #GB-1171-2.	Strike mounting screws, retaining inserts (nuts).	2Z5400-52.
H-20 through H-23.	INSERT, threaded: steel, cad pl and olive drab iridited; generally rectangular w/1 rounded end; $1\frac{1}{2}$ " lg x $\frac{3}{4}$ " wd x .1196" thk; two #6-32 NC-2 tapped holes on .437" ctr; Fed Tele & Rad part/dwg #GB-1172-2.	Catch mounting screws, retaining inserts (nuts).	2Z5400-56.
E-1, E-2.	INSULATOR, standoff: round post shape; natural or black grade LTS E-4 phenolic w/electro tin pl brass term lug, and cad pl and clear iridited hex brass mtg base and stud; $1\frac{1}{8}$ " lg o/a; 600 v RMS breakdown; $\frac{1}{8}$ " diam o/a; single #6-32 NC-2 x $\frac{1}{4}$ " lg mtg stud; Fed Tele & Rad part/dwg #GN-2198-2.	Wiring terminal posts.....	3G350-106.
E-3.....	KNOB: round; w/bar; olive drab zinc alloy: for $\frac{1}{4}$ " diam double flatted shaft; single #6-32 screw through hole in face of knob screws into tapped axial hole in end of shaft; 2 white luminous lines on bar portion; $1\frac{1}{8}$ " lg x $\frac{3}{8}$ " wd x $1\frac{1}{2}$ " h o/a; shaft hole .359" deep from bottom surface; luminous markings; Fed Tele & Rad part/dwg #GC-1690-2.	Switch knob.....	2Z5822-401.
N-1.....	LABEL: decalomania; $4\frac{1}{4}$ " lg x $2\frac{3}{4}$ " wd x .007" thk; white print on black background; individually packed; Meyer cord type G; Fed Tele & Rad part/dwg #GD-2424-12; Sig C dwg #SC-C-40596-A.	Circuit label.....	6D16777-11.

Ref symbol	Name of part and description	Function of part	Signal Corps stock No.
H-10.....	NUT, castellated: steel, cad pl and olive drab iridited; finished per dwg; $\frac{3}{8}$ "-32 NS-2; $\frac{1}{8}$ " thk, $\frac{1}{16}$ " OD; 4 slots $\frac{1}{2}$ " wd x $\frac{1}{4}$ " deep spaced 90 deg apart; Fed Tele & Rad part/dwg #GB-1106-2.	Switch mounting nut.....	6L3006-32S.
R-2.....	RESISTOR, fixed: WW; 39 ohms $\pm 10\%$; $\frac{1}{2}$ w; JAN type RU3BR39K.	Set 2 filament-dropping resistor.....	3RU02400.
R-3.....	RESISTOR, fixed: 10 ohms $\pm 10\%$; 2 w; IRC #BW-2.	Set 2 relay-dropping resistor.....	3Z6001-146.
R-1.....	RESISTOR, fixed: WW; 1.2 ohms $\pm 10\%$; 2 w; IRC #BW-2.	Set 1 filament-dropping resistor.....	3Z5991B2.
0-1 through 0-4.	SPRING: loop type; strike for Dzus fastener; .08" diam olive drab iridited music wire; $1\frac{1}{2}$ " lg x $\frac{1}{2}$ " wd x .08" thk o/a; 2 ends turned perpendicular at 90 deg angle to straight portion on $\frac{1}{8}$ " rad; Dzus dwg #X-487; Fed Tele & Rad part/dwg #GB-2414-2.	Fastener strikes.....	6Z8377-10.
H-11 through H-14.	STRIKE, fastener: steel, cad pl and olive drab iridited; $\frac{3}{8}$ " lg x $\frac{1}{16}$ " wd x $1\frac{1}{2}$ " h o/a; two .169" diam mtg holes, .531" c to c; 1 edge shaped into hook on $\frac{1}{16}$ " inside rad x $1\frac{1}{2}$ " wd to provide catch action; Fed Tele & Rad part/dwg #GB-3035-2.	Mounting fastener strikes.....	6Z8569-4.
H-15.....	STRIKE, fastener: steel, electro tin pl; rectangular; 4" lg x 1" wd x $\frac{1}{2}$ " h o/a; four .138" diam mtg holes, 2 on ea end on $\frac{1}{16}$ " x $3\frac{3}{8}$ " mtg/c; ctr portion raised and has five $\frac{1}{8}$ " x $\frac{1}{16}$ " slots; Fed Tele & Rad part/dwg #GB-1762-2.	Battery tray fastener strike.....	6Z8569-6.
S-1.....	SWITCH, rotary: 2 pole, 3 position; single sect; silver pl brass cont; ceramic wafer; $1\frac{1}{2}$ " lg x $1\frac{1}{2}$ " wd x $2\frac{1}{2}$ " deep from mtg surface; non-shorting cont; locking action; solder lug term; single hole mtg, $\frac{1}{4}$ "-32 x $\frac{1}{4}$ " lg mtg bushing, shaft $\frac{1}{4}$ " diam x $1\frac{1}{16}$ " lg from mtg surface; Oak #HIC; Fed Tele & Rad part/dwg #GH-2097-2.	OFF-ON REMOTE CONTROL switch.	3Z9825-62.531.
	ARMY-NAVY CONTROL BOX C-375/VRC: interphone and radio push-to-talk operation.	Remote control for interphone amplifier and radio sets.	2C666-375.
	BOARD, terminal: general purpose; 2 solder lug term, copper silver pl; $1\frac{1}{16}$ " lg x $2\frac{1}{2}$ " h x $\frac{1}{16}$ " thk o/a.	Junction point for interunit connections.	3Z770-2.49.
H-1, H-2.	CLAMP: used to hold cable and wp cable entrance; wp.	Secure interconnecting Special Purpose Cables WM-46/U.	2Z2642.241.
J-1, J-2.	CONNECTOR, receptacle: Army-Navy Receptacle Connector U-79/U; 10 cont, pol; straight.	Connectors for audio input, output, and control circuits.	2Z7250-79.
A-2.....	COVER.....	Used to waterproof Jack JK-33-C and Jack JK-34-C.	2Z3352.224.
J-3, J-4.	JACK: Sig C Jack JK-33-C: for 3 cond plug, .2065" diam x 1.098" lg.	Connect microphone to audio input circuit.	2Z5533C.
J-5, J-6.	JACK: Sig C Jack JK-34-C: for 2 cond plug, .250" diam x $1\frac{1}{2}$ " lg.	Connect headset to output of audio circuit.	2Z5534C.
	KNOB: bar; aluminum, olive drab finish; for $\frac{1}{4}$ " diam double flattened shaft; luminous ctr line; $1\frac{1}{16}$ " lg x $\frac{1}{2}$ " wd x $1\frac{1}{2}$ " thk.	For shaft of volume controls.....	2Z5821-147.
	KNOB: bar; aluminum, olive drab finish; for $\frac{1}{4}$ " diam double flattened shaft; luminous ctr line; $1\frac{1}{16}$ " lg x $\frac{1}{2}$ " wd x $1\frac{1}{2}$ " thk.	For shaft of switch S-2 (RADIO TRANS).	2Z5821-148.
	KNOB: bar; aluminum, olive drab finish; for $\frac{1}{4}$ " diam double flattened shaft; luminous ctr line; $2\frac{1}{16}$ " lg x $\frac{1}{2}$ " wd x $\frac{1}{16}$ " thk.	For shaft of selector switch S-1.....	2Z5821-149.

Ref symbol	Name of part and description	Function of part	Signal Corps stock No.
R-1, R-2..	RESISTOR, variable: comp; 10,000 ohms 10%; 2.25 w.	Volume controls for audio output...	3Z7410-149.
S-2.....	SWITCH, rotary: 2 pole, 3 position.....	Selects interphone amplifier and radio sets for transmitting.	3Z9825-34.2.
S-1.....	SWITCH, rotary: 3 pole, 3 position.....	Selects interphone amplifier and radio sets for monitoring and trans- mitting.	3Z9825-34.1.

APPENDIX III

RELATED RADIO SETS

1. Basis of Relationship (fig 82)

The major components of the radio sets discussed in this manual are common to numerous other sets which utilize common or over-lapping frequency ranges. The frequency spectrum chart (fig. 2) indicates how the sets are related so far as frequency coverage is concerned. Physical sim-


ilarities among the sets are indicated in the comparison chart included below.

2. Comparison Chart

The following chart lists the components of the radio sets discussed in this manual and the components of related radio sets. Analysis of the chart will reveal the high degree of similarity which exists among the sets.

Components	Radio Sets																Intercommu- nication Set AN/UIC-1	Modification Kit MX-888/GR
	AN/GRC-3	AN/GRC-5	AN/GRC-7	AN/GRC-4	AN/GRC-6	AN/GRC-8	AN/VRC-8	AN/VRC-9	AN/VRC-10	AN/VRC-13	AN/VRC-14	AN/VRC-15	AN/VRQ-1	AN/VRQ-2	AN/VRQ-3	AN/VRC-7		
Case CY-684/GR.....	1	1	1	1	1	1	1	1	1	1	1	1	2	2	2	1		
Case CY-590/GR.....																	1	
Mounting MT-297/GR.....	1	1	1	1	1	1				1	1	1						1
Mounting MT-298/GR.....													1	1	1			
Mounting MT-299/GR.....									1	1	1							
Mounting MT-300/GR.....																1		1
Mounting MT-652/GR.....																	1	1
Mounting MT-673/UR.....																	1	
Receiver-Transmitter RT-66/GRC.....	1			1			1			1			2					
Receiver-Transmitter RT-67/GRC.....		1			1			1			1			2				
Receiver-Transmitter RT-68/GRC.....			1			1			1			1			2			
Receiver-Transmitter RT-70/GRC.....	1	1	1	1	1	1										1	1	
A F Amplifier AM-65/GRC.....	1	1	1	1	1	1				1	1	1				1		1
Power Supply PP-281/GRC.....	2	2	2	1	1	1				1	1	1				1		1
or Power Supply PP-282/GRC.....																		
Power Supply PP-448/GR.....																	1	
Radio Receiver R-108/GRC.....	1																	
Radio Receiver R-109/GRC.....			1															
Radio Receiver R-110/GRC.....																		
Power Supply PP-109/GR.....	1	1	1	1	1	1	1	1	1	1	1	1	2	2	2			
or Power Supply PP-112/GR.....																		
Control Group AN/GRA-6.....	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1		
Control C-435/GRC.....	1	1	1	1	1	1								1	1	1		
Control Box C-375/VRC.....	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1		2
Mast Base AB-15/GR.....	2	2	2	2	2	2	1	1	1	1	1	1	2	2	2	1		
Mast Section MS-116-A.....	2	2		2	2		2	2		2	2		4	4				
Mast Section MS-117-A.....	2	2	2	2	2	2	2	2	2	2	2	2	4	4	4			
Mast Section MS-118-A.....	2	2		2	2		2	2		2	2		4	4				
Mast Section AB-22/GR.....	2	2	2	2	2	2										2	2	1
Mast Section AB-23/GR.....																		3
Mast Section AB-24/GR.....	2	2	4	2	2	4			2			2			4	2	2	1
Generator G-8/GRC.....																		1
Handset H-33/PT.....																	1	
Special Purpose Cable Assembly CX-1211/U.....	1	1	1	1	1	1	1	1	1	1	1	1	2	2	2			
Special Purpose Cable Assembly CX-1213/U.....	1	1	1	1	1	1											1	
Special Purpose Cable WM-46/U.....	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1			
RF Cable Assembly CG-568/U.....	1			1			1			1			2					
RF Cable Assembly CG-530/U.....	1	2	2	1	2	2		1	1		1	1		2	2	1		
Power Cable Assembly CX-1209/U.....																	1	1
Power Cable Assembly CX-1210/U.....																		1
Bag CW-187/GR.....																		1
Bag CW-188/GR.....																		1
Adapter UG-273/U.....	2	2	2	2	2	2	1	1	1	1	1	1	2	2	2			1
Installation kit.....	1	1	1	1	1	1	1	1	1				2	2	2			
Wire W-142.....	1	1	1															
Adapter UG-306/U.....	2	2	2	2	2	2				1	1	1						
Bag CW-206/GR.....	1	1	1	1	1	1				1	1	1						
Connector and bond nut (Appl.).....	1	1	1	1	1	1				1	1	1						1

RESISTOR COLOR CODES

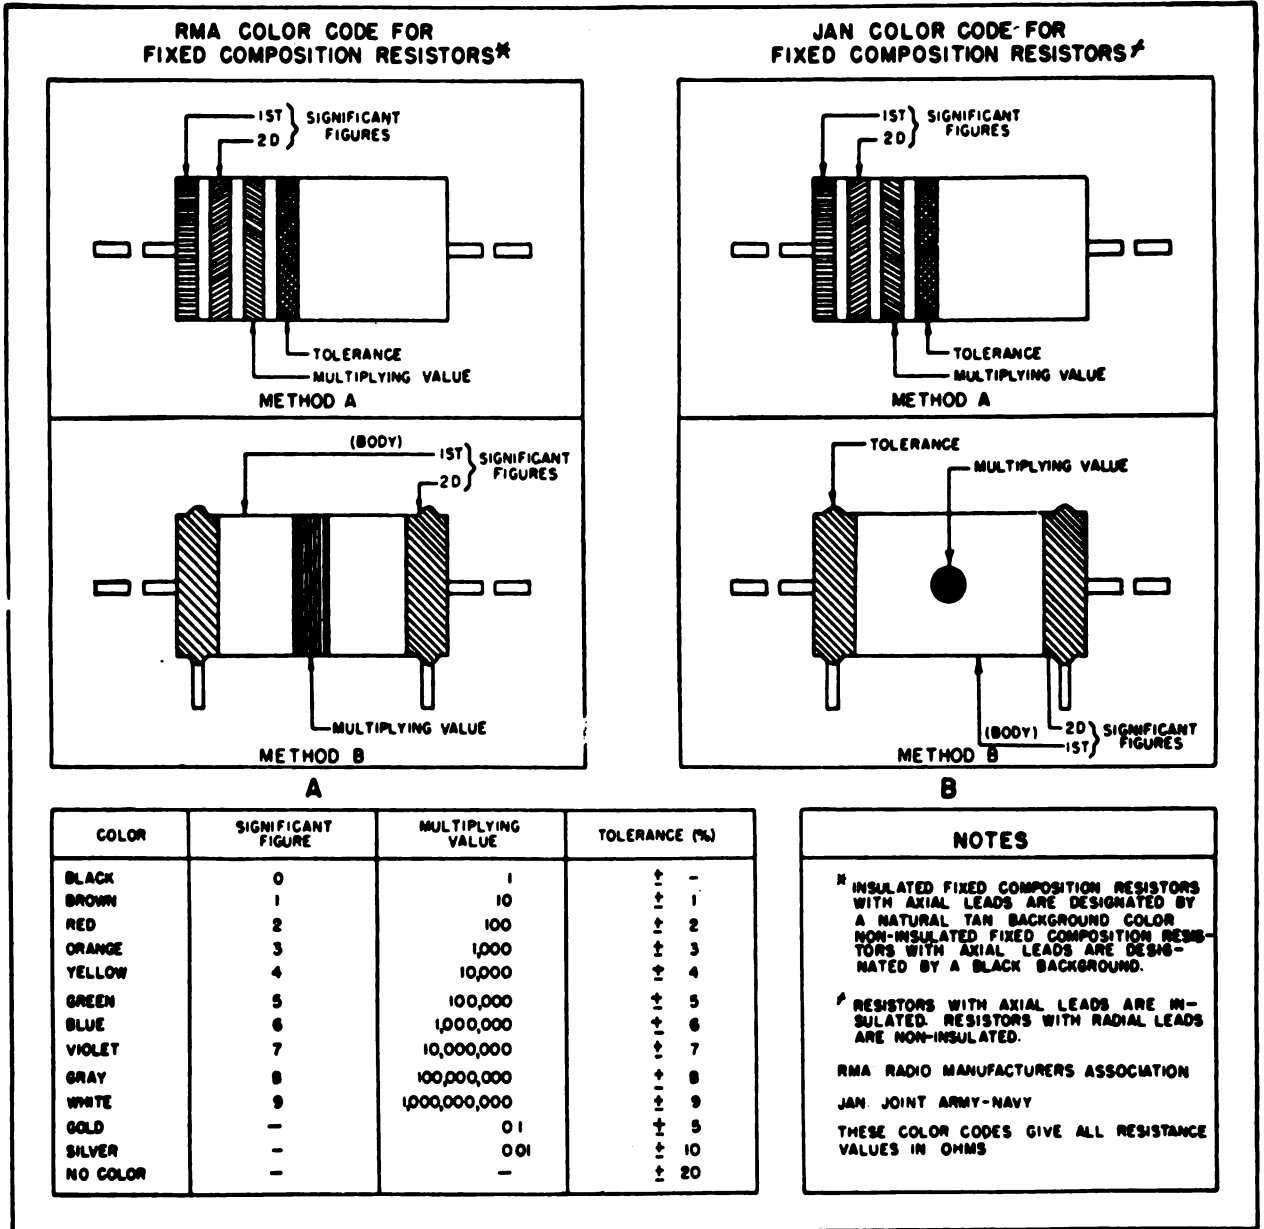

TL32454S


Figure 87. Resistor color code.

CAPACITOR COLOR CODES


RMA 3-4-5-6-DOT COLOR CODES FOR MICA-DIELECTRIC CAPACITORS

JAN 6-DOT COLOR CODES FOR:


PAPER-DIELECTRIC CAPACITORS *

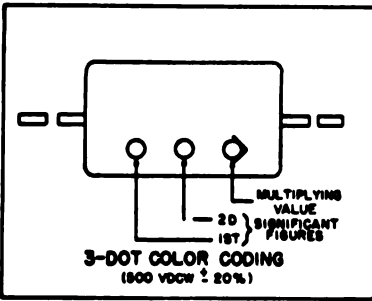


A

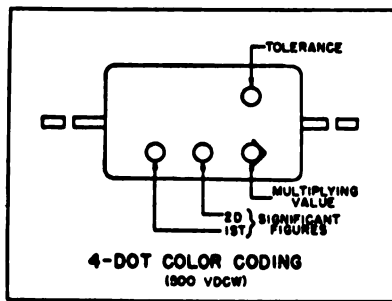


B

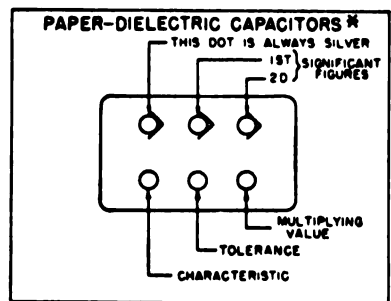


F

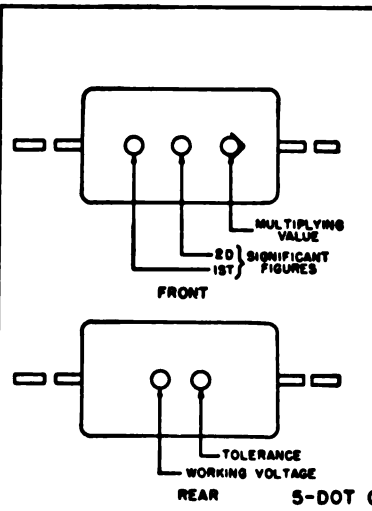


D

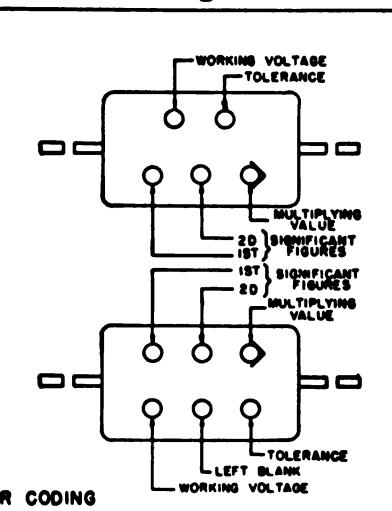

E

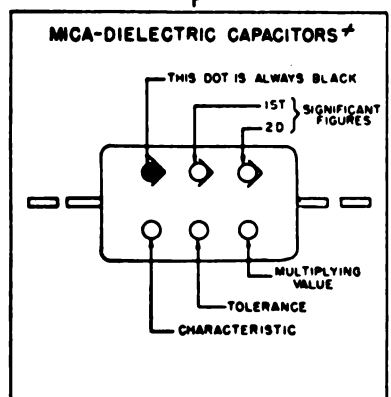

G

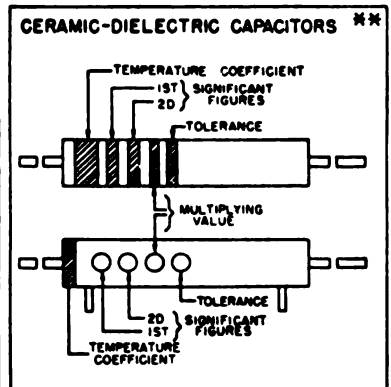

H

COLOR	SIGNIFICANT FIGURE	MULTIPLYING VALUE			RMA VOLTAGE RATINGS
		RMA MICA-AND CERAMIC-DIELECTRIC	JAN MICA-AND PAPER-DIELECTRIC	JAN CERAMIC-DIELECTRIC	
BLACK	0	1	1	1	-
BROWN	1	10	10	10	100
RED	2	100	100	100	500
ORANGE	3	1,000	1,000	1,000	300
YELLOW	4	10,000	10,000	10,000	400
GREEN	5	100,000	10,000	100,000	500
BLUE	6	1,000,000	100,000	1,000,000	500
VIOLET	7	10,000,000	10,000,000	10,000,000	700
GRAY	8	100,000,000	100,000,000	100,000,000	800
WHITE	9	1,000,000,000	1,000,000,000	1,000,000,000	800
GOLD	-	0.1	0.1	0.1	1000
SILVER	-	0.01	0.01	0.01	2000
NO COLOR	-				500

NOTES

* THE SILVER DOT IDENTIFIES THIS MARKING FOR WORKING VOLTAGES SEE JAN TYPE DESIGNATION CODE.

† THE BLACK DOT IDENTIFIES THIS MARKING FOR WORKING VOLTAGES SEE JAN TYPE DESIGNATION CODE.

** CAPACITORS MARKED WITH THIS CODE HAVE A VOLTAGE RATING OF 500 VDCW. EITHER THE BAND OR DOT CODE MAY BE USED FOR BOTH INSULATED (AXIAL-LEAD) OR UNINSULATED (RADIAL-LEAD) CAPACITORS.

RMA: RADIO MANUFACTURERS ASSOCIATION
 JAN: JOINT ARMY-NAVY

THESE COLOR CODES GIVE CAPACITANCES IN MICROMICROFARADS.

TL 364939

Figure 88. Capacitor color code.

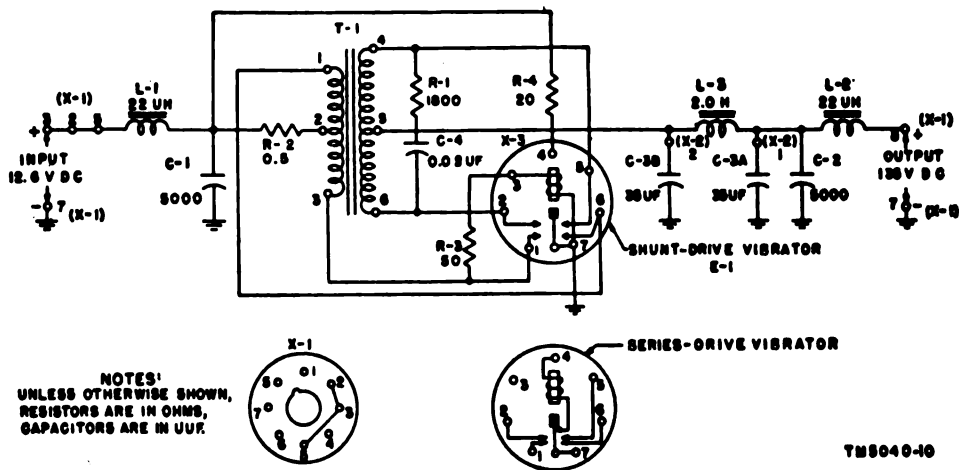


Figure 69. Power Supply PP-881/GRC, schematic diagram.

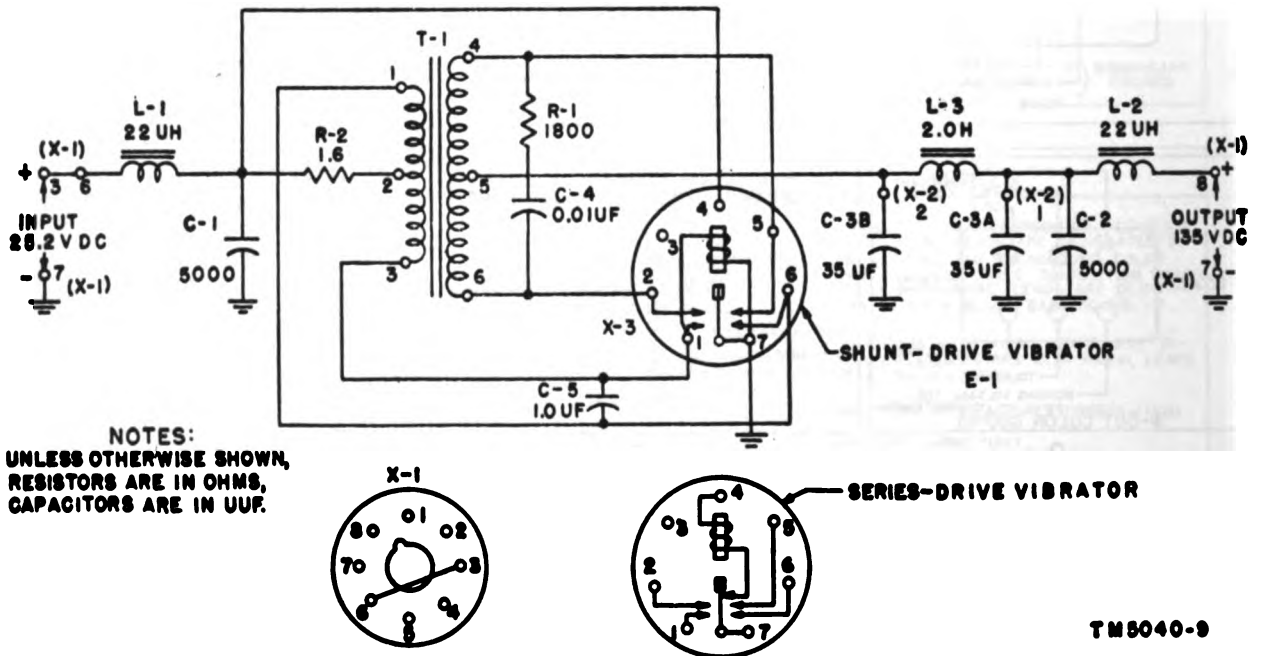


Figure 70. Power Supply PP-888/GRC, schematic diagram.

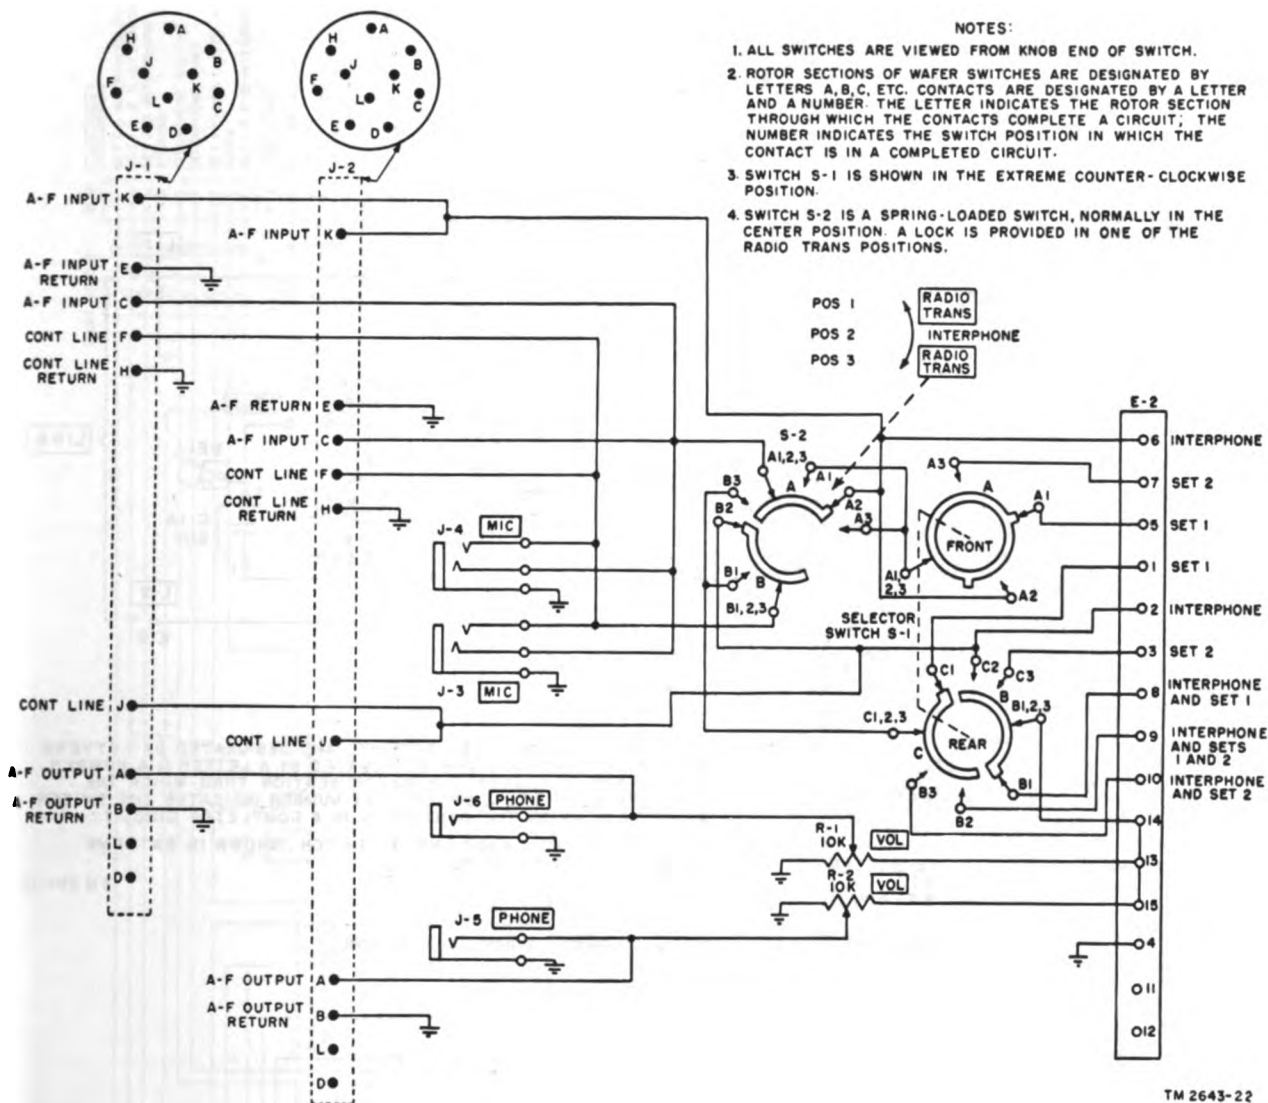


Figure 71. Control Box C-375/VRC, schematic diagram.






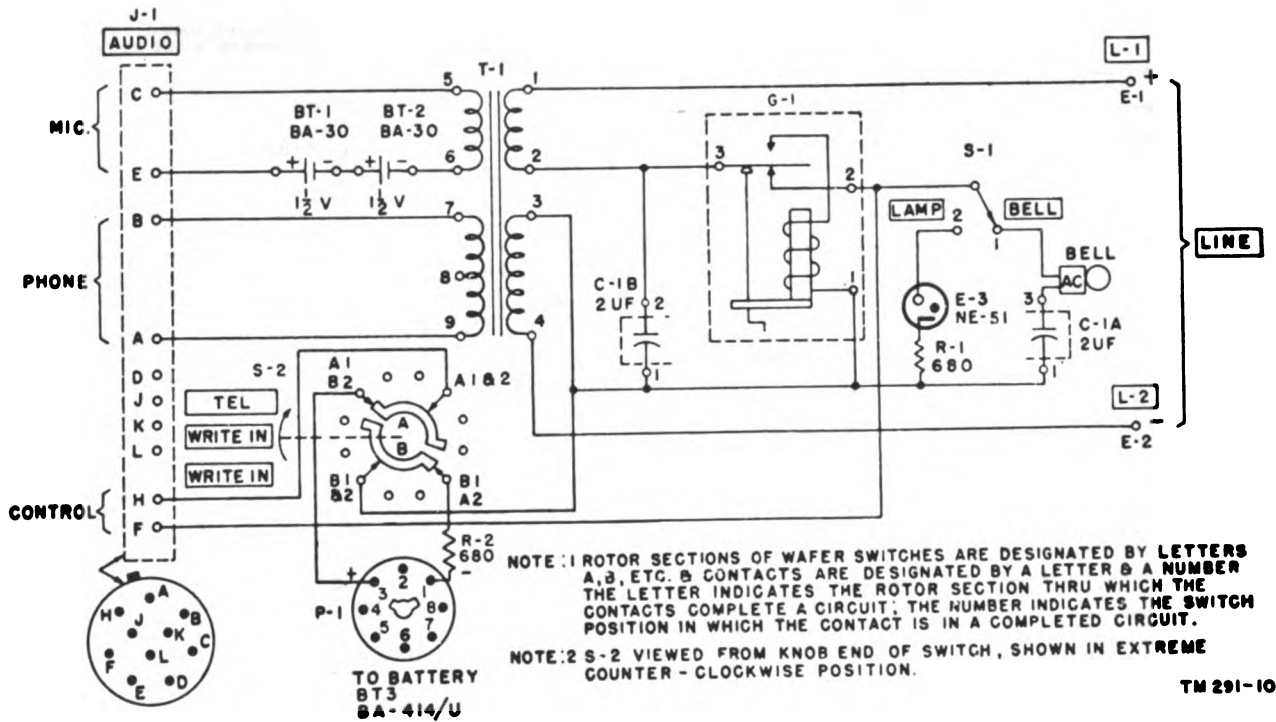


Figure 78. Remote Control C-433/GRC, schematic diagram.

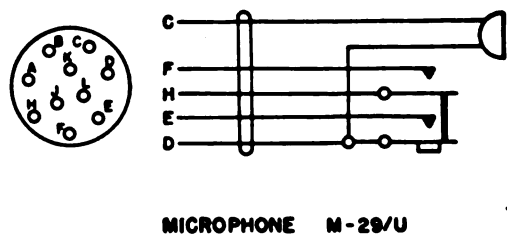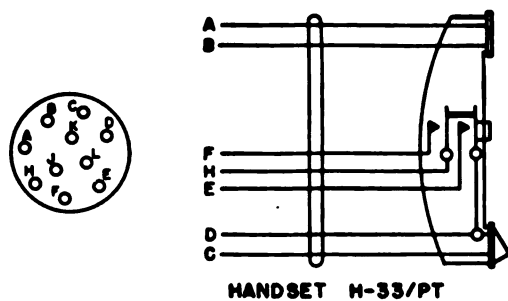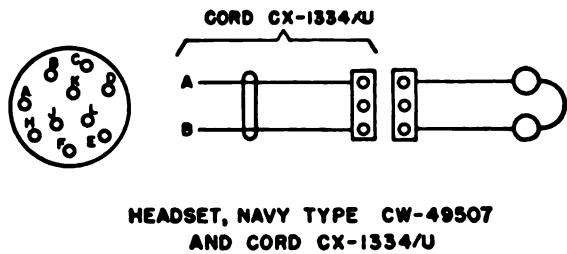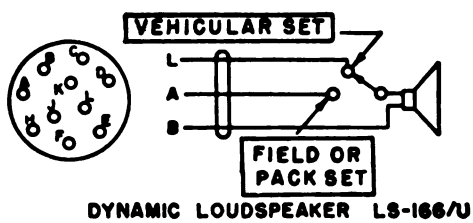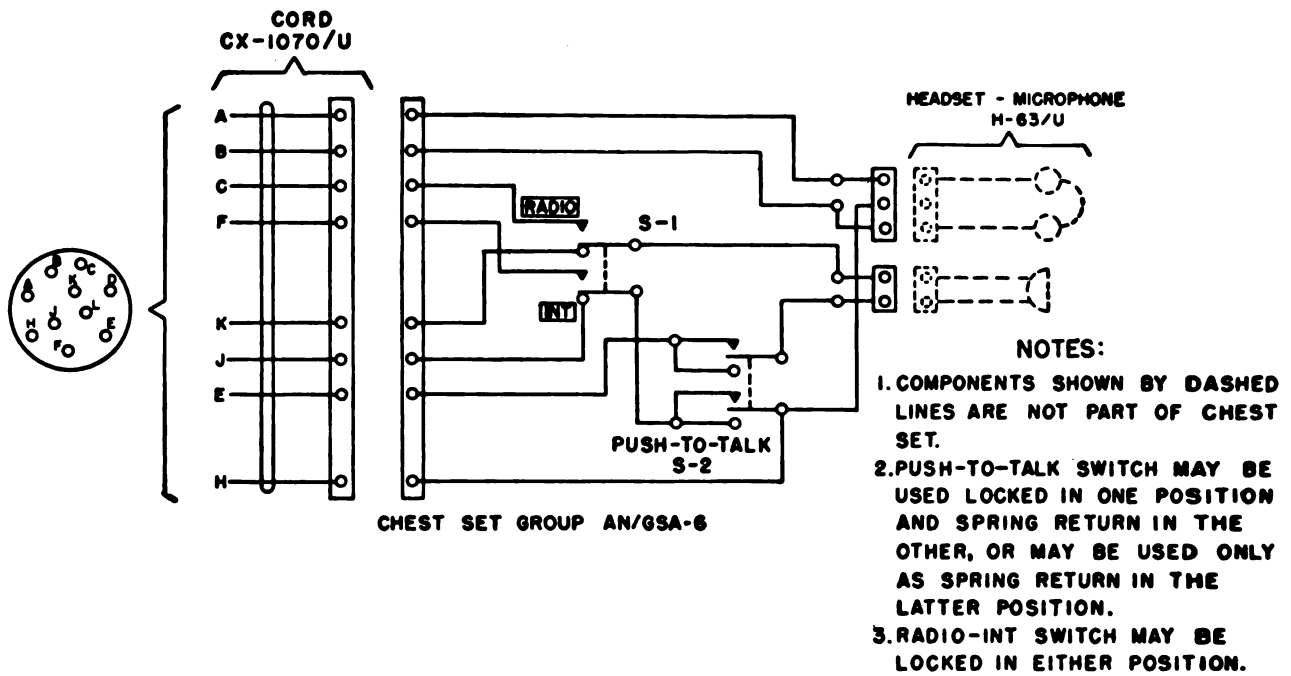


TM 291-9

Figure 75. Audio accessories, schematic diagram.

INDEX

	Paragraph	Page		Paragraph	Page
Additional equipment required.....	8	5	Control Group AN/GRA-6:		
AF Amplifier AM-65/GRC. (See Interphone amplifier.)			Description.....	15	11
Antenna mast sections.....	30	27	Equipment installation.....	37	31
Antenna tuning:			Operation.....	59	47
Operational check.....	36	31	Replacement of parts.....	93	76
Set 1.....	35	30	Description, general system.....	9	6
Audio accessories:			Duplex telephone facilities.....	43	36
Description.....	18	12	Dynamic Loudspeaker LS-166/U.....	18d	14
Storing.....	27	25	Equipment performance checklist.....	81c	65
Vehicular installation.....	34	30	Forms and records.....	3	1
Auxiliary equipment, general.....	94	82	Generator G-8/GRC:		
Battery Case CY-590/GRC, operation with.....	98	86	Operation of Set 1.....	99	87
Block diagram, basic system.....	63	50	Operation of Set 1 with battery case...	98	86
Charts:			Handset H-33/PT, description of.....	15d, 18e	12, 14
Continuity for interphone box.....	84	69	Handset Microphone H-63/U.....	18c	14
Interphone amplifier controls and instruments.....	46	37	Headset Navy Type CW-49507 and Headset Cord CX-1334/U.....	18g	14
Interphone box controls and instruments.....	49	41	Identification table of parts.....	app. II	92
Local Control C-434/GRC, controls and instruments.....	50	43	Interconnections.....	33	28
Mounting controls and instruments.....	45	36	Interphone amplifier:		
Remote Control C-433/GRC, controls and instruments.....	51	44	Continuity chart.....	84b	60
Set 1 channel selection.....	10c	7	Controls and instruments.....	46	37
Set 1 filament circuit trouble localization.....	87	72	Description.....	12	9
Set 1 power supply controls and instruments.....	47	37	Equipment installation details.....	31	27
Set 1 receiver-transmitter.....	10	7	Operational facilities.....	41	36
Set 1 receiver-transmitter controls and instruments.....	48	39	Power distribution and push-to-talk control circuits.....	67	51
Substitute audio accessories.....	18a	17	Replacement of parts.....	90	72
Chest Set Group AN/GSA-6.....	18b	12	Trouble shooting, localization.....	85	70
Controls and instruments:			Unit theory.....	79	62
Chest Set Group AN/GSA-6.....	52	44	Interphone box. (See Control Box C-375/VRC.)		
Interphone amplifier.....	46	37	Local Control C-434/GRC:		
Interphone box.....	49	41	Controls and instruments.....	50	43
Introduction.....	44	36	General.....	15b	11
Local Control C-434/GRC.....	50	43	Localizing procedures:		
Mounting.....	45	36	Cables.....	86	71
Remote Control C-433/GRC.....	51	44	General.....	82	67
Set 1 power supply.....	47	36	Miscellaneous.....	84	69
Set 1 receiver-transmitter.....	48	39	Set 1 and Set 1 power supply.....	83	67
Control Box C-375/VRC:			Set 1 filament circuit.....	87	72
Controls and instruments.....	49	41	Interphone amplifier and power supply...	85	70
Description.....	14	11	Microphone M-20/U.....	18f	14
Operation.....	58	47	Minor components.....	17	12
Vehicular installation.....	24	23	Modification Kit MX-898/GR:		
			Components.....	96	82
			Purpose and use.....	95	82

	Paragraph	Page		Paragraph	Page
Monitoring:			Remote Control C-433/GRC:		
Operating instructions.....	39	36	Controls and instruments.....	51	44
Operation from Control Group AN/ GRA-6.....	59c	47	Facilities.....	42	36
Mounting Meat Base AB-15/GR equip- ment installation details.....	29	27	General.....	15c	11
Mounting MT-297/GR:			Remote power control and push-to-talk operation.....	74	57
Controls and instruments.....	45	36	Removing immersionproof cases.....	99	72
Description.....	13	9	Replacement of parts.....	38	72
Vehicular installation.....	23	19	Ringing circuit.....	7c	56
Nomenclature.....	2	1	Routing antenna cables.....	25	25
Operation:			Running spares.....	19	18
Miscellaneous application.....	61	49	Scope:		
Operation from Control Group AN/ GRA-6.....	59	47	General.....	1	1
Operation from interphone box.....	58	47	Theory of operation.....	62	50
Preliminary starting procedure.....	54	45	Trouble shooting.....	80	65
Routine starting procedure.....	55	45	Unit theory.....	75	58
Squelch and volume level adjustments..	56	45	Set 1:		
Stopping procedure.....	60	48	Antenna tuning.....	35	30
Tuning.....	57	45	Controls and instruments.....	48	39
Operational check.....	36	31	Filament-circuit trouble localization chart.....	87	
Operational procedure.....	53	45	Low-power operation.....	61a	72
Packaging:			Operation with generator and battery case.....	98	86
Auxiliary equipment.....	97	86	Operation with Generator D-8/GRC..	99	87
Data.....	7	5	Power supply.....	11, 76	8, 58
Panel operation.....	61b	49	Presetting.....	57c	46
Power distribution.....	66	51	Receiver-transmitter.....	10	7
Power supplies:			Receiving circuits.....	68, 78	52, 61
PP-109/GR and PP-112/GR. (See Set 1 power supply.)			Remote power control and push-to-talk operation from Control Group AN/ GRA-6.....	59g	48
PP-281/GRC and PP-282/GRC.....	16	12	Replacement of parts.....	92	76
Replacement of parts, Set 1.....	91	74	Transmitting circuits.....	69, 77	53, 58
Set 1.....	11	8	Tuning.....	57	45
Set 1 and Set 1 power supply.....	32	28	Unit theory.....	76-78	58-61
Set 1 controls and instruments.....	47	37	Stopping procedure.....	60	48
Trouble shooting Set 1.....	83	67	Storing of audio accessories.....	27	25
Presetting detented channels.....	57c	46	Storing of equipment not in use.....	38	35
Purpose of equipment.....	4	3	System diagrams.....	64	50
Push-to-talk operation:			System legend.....	65	51
Local.....	72	56	Tables:		
Local operation from Control Group AN/GRA-6.....	59d	47	Components.....	6	4
Operating instructions.....	40	36	Equipment performance checklist.....	81c	65
Remote.....	73, 74	56, 57	Vehicular installation units.....	8	6
Remote operation from Control Group AN/GRA-6.....	59f	48	Technical characteristics.....	5	3
Receiver-Transmitters RT-66/GRC and RT-68/GRC. (See Set 1.)			Telephone circuit.....	71	56
Receiver-transmitter:			Telephone communication operation from Control Group AN/GRA-6.....	59e	48
Set 1.....	10	7	Trouble shooting (localizing procedures)..	82-84	67-69
Unit theory.....	74, 78	57, 61	Unpacking instructions:		
References.....	app. I	90	General.....	21	19
Related radio sets.....	app. III	102	Vehicular installation.....	22	19
			Vehicular provisions for antenna mast bases.....	26	25

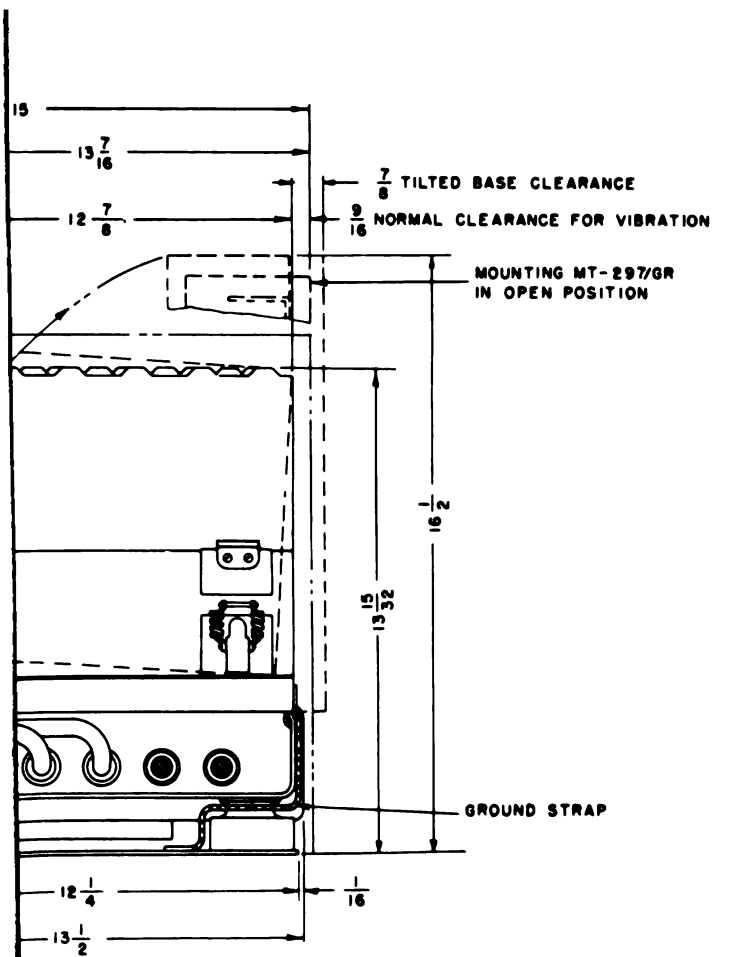

NOTES:

DIMENSIONS INDICATE SPACE REQUIRED FOR INSTALLATION.
 RADIO SET TO BE KEPT CLEAR FOR ACCESS TO CONTROLS.
 CLEARANCE OF $4 \frac{1}{16}$ MUST BE PROVIDED AT ALL JACKS
 FOR THE INSERTION OF RECEPTACLE CONNECTOR U-77/U
 UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE IN INCHES.


OPTIONAL SUBSTITUTE POWER SUPPLY PP-109/GRC
 OPTIONAL SUBSTITUTE POWER SUPPLY PP-281/GRC

DRIVER (SET 1)	POWER SUPPLY (SET 1)	AF AMPLIFIER	POWER SUPPLY (IN AMPLIFIER)	RF CABLE ASSEMBLY
GRC	PP-112/GR ^M	AM-65/GRC	PP-282/GRC ^M	CG-568/U
GRC	PP-112/GR ^M	AM-65/GRC	PP-282/GRC ^M	CG-530/U
GRC	PP-112/GR ^M	AM-65/GRC	PP-282/GRC ^M	CG-530/U

TM 291-5

(inside back cover) No. 7

10-10-1911

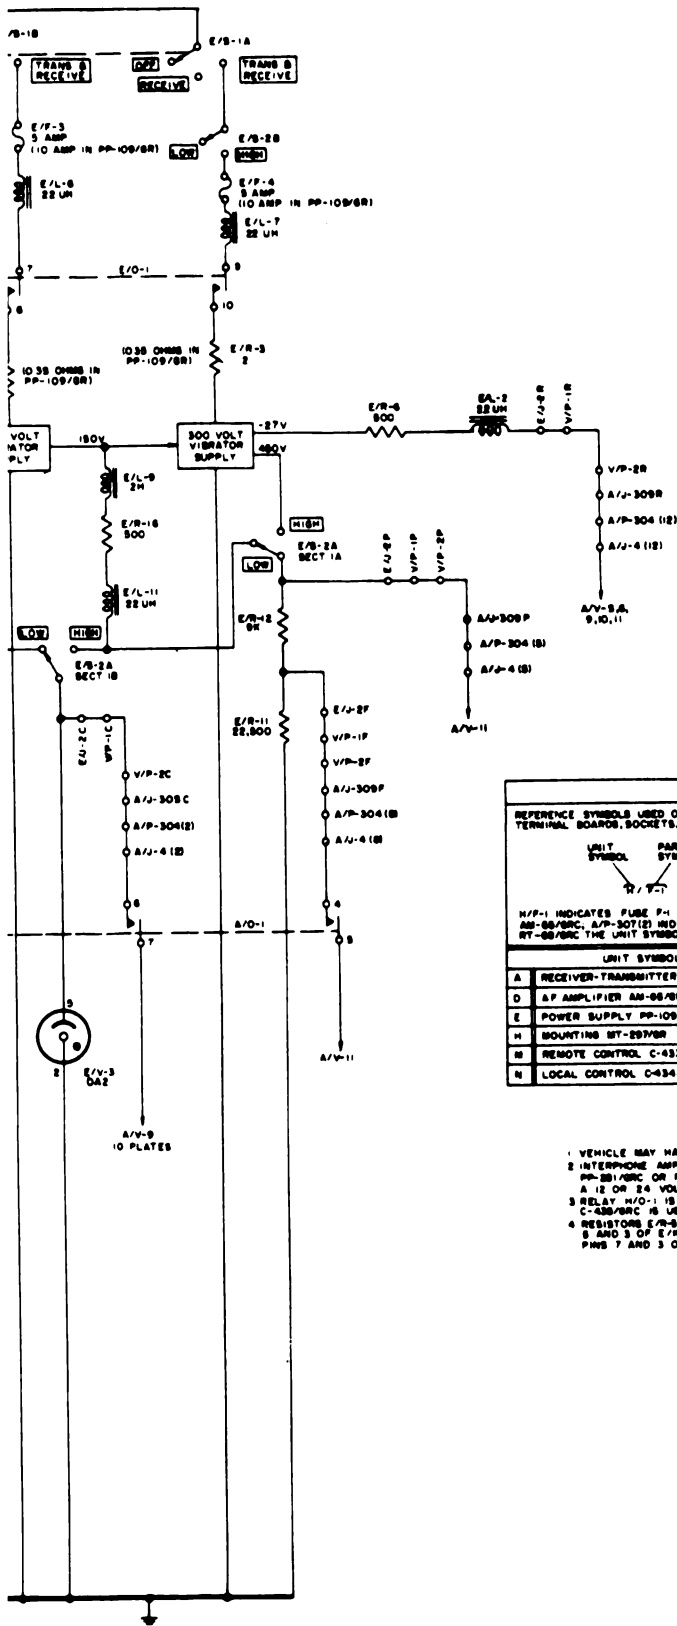

LEGEND

REFERENCE SYMBOLS USED ON THIS DIAGRAM INCLUDE A UNIT SYMBOL, AND IN THE CASE OF MULTIPLE CONNECTORS, TERMINAL SYMBOLS, SOCKETS, CORDS, ETC., A TERMINAL SYMBOL EXAMPLES FOLLOW:

UNIT SYMBOL	PART SYMBOL	UNIT SYMBOL	PART SYMBOL	TERMINAL SYMBOL	UNIT SYMBOL	PART SYMBOL	TERMINAL SYMBOL
A	RT-88/BRC	D	AM-88/BRC	1	H	ST-29/BR	2/P-307(B)

A/V-11 INDICATES FUSE F-1 IN MOUNTING ST-29/BR. DU-68 INDICATES TERMINAL 8 OF JACK J-6 IN AF AMPLIFIER AM-88/BRC. A/P-307(2) INDICATES TERMINAL 2 OF PLUS P-307 IN RECEIVER-TRANSMITTER RT-88/BRC, RT-87/47C, OR RT-88/BRC THE UNIT SYMBOL FOR EACH UNIT IS LISTED IN THE FOLLOWING TABLE:

UNIT SYMBOL AND UNIT SYMBOLIZED		UNIT SYMBOL AND UNIT SYMBOLIZED	
A	RECEIVER-TRANSMITTER RT-88/BRC, RT-87/BR, OR RT-88/BRC (DET.)	R	CONTROL BOX C-378/VRC
D	AF AMPLIFIER AM-88/BRC (INTERPHONE AMPL.)	T	HANDSET H-33/P/T
E	POWER SUPPLY PP-109/BR OR PP-112/BR (SET: POWER SUPPLY)	U	POWER SUPPLY PP-281/RC OR PP-282/BR
H	MOUNTING ST-29/BR	V	CORD CX-1211/U
M	REMOTE CONTROL C-433/BR	W	CORD CX-1213/U
N	LOCAL CONTROL C-434/BR	Y	CHEST SET GROUP AM/88A-8

- NOTES:**
- 1 VEHICLE MAY HAVE EITHER 12 OR 24 VOLT BATTERY
 - 2 INTERPHONE AMPLIFIER USES EITHER POWER SUPPLY PP-281/RC OR PP-282/BR DEPENDING ON WHETHER A 12 OR 24 VOLT BATTERY IS USED
 - 3 RELAY R/O-1 IS OPERATIVE ONLY WHEN CONTROL C-433/BR IS USED
 - 4 RESISTORS E/R-33, 34, AND 35 CONNECT BETWEEN PINS 8 AND 3 OF E/R-2 IN POWER SUPPLY PP-112/BR, BETWEEN PINS 7 AND 3 OF E/R-2 IN POWER SUPPLY PP-109/BR

—

—

—



RATOR

—

/P-1B



/P-1A

—

SYM

BOL

BOL

—

NIT S


TING

TE C


CON

SET F

+ -
BT-1
1 1/2 V
BA-





NS
ER
E
M
C
A
C

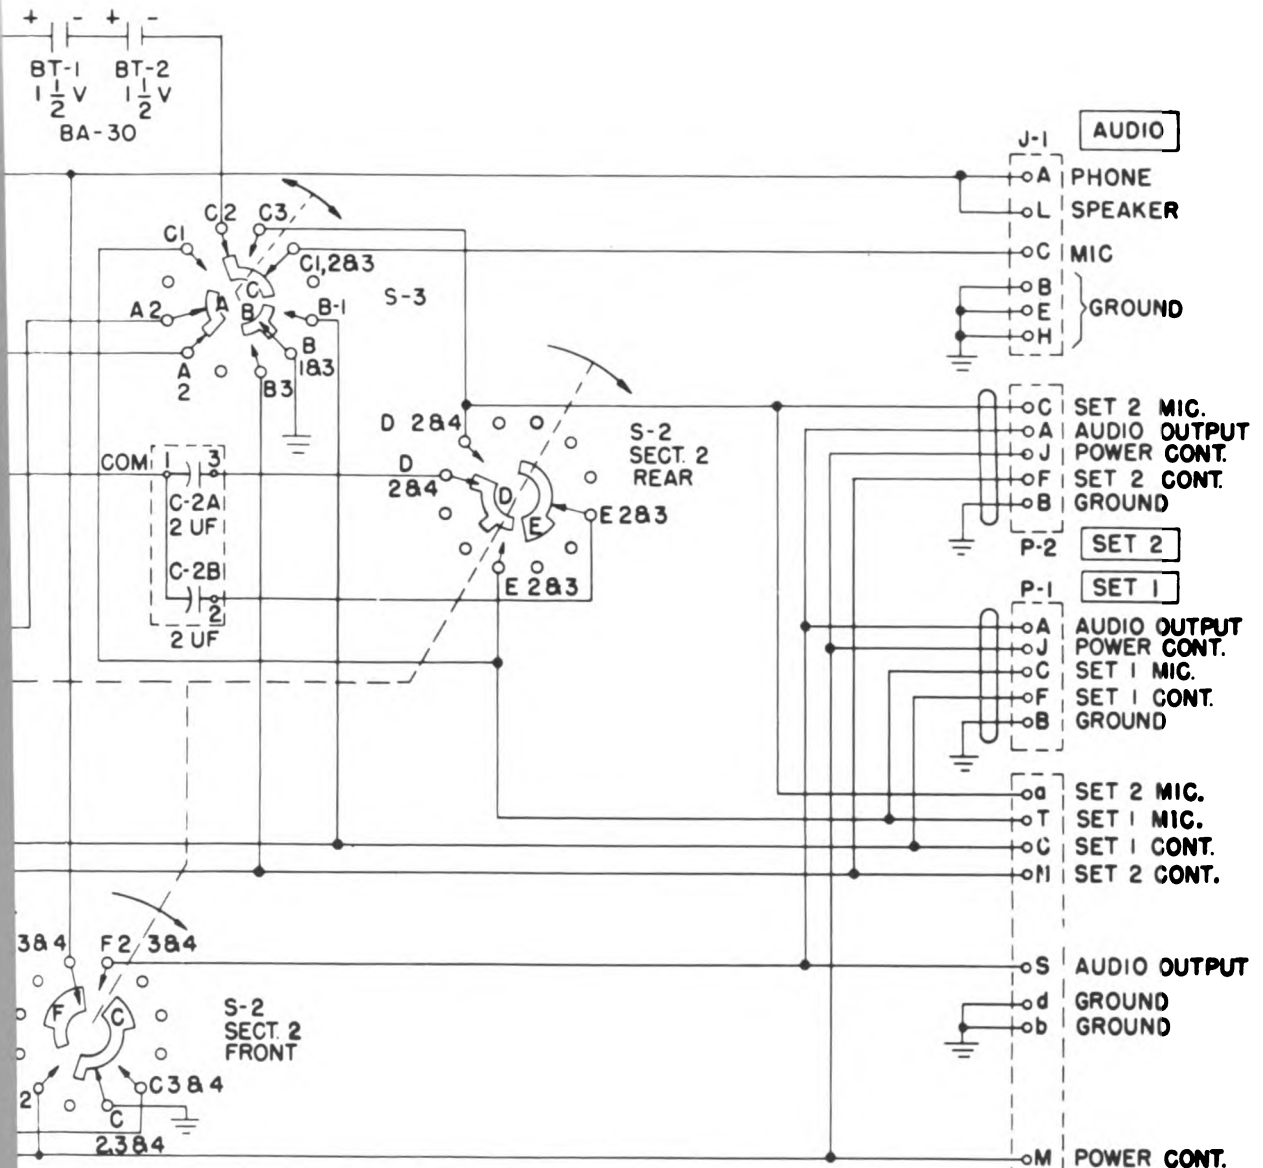

NS VIEWED FROM KNOB END OF SWITCH.
 EME COUNTERCLOCKWISE POSITION.
 TER POSITION.
 F WAFER SWITCHES ARE DESIGNATED BY
 AND, CONTACTS ARE DESIGNATED BY A
 MBER. THE LETTER INDICATES THE ROTOR
 CH THE CONTACTS COMPLETE A CIRCUIT;
 ATES THE SWITCH POSITION IN WHICH
 A COMPLETED CIRCUIT
 DE-ENERGIZED
 O-3 SHOWN WITH NO OPERATING VOLTAGE
 CHED BY THE PREVIOUS APPLICATION OF A
 E IN POLARITY TO THAT SHOWN ON COIL.
 + AND -) REFER TO VOLTAGE POLARITY
 NG ARMATURE TO OPEN CONTACT.


J-1, P-1 OR P-2

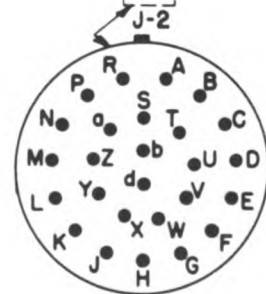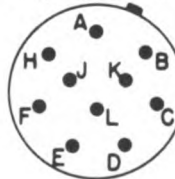

34/GRC, schematic diagram.

(inside back cover) No. 10


TM 284-91

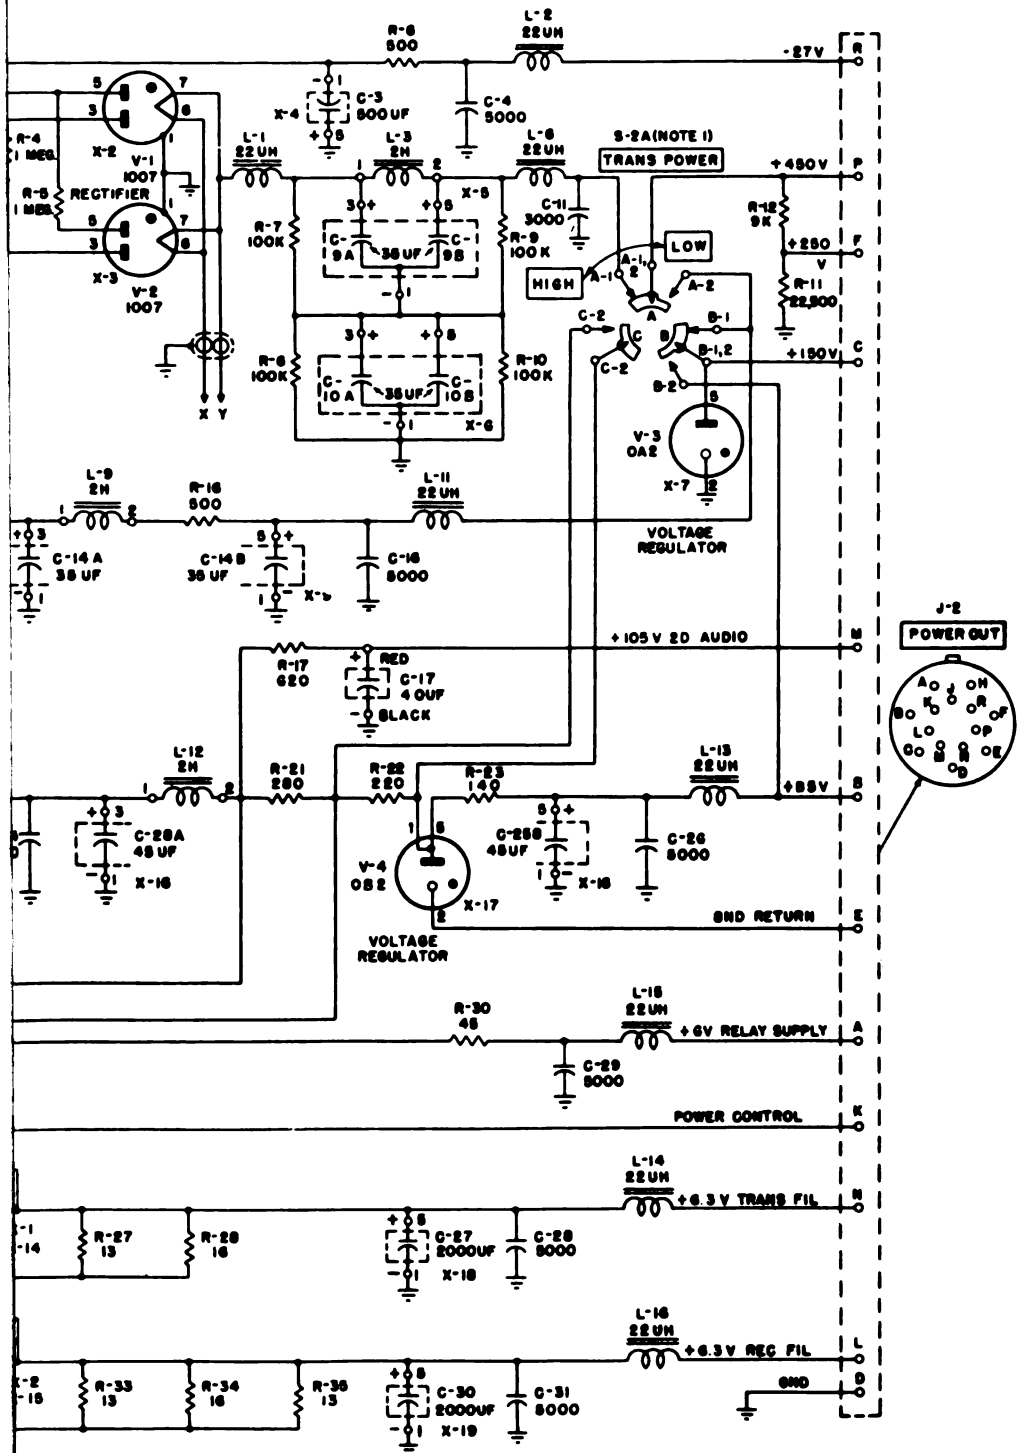

TM 5086-17

(inside back cover) No. 11


12/GR, schematic diagram.

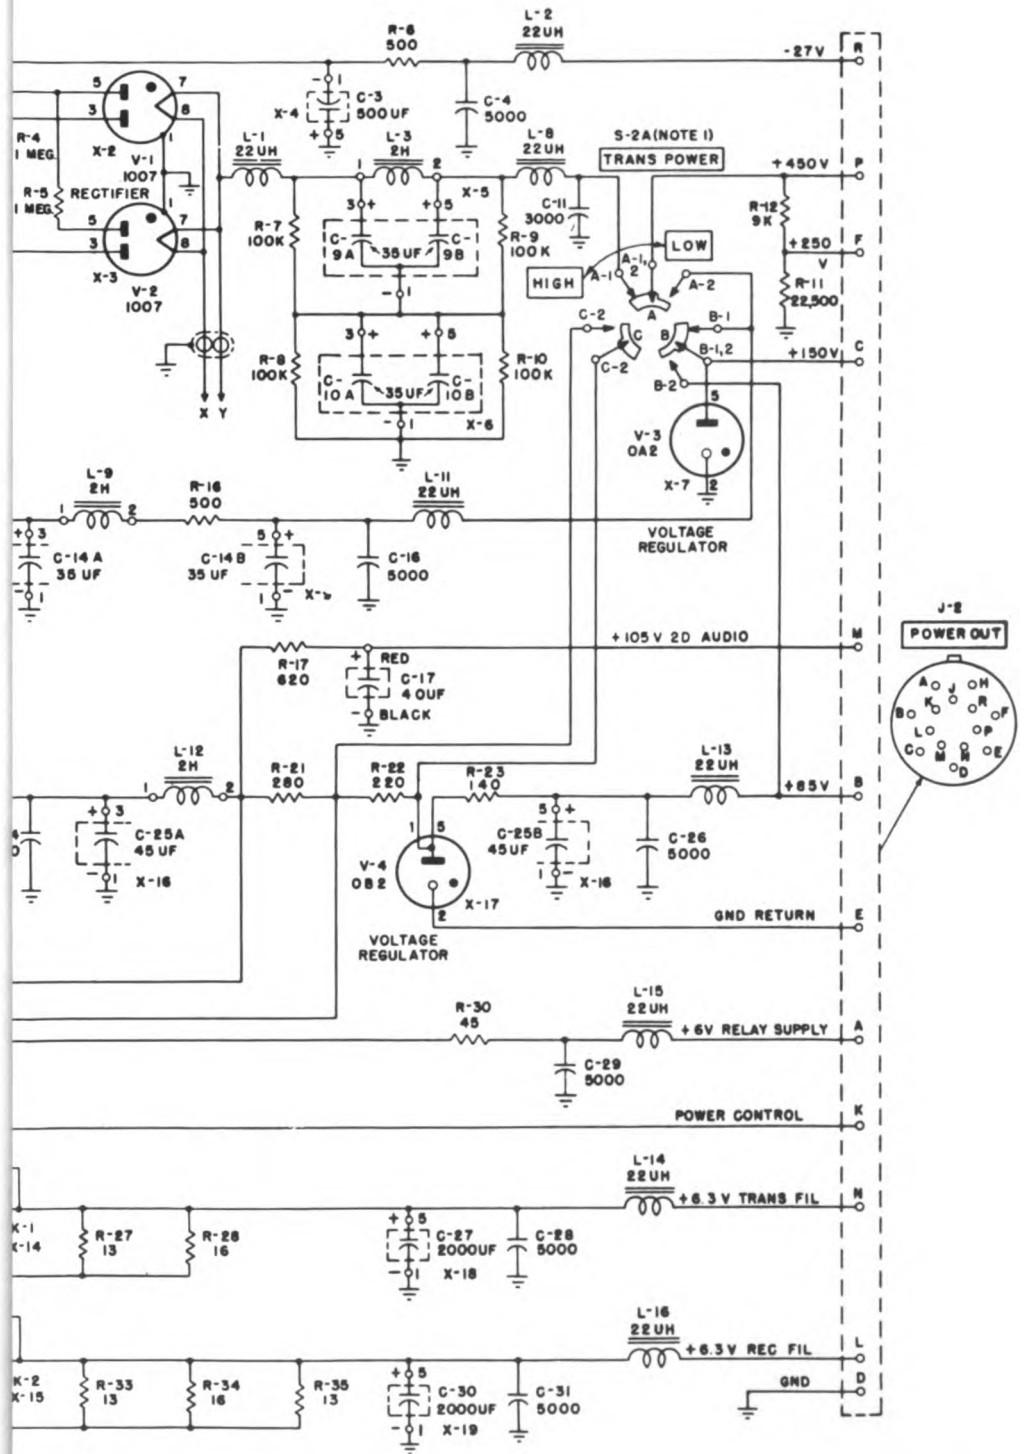

TM 8086-17

(inside back cover) No. 11


112/GR, schematic diagram.

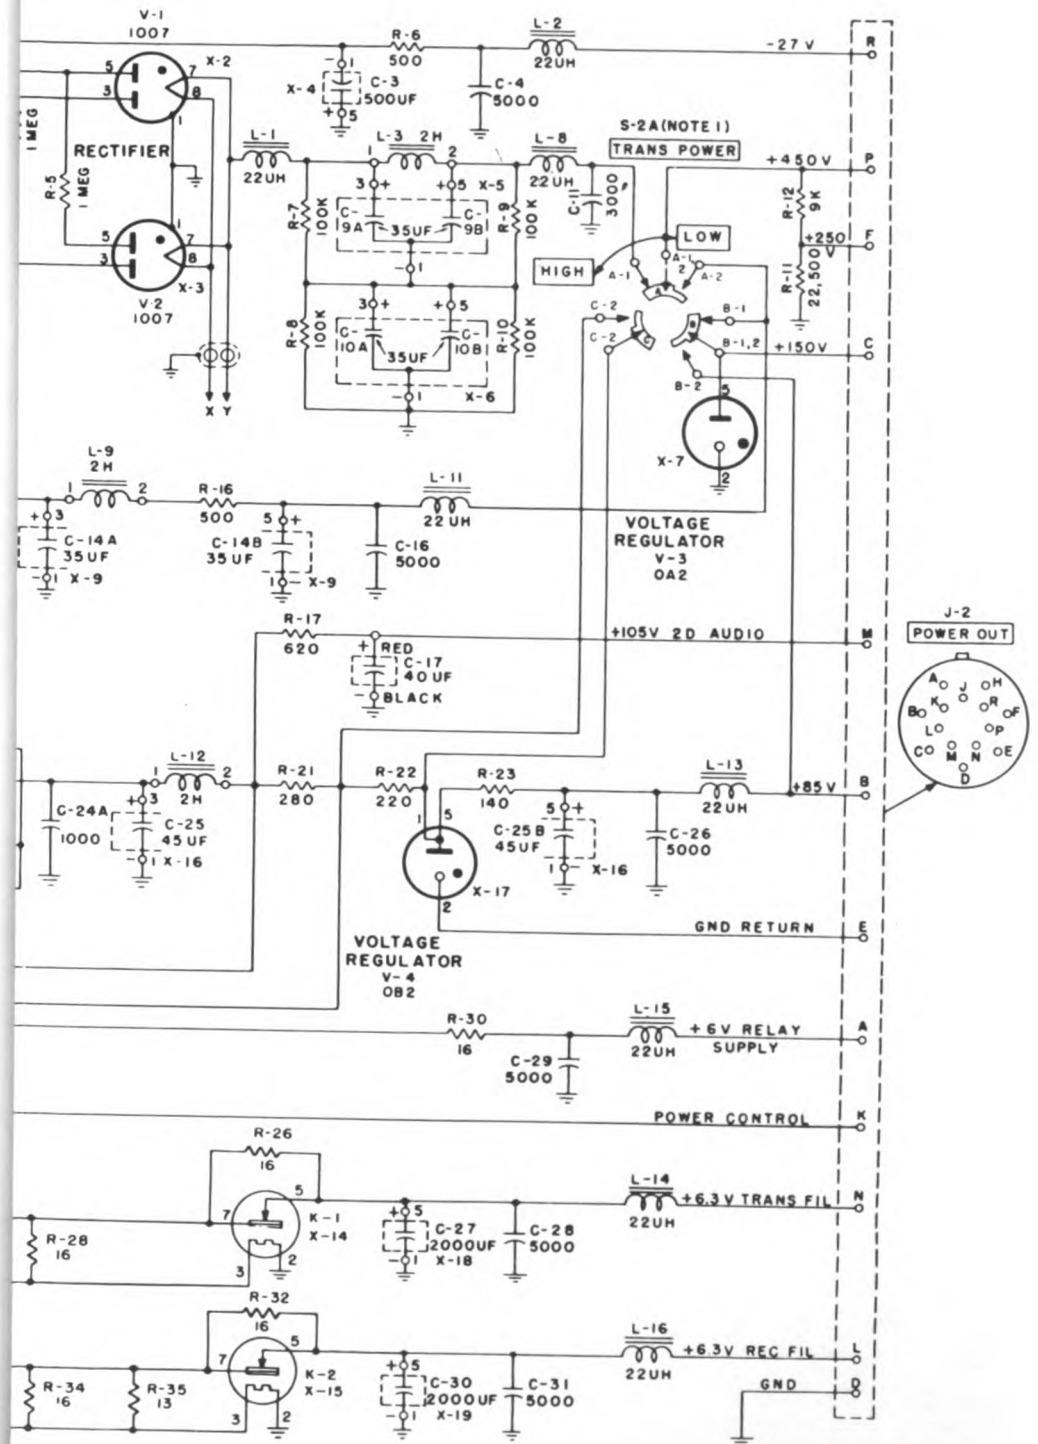


TM 5036-18

(inside back cover) No. 1


09/GR, schematic diagram.

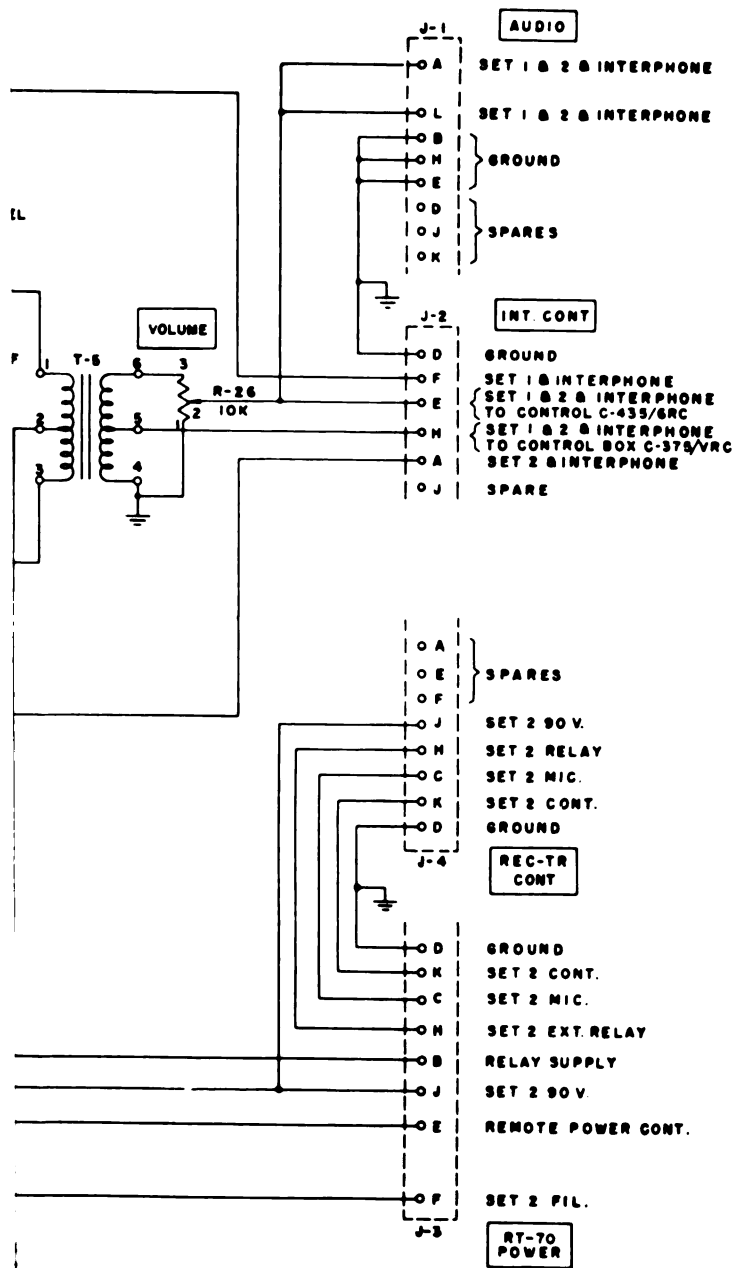

ISTORS
UUF.
D IN
FROM
XTREME
S
ETC.
YA
HRU
ME
ONTACT

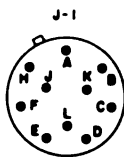

J-2, J-3, OR J-4

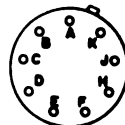




TM 8039-16

(inside back cover) No. 2

0 2 0 0

15 | 30 | 30 | 0

1

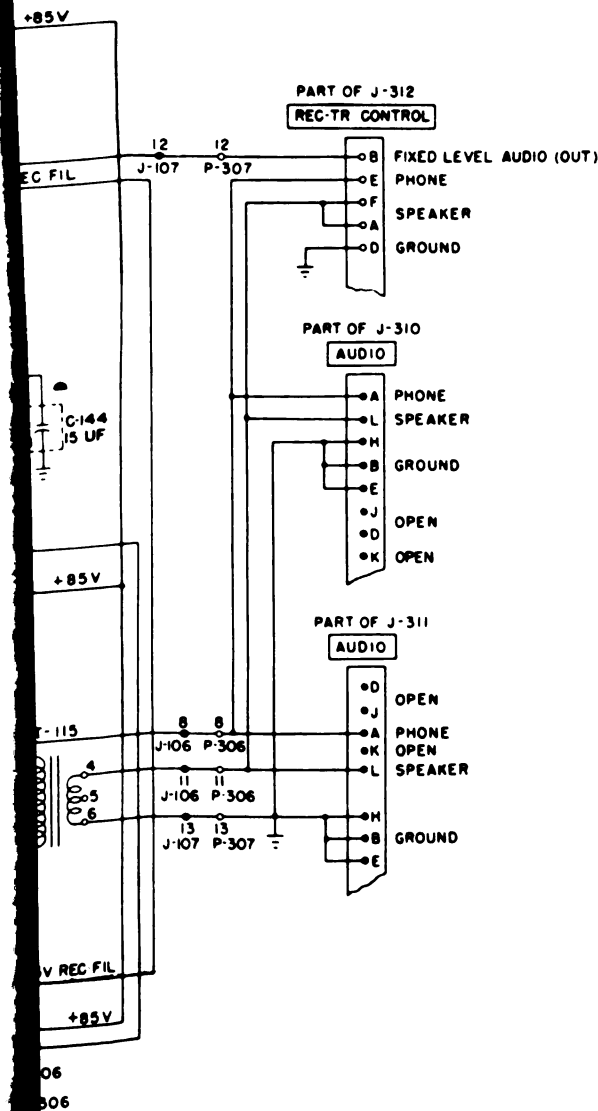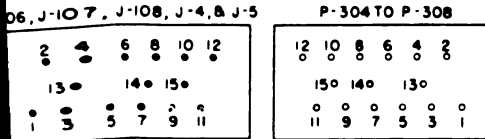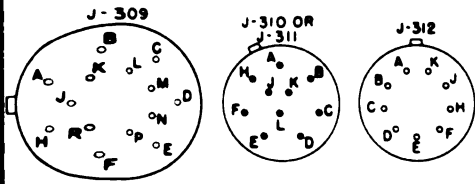

NOTES

1 CRYSTAL SWITCH ASSEMBLY CHART

XTAL POS NOS	CRYSTAL FREQ'S KC
1	
2	7775 000
3	8275 000
4	
5	8775 000
6	
7	6183 333
8	
9	6516 666
10	
11	6850 000
12	
13	7183 333
14	7516 666
15	
16	
17	

2 SWITCH S-301 IS VIEWED FROM PANEL SIDE AND SHOWN IN OFF POSITION. ROTOR SECTIONS ARE DESIGNATED BY LETTERS A, B, C, ETC., AND CONTACTS ARE DESIGNATED BY A LETTER AND A NUMBER. THE LETTER INDICATES THE ROTOR SECTION THRU WHICH THE CONTACTS COMPLETE A CIRCUIT, THE NUMBER INDICATES THE SWITCH POSITION IN WHICH THE CONTACT IS IN A COMPLETED CIRCUIT.

3 POTENTIOMETER R-302 IS A DUAL UNIT, ONLY 1 SECTION IS USED.

4 E-2K, E-2L, E-4M, E-6A, E-6B, E-7B, E-8G, E-9M, AND E-9J ARE TEST POINTS. NUMBER IDENTIFIES CIRCUIT SECTION ASSOCIATED, FOR EXAMPLE, E-2K IS ASSOCIATED WITH V-2, E-4M WITH V-4 ETC. LETTER INDICATES SEQUENCE.


5 1A, 1B THRU 9R ARE TIE POINTS ON RF CHASSIS. NUMBER IDENTIFIES ASSOCIATED CIRCUIT SECTION, LETTER INDICATES SEQUENCE.

6 UNLESS OTHERWISE SHOWN RESISTORS ARE IN OHMS, CAPACITORS ARE IN UUF.

7 THE VARIABLE CAPACITORS WITHIN EACH OF THE FOLLOWING GROUPS ARE GANGED:
 A- C-1B, C-1D, C-1F, C-1G, C-1J
 B- C-17A, C-17B, C-17C
 C- C-101B, C-101C, C-101E, C-101G, C-101J, C-101L

8 UNLESS OTHERWISE SHOWN RESISTORS ARE 1/2 WATT.



/GR
 /GR
 ASE AB-15/GR
 B/U
 1/U
 3/U
 1/U
 3/GR OR
 /GRC OR
 /GRC
 /GR

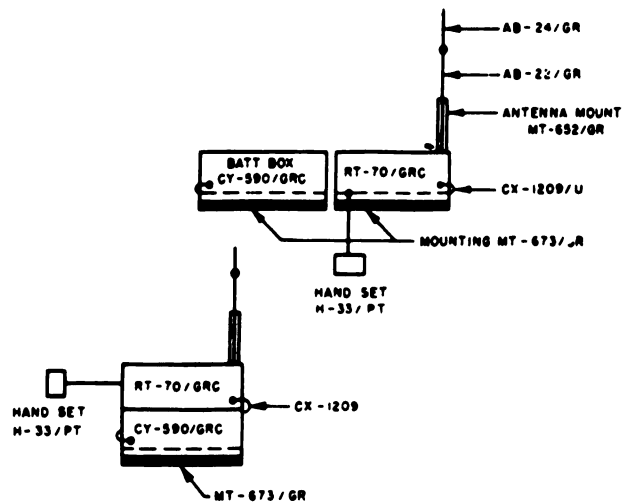

RADIO SET AN/PRC - 16

VRC-7

-281/GRC
 OR
 -282/GRC
 -300/GR

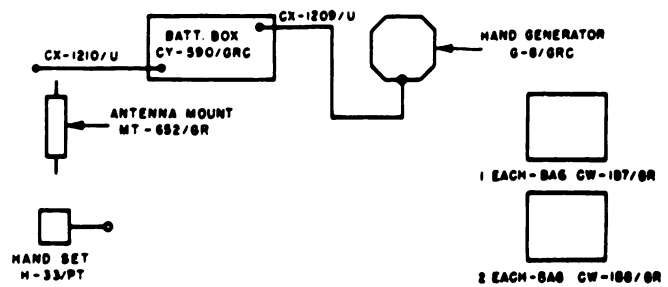

MODIFICATION KIT MX 898 / GR

ET

(inside back cover) No. 6

TM800-82

